

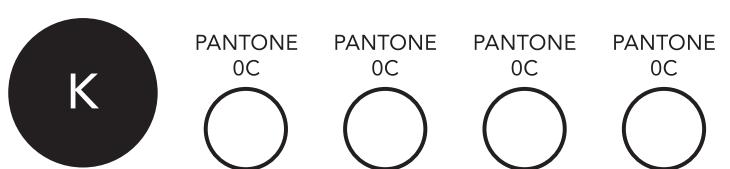


18000140\_IS

Designer: DF

Docket: 12-037-22

Factory: ZNT

PRINTING SPECIFICATIONS FOR SKU:  
印刷品颜色要求CARD DIMENSION  
卡片尺寸w (width): 297 mm  
h (height): 210 mm

正面

FRONT

**PACKAGE CONTENTS**  
Illustrations may vary from actual unit.

smart chime  
push-button  
adhesive tape  
1x CR2032 battery  
2x screws

**TOOLS REQUIRED**

philips head screwdriver  
flat head screwdriver  
safety goggles  
work gloves  
power drill  
1/16" (1.5mm) drill bit

**1 INSTALLATION**

- 1 Installing the smart chime**  
Plug the chime in the desired location.
- 2 Powering the push-button**
  - Remove the back by pushing in the tab on the bottom with a small flat-head screwdriver
  - Rotate the battery cover LEFT and remove it
  - Insert the battery POSITIVE POLE facing outward. Refer to figure below +
- 3 Testing**  
Temporarily position the push-button where it will be mounted. Press it to verify if the smart chime rings. If not, move the chime to a closer outlet and test again.
- 4 Mounting the push-button**
  - Option 1 - Double-sided tape
  - Remove the paper from both sides of the tape, apply it to the back of the button and mount onto a clean surface.
  - Option 2 - Screws
  - Remove the back by pushing in the tab on the bottom with a small flat-head screwdriver
  - Place the back on the door jamb and mark the two screw holes. Drill holes where you marked.
  - Align the back, fasten screws and snap the front of the push-button back on.

SMART CHIME INDICATOR LIGHT		
Light	State	Description
RED (solid)	Booting up or Wi-Fi error	May display until connected to Wi-Fi
RED (flashing)	Pairing mode	Will display until paired to the app
BLUE (flashing)	Connecting	Displays when attempting to connect to the app
BLUE (solid)	Successfully connected	Displays as long as the chime is connected to the app
OFF	Not connected	Cannot connect to the Wi-Fi or app after 20 minutes
PINK (solid)	Someone's ringing	Lights up for 10 seconds after a push-button is pressed

正面

FRONT

反面

BACK

**CONTROLLING THROUGH THE APP**

**CONTROL**

**Volume**  
4-step: 25% - 50% - 75% - 100%

**Mute options**  
Mute / Unmute

**DEVICE SETTINGS**

**History**  
Access full ring history.

**Indicator light**  
Customize how the chime indicator light behaves.

**Notifications**  
Customize how you would like to be alerted when the doorbell is rung.

**GENERAL SETTINGS**

**Delete or restore device**  
Restore factory settings to the device or remove it.

**TROUBLESHOOTING**

A = cause

B = solution

Chime doesn't ring when a push-button is pressed

A) Push-button battery is not installed correctly

B) Make sure batteries are installed according to the diagram inside the push-button.

A) Push-button battery is dead

B) Check the charge of the push-button battery and replace if necessary.

A) Chime is not receiving power

B) Make sure the plug-in chime has power.

A) Chime and push-button are not synced.

B) Follow the steps:

- Press and hold the function button on the chime until it sounds a "Beep-Beep".

- Press the push-button within 10 seconds. The chime will sound a "Beep-Beep" tone to indicate the push-button is synced.

- Press the push-button to ensure operation.

A) The transmission codes of the push-button and chime don't match.

B) Ensure the code of push-button and chime is consistent. Refer to "Code conversion" instructions.

Push-button battery seems okay, but the chime does not work after installation.

A) The chime and/or push-button is mounted on or near metal.

B) Metal reduces transmission range. Use 1/4 in. to 1/2 in. (6 to 13 mm) wood shims to move the chime or push-button away from the metal surface.

A) The chime is mounted near a concrete floor or wall.

B) Concrete may reduce transmission range. Move the chime away from the concrete surface.

A) The chime and push-button are installed too far apart.

B) Move either closer to the other.

The chime rings when not intended to.

A) The chime is receiving interference from another wireless device.

B) 2 options:

1. Convert the push-button and chime to 100M code. Press the push-button to sync.

2. Reset the chime and push-button.

- Remove the push-button battery. Wait 30 seconds.

- Press and hold the push-button for 10 to 15 seconds within 60 seconds after installing the battery into the push-button.

- Press and hold the function button on the chime until the chime sounds a "Beep-Beep-Beep-Beep".

**MANUAL CONTROL**  
No WiFi. No problem. Continues operating as a regular doorbell if internet connection is lost.

Volume  
Function button

Volume  
Function button</p