

Prisma

By babysense™

5" HD Split Screen Video Baby Monitor

User Manual

Wireless Digital Video Baby Monitor

Watch, Listen and Talk to Your Baby

Models: Prisma - 1 Camera
Prisma - 2 Cameras

For any product related question please contact us at:
support@babysensemonitor.com
www.babysensemonitor.com





Prisma 5" Split Screen

By babysense™

United Kingdom Authorised Representative

OBELIS UK | info@obelis.co.uk

Sandford Gate East Point Business Park Oxford OX4 6LB U.K.

Tel +44.1491.378012

European Authorised Representative

OBELIS s.a | email@obelis.net

Boulevard Général Wahis 53, 1030 Brussels, Belgium

Tel +(32) 2.732.59.54 | Fax +(32) 2.732.60.03


1. Warnings and Safety Instructions

Follow these safety precautions to prevent fire, injury or damage to the product.

Read and keep instructions: It is very important that you read all the safety and operating instructions before the FirstWatch Video Monitor is operated.

Please retain your purchase receipt as you will need to produce it if warranty service is required.

1.1 WARNINGS

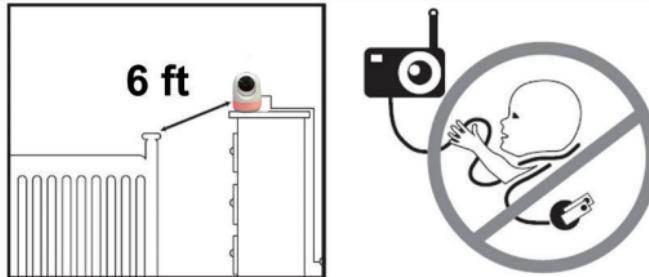

- **STRANGULATION HAZARD:** Children can become entangled in cords. Make sure the Baby Unit, Parent Unit and mains adaptor cables are kept out of reach of your baby and other young children at all times, at least 6 feet away.
- **CHOKING HAZARD:** This product contains small parts which may cause chocking. Exercise care when unpacking and assembling the product and keep the small parts away from children.
- **RISK OF SUFFOCATION:** Keep all packaging materials and protective foils out of reach of children.
- **DANGER FROM POWER CORDS:** To avoid possible danger from power cords, the cords should be secured and never be hung on or near the crib. Never place the Baby unit or Parent unit inside your baby's crib, bed or playpen.
- **DO NOT HANDLE ROUGHLY, DROP OR THROW:** FirstWatch video monitor is a high-quality electronic device which must be handled with care.
- This product is designed for INDOOR USE ONLY.
- **WATER AND MOISTURE:** The product should not be exposed to rain, moisture, or splashing. Never use or place the product in or near moisture or water.
- **THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION:** Your video monitor is designed to be an aid and should not be used as a substitute for responsible and proper adult supervision of a child.
- **POWER SOURCE:** This product should only be used with the AC power adapters supplied by the manufacturer, as included in this package.

- **VENTILATION:** This product should not be used on a bed, sofa, rug or similar surface that may block the ventilation or speaker openings, or be placed in an enclosed area, such as a bookcase or drawer that may impede air flow. Never cover the product with clothes, towels, blankets or any other item.
- **THIS PRODUCT IS NOT A TOY:** It should be kept out of children's reach.
- **KEEP AWAY FROM SOURCES OF HEAT:** This unit should not be exposed to direct heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat. The unit should not be left in direct sunlight.
- **BATTERY:** Before you use the product, we recommend you fully charge the battery of the Parent Unit, so that it continues to work if you disconnect it from the power supply to carry it to another location.
- **INSTALLATION LOCATION:** The installation location plays an important role in ensuring proper operation. Therefore, maintain a distance of at least 5 feet from other electronic equipment, such as microwave ovens or Wi-Fi routers, otherwise they could cause interference. If this occurs, move the baby and parent units to another location.
- **RANGE:** Range of all baby monitors is always measured in an open space. The actual range may be shortened due to environmental obstacles (such as concrete walls).
- **DAMAGE REQUIRING SERVICE:** This product should be serviced by qualified personnel only.
- **DO NOT TRY TO OPEN AND REPAIR THE PRODUCT:** If you have any problems with the product, please contact the authorized distributor.
- In case of unusual noises or smells originating from the device, immediately disconnect the product from the power outlet and contact authorized distributor.
- If the product becomes dirty, use a lightly damp soft cloth to wipe surfaces, taking care to not allow water into any openings.

IMPORTANT: FirstWatch Video Monitor is designed only for hearing the baby's voice and seeing the images of the baby. This product is not a medical device and should not be used as a substitute for responsible adult supervision. It is important that you regularly check on your baby personally.

1.2 Safety Instructions for AC Power Adapter

- The adapter should not be exposed to direct heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat.
- During continual use, the power adapters may become warm to the touch. This is normal and should not be a cause of concern.
- Examine intactness of the power cord and its plug.
- The adapter must be handled with care: do not handle roughly, drop or throw.
- When removing the power adapter from the wall outlet, hold and pull from the receptacle.
- Do not pull on the cable itself or bend the cable as that will put additional stress on the cable and could lead to damages.
- Do not touch the power adapter with wet hands or allow liquids to spill on it.
- Make sure the mains adaptor cables are kept out of reach of your baby and other young children at all times. To avoid possible danger from power cords, the cords should be secured and never be hung on or near the crib.

- Do not replace the plugs or cable on your power adapter. This product should only be used with the AC power adapters supplied by the manufacturer, as included in this package.
- Never cut, damage or bend the power cord.
- Do not put any objects on top of the power cord, which could cause overheating, damage, combustion and electrocution.
- Do not leave the power adapter connected to the wall outlet when it is not plugged into the Baby or Parent Unit.

WARNING:

- Do not replace the power cord with non-original substitutes. Improper connection may cause electrocution.
- Do not place the AC adaptor cable in a high wear and tear location. Never use a frayed or compromised cord.
- Intended for indoor use only.

1.3 Safety Instructions for Li-ion battery (Non removable pre-installed battery)

- Do not attempt to repair or adjust any of the electrical or mechanical functions of the unit.
- Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries.
- If a battery leaks, do not let the battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, and seek medical assistance.
- The battery should not be exposed to direct sunlight or heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat.
- Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.
- Use only the battery pack supplied with the product or the same type, sold by the manufacturer or its authorized distributors. Improper use or use of unapproved batteries may present a risk of fire, explosion, or other hazards, and may invalidate the warranty.
- If you believe the battery is damaged, remove product from the charger and stop using the product.
- Never use a damaged battery.

1.4 Information on disposal of product

Always dispose of your product (with the non removable pre-installed battery) at the end of their life in an environmentally responsible way and in accordance with your local waste disposal requirements.

All cardboard and paper packaging materials should be recycled in accordance with your local council waste regulations.

Thank you for choosing Babysense Video Monitor from Hisense Ltd.

2. Overview

2.1 Pack Contents

- Parent Unit x 1
- Baby Unit (Camera) x 1 (x2 in 2 camera model)
- AC Power Adapter x 2 (x3 in 2 camera model)
- Wall mounting screw set x 1 (x2 in 2 camera model)
- User Manual x 1

2.2 Parent Unit Overview



1. Power ON/OFF/SLEEP Button
2. Charging LED
3. Power LED
4. Volume Level LEDs
5. Volume Up/Down Buttons
6. MENU/EXIT Button
7. Night Light
8. Menu Navigation Keys; Pan & Tilt Navigation Keys
9. OK/ZOOM Button
10. Camera Switch Button
11. Split Screen Button
12. Talk Back Button
13. Microphone
14. Speaker
15. Antenna
16. Stand
17. Charging Port

2.2 Baby Unit Overview

- 18. Infrared LEDs
- 19. Lens
- 20. Light Sensor (Night Vision)
- 21. Power LED
- 22. Microphone
- 23. Speaker
- 24. Night Light
- 25. Temperature Sensor
- 26. ON/OFF Switch
- 27. Charging Port
- 28. PAIR Button (On the Bottom)



3. Getting Started

3.1 Powering the Baby Unit (Camera)

- Connect the Camera Power Adapter to the Charging Port (27) on the back bottom of the Baby Unit.
- Plug the AC power adapter into the wall outlet.
- Ensure the ON/OFF switch (26) is in the ON position.
- The unit will power on automatically and the green power LED (21) will light up.
- Use the ON/OFF switch (26) to turn the Baby Unit off.

NOTE: Only use the AC power adapter included in this package.

3.2 Powering the Parent Unit

- The adapter should not be exposed to direct heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat.
- Connect the Parent Unit Power Adapter to the Charging Port (17) on the left side of the Parent Unit.
- Plug the AC power adapter into the wall outlet.

- Press and hold the Power button (1) on the top left side of the Parent Unit for 5 seconds to turn the unit on.
- Once the Parent Unit is turned on, the green power LED (3) will light up and "FirstWatch" logo will display on the LCD.
- Press and hold the Power button (1) on the top left side of the Parent Unit for 5 seconds to turn the unit off.

NOTE: Only use the AC power adapter included in this package.

NOTE: The Parent Unit is supplied with a built-in rechargeable Li-ion battery (3.7V, 4000 mAh). We recommend whenever possible, keep the Parent Unit plugged in to keep the battery charged.

3.3 Charging the Parent Unit

- Connect the power adapter to the Charging Port (17) on the left side of the Parent Unit.
- Plug the AC power adapter into the wall outlet.
- Charging LED (2) on the Parent Unit will light up in RED to indicate charging.
- When the unit is turned on, the battery charging icon will appear at the top right corner of the LCD screen.
- Full battery indicator (4 fixed bars) will appear at the top right corner of the LCD screen, indicating the battery is fully charged. The charging LED (2) will turn red while the battery is charging. The charging LED (2) will turn green once the battery is fully charged.

NOTE: Before the first use or after a long product storage, it is recommended to fully charge the Parent Unit prior to operating the monitor. It takes approximately 8 hours to fully charge the battery.

NOTE: The monitor can be operated normally during the charging process.

NOTE: Low Battery Warning - The battery icon turns red on the LCD screen to indicate that the battery is low. The warning is accompanied with an acoustic beep sound, indicating that the battery needs to be recharged.


* Alert Volume can be adjusted in the Parent Unit menu, see details in the section "Warning Alert Volume Setting".

3.4 Set Up

- Once both the Baby and Parent Units are switched on, the display on the Parent Unit will show the video captured by the Baby Unit(s).
- Baby Unit(s) are paired to the Parent Unit when supplied. There is no need to pair the units again unless the Baby Unit loses its link with the Parent Unit. To renew the pairing of your units or pair a new/additional Baby Unit, follow the procedure described in "Section: Pairing the Baby Unit (Camera) with the Parent Unit".
- The Baby Unit should be placed at least 6 feet away from the baby's crib on a flat surface. Alternatively, it can be wall mounted.
- Never place the Baby Unit inside the crib, bed or playpen.
- Make sure the unit and cords are out of reach of the baby and other young children.**
- To avoid a strangulation hazard, the power cords should be secured and never hung on the crib or near the baby.**
- Place the baby monitor in a place where the air can circulate freely and avoid blocking the ventilation and speaker openings.
- Aim the camera (s) to best optimize the viewing area: Select a location for the camera that provides a clear view of the area you want to monitor, which is free from dust, and is not in line-of-sight to a strong light source or direct sunlight. Avoid installing the camera where there are thick walls or obstructions between the camera and the monitor.
- To use your Parent Unit and Baby Unit together, you must be able to establish a radio link between them; the range may be affected by environmental conditions/obstacles (See more details in Troubleshooting Section - "Interference or poor reception")

4. Operating the Monitor

4.1 Menu Icon Overview

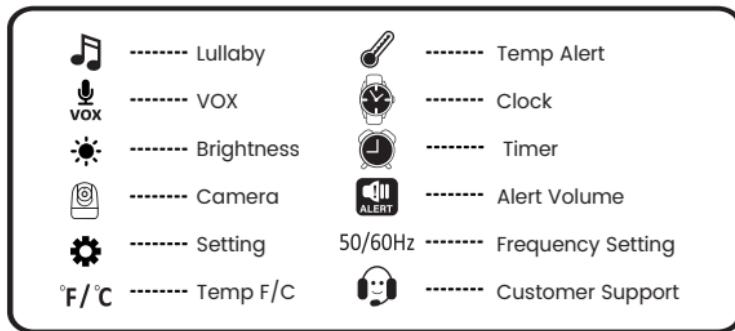


4.2 Lullaby & White Noise Setting

You can soothe your baby to sleep by playing 5 pre-programmed lullabies from the Baby Unit.

The monitor also features White Noise, which is an effective way to soothe a crying infant and lull your newborn to sleep. The Lullaby and White Noise features are controlled remotely from the Parent Unit.

1. Press  to access the menu, choose  and press 
2. Select the lullaby you want to play.
3. Navigate with  to select the desired duration and music volume
4. In order to stop the lullaby playback, select 
5. Press  to exit the menu

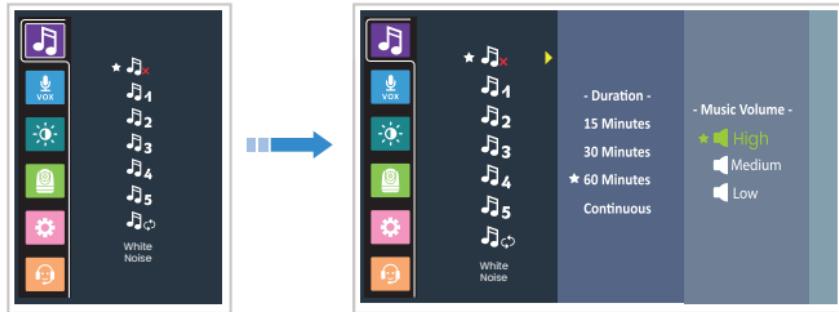

NOTE: Once the lullaby function is turned on, the lullaby icon will be displayed on top of the LCD screen.

The lullaby default setting is OFF.

When selecting the loop mode only the 5 melodies are played; the White Noise is excluded.


4.3 VOX Mode

When using the VOX function, the sound and video transmission will stop (standby mode) if the Baby Unit does not register any sound within 30 seconds.

While in standby mode, the LCD screen turns off. Once the Baby Unit registers a sound, louder than the set sensitivity level, it will automatically start transmitting the signal (sound and video) to the Parent Unit and the LCD screen will turn on.

To change the VOX Level please follow the instructions below:

1. Press  to access the menu, choose  and press 
2. Navigate with  to select the desired vox level.

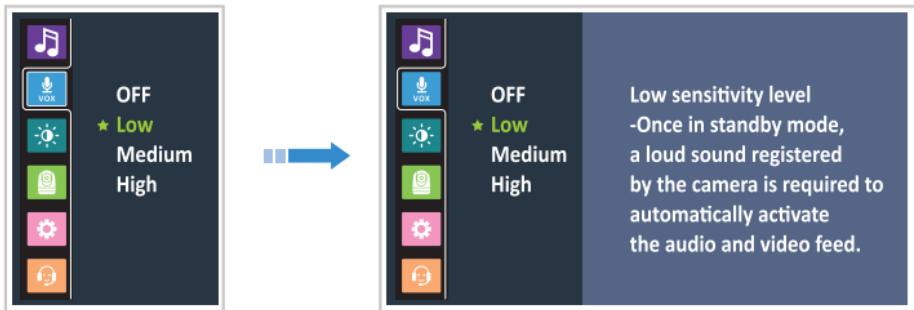

VOX - LOW - Low sensitivity level - higher sound level is required to reactivate the transmission

VOX - MEDIUM - Medium sensitivity level - medium sound level is required to reactivate the transmission

VOX - HIGH - High sensitivity level - low sound level is required to reactivate the transmission

VOX - OFF - Constant transmission - no standby mode.


NOTE: To resume the video and audio signal manually on your parent unit when VOX function is on, briefly press any key on your Parent Unit.

NOTE: VOX default setting is OFF.

When VOX Mode is active together with SCAN Mode, sound detected from either camera will wake the display and show the respective camera.

4.4 Brightness Adjustment

1. Press  to access the menu, choose  and press 
2. Navigate with  to select the desired brightness
3. Press  to exit the menu

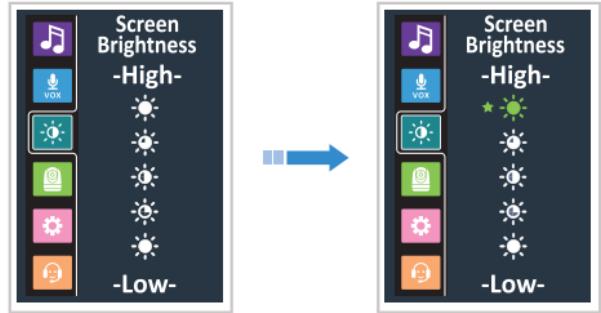

4.5 Pairing the Baby Unit (Camera) with the Parent Unit

The Baby Unit is paired to the Parent Unit when supplied. There is no need to pair the units again unless the Baby Unit loses its link with the Parent Unit. To renew the pairing of your units or pair a new/additional Baby Unit, follow the procedure below. If unsuccessful, please repeat the pairing process:

NOTE: Before you begin pairing, make sure to have the Baby and Parent Units side by side and turned on.

1. Press  to access the menu, choose  and press 
2. Navigate with  to select the camera you want to pair and press 
3. Press and hold the Pair Button at the back of the camera until the pairing process is complete
4. Press  to exit the menu



4.6 Deleting the Baby Unit (Camera)

1. Press  to access the menu, choose 
2. Navigate with  to select DELETE option
3. Navigate with  to select the camera you want to delete
4. Navigate with  to select DELETE and press 
5. Press  to exit the menu



4.7 Temperature Scale Setting

The temperature reading from the temperature sensor (25) at the back of the Baby Unit will be displayed on the top of the screen. To switch between °F (Fahrenheit) and °C (Celsius) follow the below instructions:

1. Press  to access the menu, choose  and press 
2. Navigate with  to select the desired scale
3. Press  button to confirm
4. Press  to exit the menu



NOTE: The monitor features a built-in automatic temperature alert. The monitor will alert (visual indication) when the temperature in baby's room is too high (90°F and higher) or too low (55°F and lower).

NOTE: Make sure the temperature sensor is not positioned too close to the camera body as it may affect the correct temperature reading. It is recommended to stretch out the sensor, so it is as far away from the camera body as possible. Also, it is recommended to place the camera in an area where there is good air circulation and not in a closed cornered area where the temperature tends to be higher.

4.8 Temperature Alert Setting

This function is to alert if the temperature in baby's room is too low or too high.

NOTE: The temperature alert default setting is: <15 °C/59 °F and >31 °C/89 °F.

To change the temperature alert levels, please follow the below instructions:

1. Press  to access the menu, choose  and press 
2. Navigate with  to select  and press 
3. Navigate with  to select the desired option and temperature and press 
4. Press  to exit the menu

NOTE: If the OFF option is selected for Alerts then, in case of high/low temp warning, there will be no acoustic notification heard and only a visual notification seen.



4.9 Time and Time Format Setting

This function allows you to choose the desired time format: 12H or 24H and set your time.

1. Press  to access the menu, choose  and press 
2. Navigate with  to select  and press 
3. Navigate with  to select the desired format, and set the time
4. Press  button to confirm
5. Press  to exit the menu



4.10 Timer Setting

1. Press  to access the menu, choose  and press 
2. Navigate with  to select  and press 
3. Navigate with  to select the desired time
4. Press  button to confirm
5. Press  to exit the menu



4.11 Warning Alert Volume Setting

This setting controls the volume of an audio “beep” sound alerting when the Parent Unit is low on battery, High/Low Temp alert or out of range (no connection to Baby Unit). You can set a lower volume level during the night and higher level during the day.

1. Press  to access the menu, choose  and press 
2. Navigate with  to select  and press 
3. Navigate with  to select the desired alert volume
4. Press  button to confirm
5. Press  to exit the menu



NOTE: Selecting the OFF option will mute all alerts. In case of low battery, high/low temp or out of range, there will be no acoustic notification heard.

4.12 Frequency Setting

This function allows you to choose desired frequency format 60Hz (for US) or 50Hz (for EU).

The screen may flicker in some lighting environments and changing the Frequency Setting helps lower the flickering effect.

1. Press  to access the menu, choose  and press 
2. Navigate with  to select 50/60Hz and press 
3. Navigate with  to select the desired frequency
4. Press  button to confirm
5. Press  to exit the menu



4.13 Power Saving Mode

This function allows you to conserve battery power.

1. Press  to access the menu, choose  and press 
2. Navigate with  to select Power Saving and press 
3. Navigate with  to select ON/OFF
4. Press  button to confirm
5. Press  to exit the menu



4.14 Volume Adjustments

- Press the VOLUME UP/DOWN buttons (5) to increase/decrease the sound coming out of the parent unit.

NOTE: In normal use, it is recommended to set the volume at level 3 and below. Higher volume levels are intended for loud/noisy environments.

NOTE: If the volume on the Parent Unit is set too high and the Baby and Parent Units are close to each other, a high-pitched noise may be heard (also known as feedback or static noise).

4.15 Night Light

This monitor features a night light integrated into the Baby Unit (24), allowing you to remotely activate a comforting glow to baby's room. There are 3 light levels (from low to high) and 6 colors to choose from.

- Press the  button on your Parent Unit to choose the desired color and light intensity. You may also select the Rainbow mode where the colors will automatically change between all 6 colors, at the selected intensity and speed.

NOTE: The Night Light status icon will be displayed on top of the LCD screen.



4.16 Zoom Mode

This baby monitor features two-zoom levels: x2 and x4.

1. Press the  button once to activate “x2” zoom option
2. Press the  button twice to activate “x4” zoom option
3. Press the  button again to exit zoom option

NOTE: This function is not available when SPLIT SCREEN mode is ON.

4.17 Switching between the paired Baby Units (Cameras)

- To switch between paired cameras – briefly press the CAMERA SWITCH button **(10)** on your Parent Unit.

NOTE: This function is only available when two or more cameras are paired.

4.18 SCAN Mode - Automatic switching between the paired Baby Units (Cameras)

You can set the SCAN (loop) mode and each paired Baby Unit will be displayed on the screen for 15-20 seconds and then the screen will automatically change to the next paired Baby Unit.

- Press and hold the CAMERA SWITCH button **(10)** to activate the automatic SCAN mode. A “SCAN MODE ON” message will appear on the screen and a loop sign will appear next to the camera number on the top of LCD screen.
- Press the CAMERA SWITCH button **(10)** to deactivate the Scan mode

4.19 Split Screen Setting

You can see images from two Baby Units side by side on your Parent Unit by enabling the SPLIT SCREEN setting.

1. Press Split Screen Button **(11)** to activate Split Screen Mode
2. Press Split Screen Button **(11)** to deactivate Split Screen Mode

NOTE: This function is only available when two or more cameras are paired.

NOTE: If 4 cameras are paired and Split-Screen Mode is selected then cameras 1 & 2 will be seen in one Split-Screen view and cameras 3 & 4 will be seen in the next Split-Screen view.

4.20 Talk to Baby

- Press and hold the Talk Back Button (12) and speak into the Microphone (13) to talk to your baby or partner in the baby's room via Baby Unit.
- Release the button when you are finished talking.

NOTE: While the "Talk to Baby" function is in use, there is no possibility to hear the sounds from the Baby Unit. Releasing the talk button allows one to hear the sounds from the baby's room again.

4.21 Parent Unit Screen ON/OFF (Audio only mode)

- Briefly press the POWER button (1) to turn the LCD screen ON/OFF

5. Maintenance

All of the following maintenance procedures should only be performed when Baby and Parent Units are unplugged and off.

- Clean the surfaces of the Baby and Parent Units with a soft, fluff-free cloth.
- Never use cleaning agents or solvents.
- If the units become dirty, use a lightly damp cloth to wipe surfaces, taking care not to allow water into any openings.

6. Troubleshooting

Problem	Possible cause/solution
No reception on the Parent Unit	<ul style="list-style-type: none">• The power adapters may not be properly connected.• Ensure that the Baby and Parent Units are ON.• Adjust the monitor antenna to vertical position.• Make sure the Baby and Parent Units are not far away from each other.• Baby and Parent Units may not be properly paired. Follow PAIRING instructions.
Interference or poor reception	<ul style="list-style-type: none">• Move the Baby Unit closer to Parent unit.• Use of other 2.4GHz products, such as wireless networks (Wi-Fi routers), Bluetooth systems, or microwave ovens, may cause interference with this product, so keep the baby monitor at least 5ft (1.5m) away from these types of products or turn them off if they appear to be causing interference.• The Baby or Parent Units may be too close to metal objects.• The battery power may be too low.
Image frozen on the Parent Unit	<ul style="list-style-type: none">• Restart the Baby Unit (unplug the power adapter from the wall outlet, wait for approx. 5 seconds and plug it back into the wall outlet).

Problem	Possible cause/solution
A high-pitched sound is heard from the units (feedback, static)	<ul style="list-style-type: none"> The Baby Unit and Parent Unit may be too close to each other. Move them further apart. The volume on the Parent Unit may be set too high. Lower the volume.
Cannot hear the baby sounds on the Parent Unit	<ul style="list-style-type: none"> Volume setting on the Parent Unit may be too low. Increase the volume. Battery power may be too low. Recharge the battery.
Background noises	<ul style="list-style-type: none"> In a quiet environment, surrounding the Parent Unit, decrease the volume on your Parent Unit to level 3 and below. In a loud environment, surrounding the Parent Unit, increase the volume to the maximum level
Picture is black and white	<ul style="list-style-type: none"> Automatic Night vision mode may be on. Increase lighting around the camera to force monitor out of night vision mode.
Lines/marks across the screen	<ul style="list-style-type: none"> Camera Lens is dirty. Follow the Maintenance procedure. Confirm that power adapters are properly connected.
The rechargeable battery will not charge, or no charge light shows	<ul style="list-style-type: none"> The power adapter may not be properly connected. Switch to another wall outlet. Switch between the Baby Unit and Parent Unit power adapters.

IMPORTANT: If the above troubleshooting guide did not help you solve your problem, please contact our customer service via:

Email - support@babysensemonitors.com

Toll Free Number - (833) 568-2229 (USA ONLY)

Telephone Number - (+972) 3-9566604 (INTERNATIONAL)

7. Specifications

Product Model	<ul style="list-style-type: none">• NVBM50
Frequency	<ul style="list-style-type: none">• 2.4GHz FHSS
Type of Modulation	<ul style="list-style-type: none">• GFSK
Data Rate	<ul style="list-style-type: none">• 4 Mbps
Channel Bandwidth	<ul style="list-style-type: none">• 3.5 MHz
Transmission Range	<ul style="list-style-type: none">• Up to 980 feet / 300 meters (open space – no obstructions)
Input Voltage	<ul style="list-style-type: none">• 5V, 1.2 A
Power Adapter	<ul style="list-style-type: none">• Input: 100-240VAC 50 / 60Hz, 200mA Max;• Output: 5V, 1.2A;
LCD Screen	<ul style="list-style-type: none">• 5" TFT LCD (1280*720 pixels)
Rechargeable battery (pre-installed in Parent Unit)	<ul style="list-style-type: none">• Model: YB905560• 3.7V, 4000 mAh
Operating time with battery fully charged (Parent Unit) * It takes about 8 hours to fully charge the battery.	<ul style="list-style-type: none">• Approx. up to 20 hours (VOX on)• Approx. up to 15 hours (Power Saving on)• Approx. up to 12 hours (Monitor on)
Transmitting Power	<ul style="list-style-type: none">• 18dBm
Image sensor type	<ul style="list-style-type: none">• 1/4.5" Color CMOS
IR LED Type	<ul style="list-style-type: none">• 940nm
Operation Environment	<ul style="list-style-type: none">• Indoor use only; Temperature: 32-104°F / 0-40°C• Humidity: 5% to 90% rh. (relative humidity)

8. FCC Statements

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines.

This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

9. IC Statements

This device complies with Industry Canada license-exempt RSS standard(s):

Operation is subject to the following Two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

10. Warranty Terms

We take quality very seriously. This is why all of our products come with a one-year warranty from the original purchase date against defects in workmanship and materials. If you have warranty or support issues, please contact our customer service.

IMPORTANT:

Please retain your purchase receipt and attach to the back page of this user manual as you will need to produce this if warranty service is required.

11. Customer Support

If you have any problems setting up or using this product, you will find useful tips and information in the Troubleshooting section of this user guide. If you have any further questions about using the product after reviewing the resources above or would like to purchase replacement parts or accessories, please contact us via:



NOTE: You can always find our contact details in the setting menu in your Parent Unit.

1. Press to access the menu, choose and press
2. Press to exit the menu

Prisma

By babysense™

*5" HD Split Screen
Video Baby Monitor*



Made by **Hisense Ltd.**
27 Shaked St. Hevel Modi'in
Industrial Park,
7319900 ISRAEL
Tel +972-3-9566604
www.hisense.co.il

www.babysensemonitor.com