

User Manual

Portable Wireless Speaker

Model:BB-A01



CONTENTS

1. Matters Needing Attention	1
2. Precautions for the Charging	1
3. Speaker Connection.....	2
4. Technical Specifications	3
5. FAQ	3
6. Features and Operation	4
7. Contact Us	7

Matters Needing Attention

In order to use the player correctly and ensure that performs well, please read and observe carefully:

- ① Do not hit the host severely.
- ② Do not touch benzene, thinners, and other chemicals. Please keep away from strong magnetic and electric fields.
- ③ Please avoid direct light or heating appliances.
- ④ Do not disassemble, repair, or modify by yourself.
- ⑤ Please sort and properly dispose of waste packaging, batteries, and old electronics.
- ⑥ Do not expose the product to rain or damp rings to prevent fire or electric shock.

Precautions for the Charging

- ① Insert one end of the power cord into the [5V]socket of the machine, and insert the other end of the USB into a matching plug or computer. The "red light" is on when charging, and it goes out when it is fully charged.
- ② It is recommended that the product try not to play while charging, so as not to charge for a long time and shorten the battery life.
- ③ Do not put water containers next to the charger, so as to avoid water splashing and causing a short circuit of the charger, resulting in overheating, leakage, and malfunction.
- ④ Do not put heavy objects on the power cord or try to modify the power cord, otherwise it may cause electric shock or fire.
- ⑤ When charging, please use a charger not exceeding 5V/2A, otherwise it may shorten the battery life or damage the machine.
- ⑥ The speaker has a built-in charging protection circuit, which can be connected to a computer or charger for a long time, about 4 hours fully charged.
- ⑦ When the battery power is low, the system will automatically shut down. Please charge in time. If you do not use the machine for a long time, please charge it at least once a month to protect the battery and prolong its life.

1. Bluetooth Connection

- a. After turning on the machine, press the "M" button to select Bluetooth mode (Bluetooth mode is turned on by default). The screen will display "BLUE" and flash, indicating that the machine is waiting for pairing.
- b. Turn on the Bluetooth of your phone, find "**BB-A01**" in the list, and select pairing. After successful pairing, the machine will prompt a tone.

2. AUX Connection

Press the "M" button to select AUX mode and use a 3.5mm auxiliary cable to connect to the machine.

3. USB Connection

When the USB stick is inserted, it defaults to USB playing mode. It can read and play the MP3 audio format.

Please note: The music format only supports MP3.

4. TF Card Connection

When the TF card is inserted, the default is the TF Card playing mode.

Please note: The music format only supports MP3.

Technical Specifications

Main engine Power supply	7.4V	Charging	5V 2A
Bluetooth version	5.3	Power	2*20W
Feature	USB	Lamplight	RGB lighting
	TF card	Reveal	Nixie tube
	Bluetooth	Live broadcast	OTG
	AUX		Simulate
	Live broadcast	Battery capacity	4000mAh
	Monitor		

FAQ

Q1: Bluetooth is connected, but there is no sound.

A1: Please first check if the device has power. If it does, press the headphone button. (If headphone monitoring mode is enabled, only the headphones will work, and the speakers will not produce sound.)

Q2: Will the settings configured during this use be retained the next time it is turned on?

A2: No, the default settings will be restored the next time it is used.

Q3: Why can't I connect successfully when using Bluetooth mode?

A3: Please first check if the display "BULE" is flashing. If it is not flashing, this indicates that it is already connected to another device. Please disconnect the Bluetooth connection from the other device.

Q4: Why does the speaker automatically shut down?


A4: It will stop working when the battery is low. Please charge it in time, it is recommended to use it after 4 hours of charging.

Q5: What are the potential reasons for the absence of sound in the speaker AUX?

A5:

1. Please use a 3.5mm audio cable and select the correct audio output interface.
2. The machine will not automatically enter AUX mode, you must press the [M] key to switch to AUX mode.
3. Whether the volume of the external audio source device is turned on.

Features and Operation

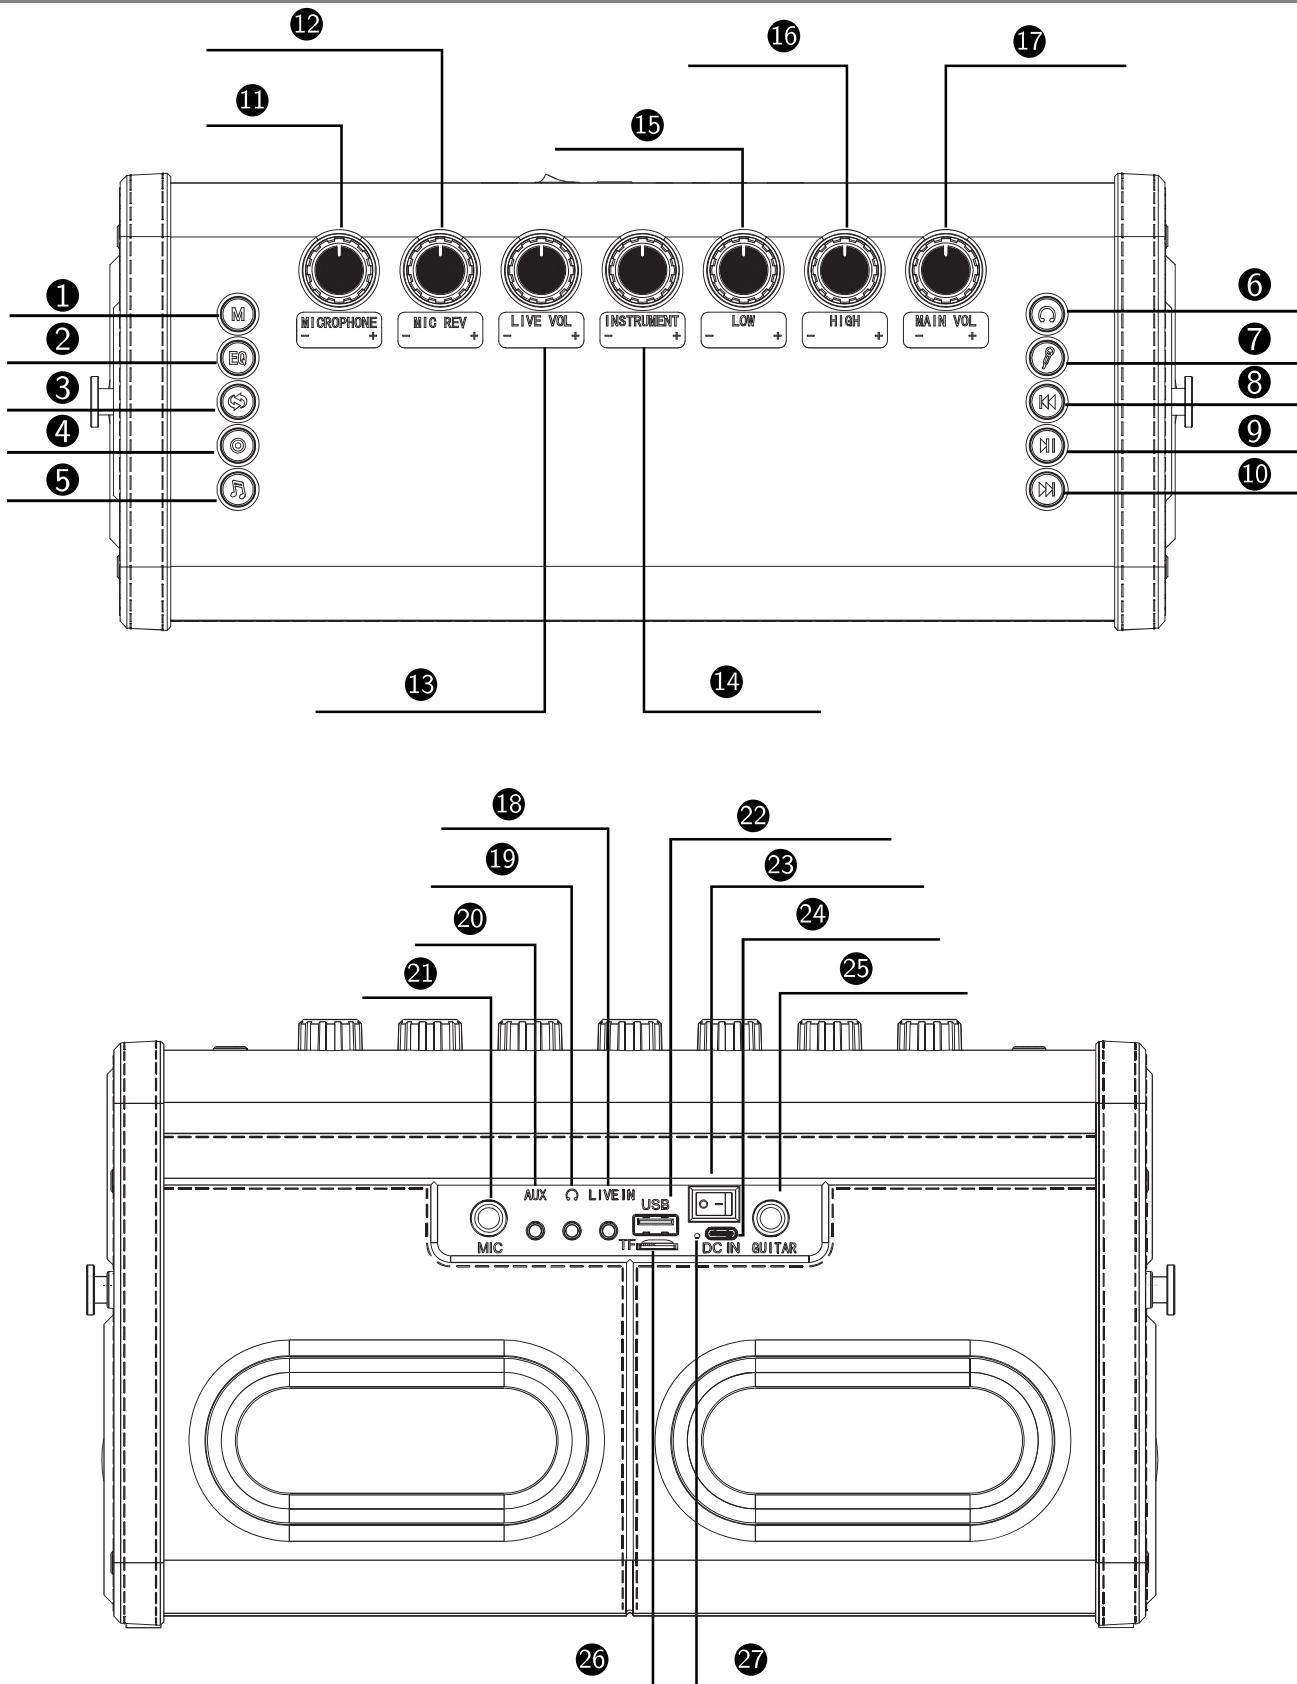

1【M】 Short Press to Switch Connection Mode. The machine has 4 modes (Bluetooth, AUX, TF card and USB). Long Press to Switch Lights. When the machine is playing music, there are 4 lighting modes (colorful flashing/single color flashing/single color not flashing/off); when not playing music, there are three lighting modes (colorful lighting/single color not flashing/off).

②【EQ】 Indoor/Outdoor Mode: Short press EQ button to switch the indoor or outdoor mode. Outdoor sound effect: Loud and clear; Indoor sound effect: High quality deep bass.

③【S】 Microphone Priority Mode: short press the button to turn on microphone priority mode, and press the button again to turn off. When the microphone priority mode is turned on, the sound of the background music will be automatically reduced when you speak.

Note: this function requires a microphone to be connected to use.

④【◎】 Recording: After inserting the microphone and USB disk or TF card into the corresponding holes, press the button once to record the track. Press again to stop recording. After stopping recording, the machine will automatically play the recording file.

Please note that this function can only be used in USB playback mode or TF card playback mode, and requires a microphone to be connected.

⑤【♪】 Original Singing Cancel: After pressing this button, the sound of the original singing will be turned off; pressing it again will turn on the sound of the original singing.

⑥【聆听】 Headphone Monitoring Mode: Connect wired headphones and short press this button, and the headphone monitoring function will be turned on. The speaker does not play music and only the headphones work. Press again to turn on the dual-layer playback function, and the speakers and headphones can play music at the same time.

⑦【麦克风】 Sound Switching: Press this button, you can switch different voice and mode. There are 7 voice modes (original voice / female voice / doll voice / magic voice / KTV mode / recording studio / host mode). Click to convert to the next mode.

Note: this function requires a microphone to be connected to use.

⑧【◀】 Previous Song: Short press once to switch to the previous song.

⑨【暂停】 Play/Pause Button: Short press to stop playing music, press it again and music will continue to play.

⑩【▶】 Next Song: Short press once to switch to the next song.

⑪【MICROPHONE】 Microphone Volume Control: Control the playback of the volume of the connected microphone. Rotate the knob to decrease or increase the volume of the microphone.

Note: this function requires a microphone to be connected to use.

⑫【MIC REV】 Microphone Reverberation: Adjust the reverberation effect of the microphone. Rotate the knob to decrease or increase the reverberation effect of the microphone.

Note: this function requires a microphone to be connected to use.

⑬【LIVE VOL】 Control LIVE IN Volume. Rotate the knob to decrease or increase the volume of LIVE.

⑭【INSTRUMENT】 Instrument Volume: Control the playback of the volume of the connected instrument. Rotate to adjust the volume of the instrument.

⑮【LOW】 BASS: Rotate to decrease or increase the bass effect.

⑯【HIGH】 TREBLE: Rotate to decrease or increase the treble effect.

⑰【MAIN VOL】 Volume Control: Rotate to adjust the music volume. (Maximum volume: 32)

⑱【LIVE IN】 Live in: Insert a 3.5mm audio cable to connect your mobile phone to start the LIVE streaming.

⑲【Ear】 Headphone Hole. Connect to your wired earphone.

⑳【AUX】 AUX Connection Mode. Use 3.5mm aux cable to connect the machine.

㉑【MIC】 Plug in wired microphone to singing.

㉒【USB】 USB Port: When the USB stick is inserted, it defaults to USB playing mode. It can read and play the MP3 audio format.

Please note: The music format only supports MP3.

㉓【ON/OFF】 Power Switch Button.

㉔【DC IN】 Power Port. Use a standard type-C charging cable to charge the machine.

㉕【GUITAR】 Guitar Connector. Plug in a wired electric guitar.

㉖【TF】 TF Card Port: When the TF card is inserted, the default is the TF Card playing mode.

Please note: The music format only supports MP3.

㉗【O】 Charging Light: Red means normal charging. When the light goes out, it means the charge is full. It usually takes about 4 hours to fully charge. (Note:When the battery power is lower than 10%, the icon "█" will flash and be accompanied by a prompt sound. The display will disconnect Bluetooth and show "----" or "OFF")

Contact Us

Dear Friend,

Thank you for choosing and purchasing Golatral wireless speakers! We are very happy to be a part of your musical life and sincerely thank you for your trust and support in our products.

We understand how important it is to choose a high-quality audio device, which is why we are committed to providing you with exceptional products and services. We are pleased to inform you that your purchase comes with a 1-year warranty. During this period, if you encounter any quality issues or malfunctions, please do not hesitate to contact us via email at **golrtral@gmail.com**. Our customer service team will provide you with prompt support and repair services to ensure a hassle-free experience.

Our speaker is meticulously designed and delivers outstanding sound quality, aiming to offer you an unparalleled musical experience. Whether you are relaxing at home or enjoying outdoor activities, our speaker will provide you with high-quality sound.

If you have any questions or need help during use, please feel free to contact our customer service team. We will serve you wholeheartedly and ensuring your satisfaction is our top priority.

Thank you again for your purchase and support, We wish you a joyful life filled with music!

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.