

INSTRUCTIONS

PRODUCT: Remote Controlled Bracelet & Cheer Stick

CHARGING:

To charge your remote control, ensure it is turned off. Connect provided charger to remote via the designated port, then plug into wall outlet. A red light will appear above the word CHARGING, which will turn green when fully charged. Alternatively, remote can be charged via USB port (cord not included).

HOW TO USE:

Bracelets:

To activate bracelet, flip the switch and wait for a small red light to turn on. Once red light has appeared bracelet is ready to receive the remote's signal.

Cheer Sticks:

To activate cheer stick, remove the pull tab and press the ON/OFF button. Wait for a small red light to turn on. Once red light has appeared cheer stick is ready to receive the remote's signal.

To control the cheer stick independently from the remote, use the FUNCTION button. Press it repeatedly to cycle through the LED functions. Note: this function only works when remote is turned off or out of range.

If you wish to change from remote control to FUNCTION button control, remote and cheer stick must be powered OFF, then turn cheer stick back on to reset.

Remote:

To use remote, make sure antenna is screwed in securely and the ON/OFF switch is flipped to the ON position, a small red light will appear above the word POWER. Use the buttons to select the preferred color or LED function.

Choose from:

*3 solid colors:

- o Red, Blue, Green.

*4 color combinations:

- o Violet (Red + Blue), Yellow (Green + Red), Aqua (Blue + Green), All Colors (Red + Blue + Green).



*5 transition options:

- o Flash, Slow Color Change, Blink, Auto Change (slow change through each solid and color combination), Random.

OFF button turns bracelet and cheer stick off. Press a color or function to turn them back on.

CARE TIPS:

To extend battery life, power OFF all products after each use.

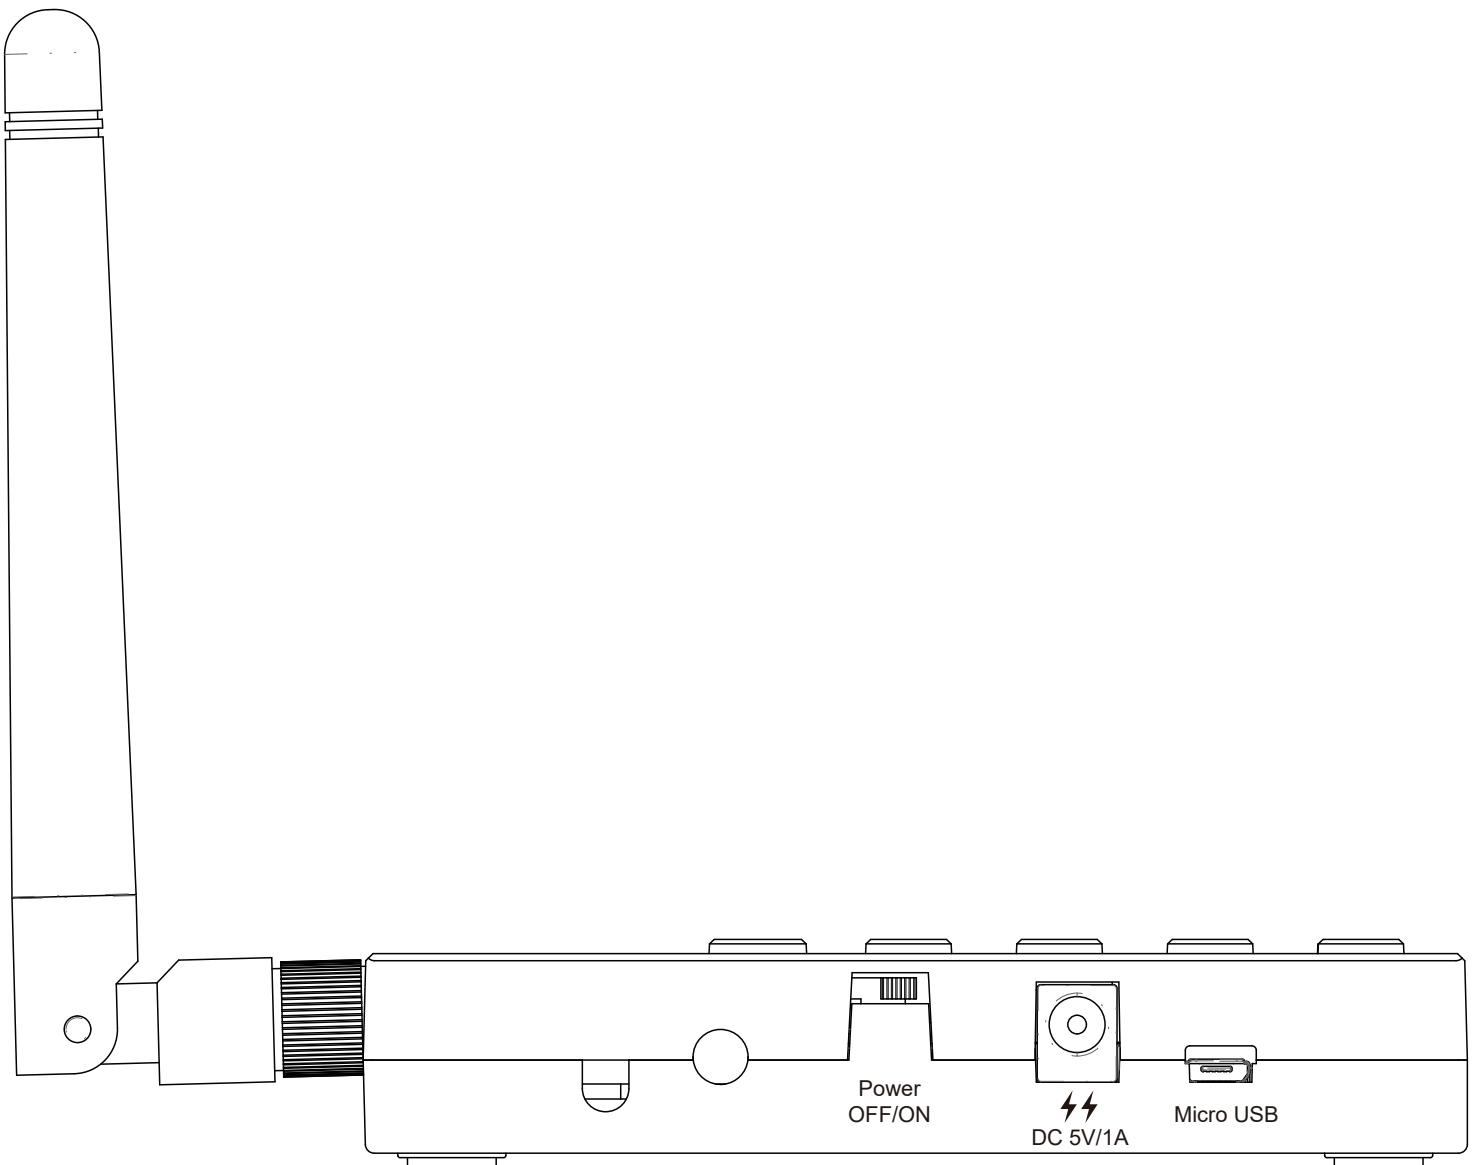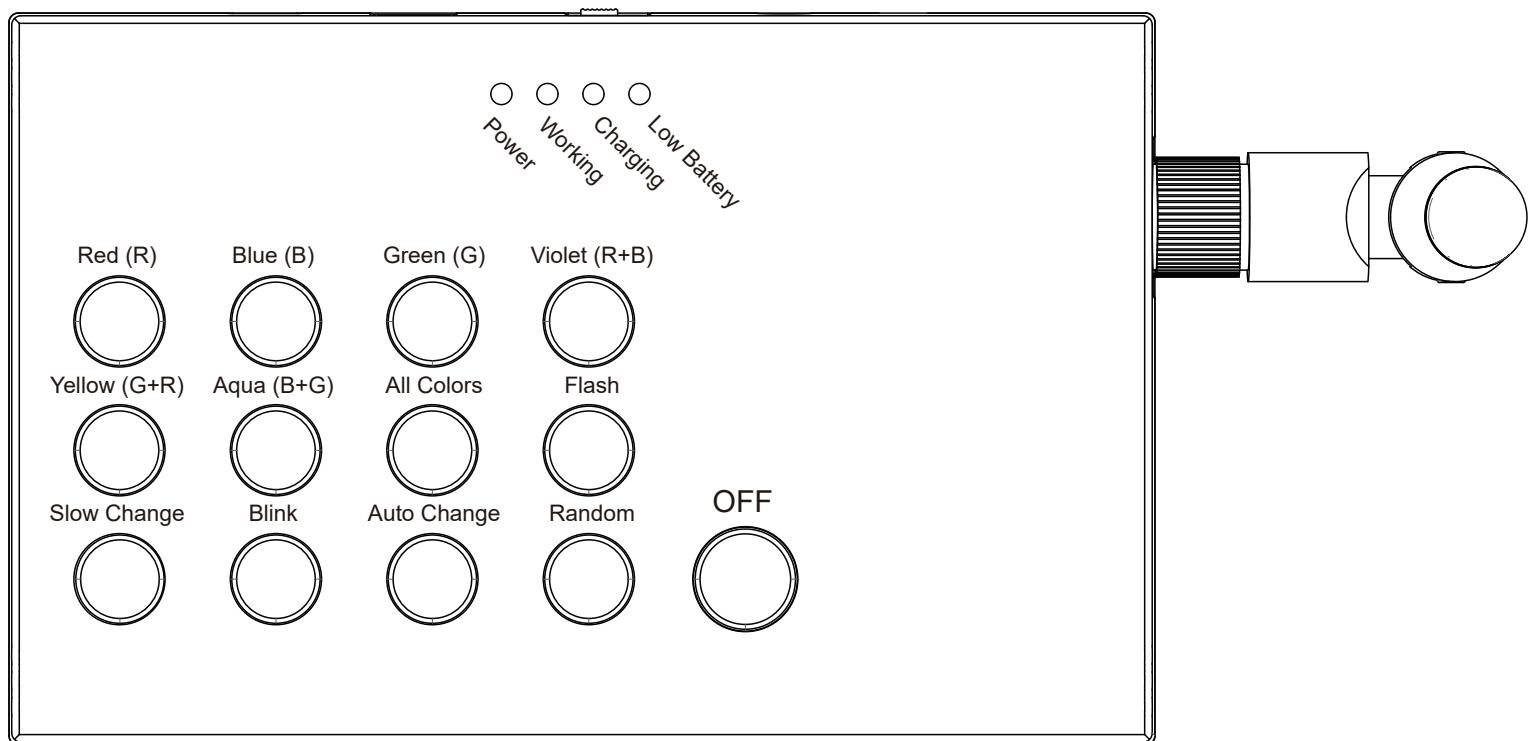

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.