




Mini WiFi Switch

Model : FS-Basic

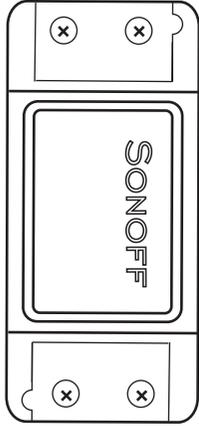


Parameter:

Power Supply: 120VAC
Max. Current: 2200W/10A
Wi-Fi Standard: 2.4GHz b/g/n
RF: 433MHz (Sonoff RF supports)
Material: ABS V0
Size: 88*38*22mm

Checklist before using the device

- Your smart phone or tablet has connected to a 2.4G WiFi with internet.
- You have the correct WiFi PWD.
- Your smart phone or tablet must have access to APP Store, Google Play.
- Your router is MAC-open.

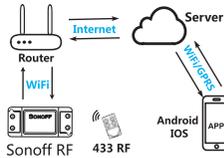

User Guide

- 1 Start with "EWelink" APP.



- 2 Register an EWelink account.
- 3 If you have EWelink account, just log in.
- 4 Power up.

ON/OFF operating principle:
The connected appliances work/stop through live wire power on/off .



4.1 Appliance wiring instruction.



4.2 Ceiling lamp wiring instruction.




4.3 One wire wiring instruction.



*Note: The SONOFF switch must be powered up by N and L wires.

- 5 Press and hold the button for about 7 seconds until the WiFi green LED blinks fast.

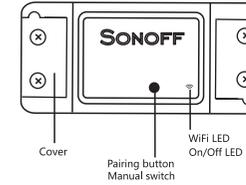

- 7 Tap + on EWelink app.



- 8 For Android, select the first one.



For IOS, select the pairing method according to LED blinking way.



- 9 Input your WiFi password.
- 10 Name your device.
- 11 When the WiFi LED is on , the device is online.

*Sonoff RF supports controlled by 433MHz RF Remote controller. This function allows to turn on/off lights indoors, no WiFi needed.

Learning: Fast press the pairing button on Sonoff RF twice, then press one of the buttons on your RF remote controller to set pairing for 1-2s.

Clearing: Fast press the pairing button for three times, the red LED is on for 3s, that means code has been cleared.

TROUBLESHOOTING

Q: Why my device stays Offline ?

A: The new added device needs 1min to connect to WiFi and the Internet. If it stays offline for a long time, please judge the problem by the WiFi LED status:

WiFi LED quickly blinks one time every second:

Sonoff failed to connect to your WiFi:
① Maybe you have entered wrong WiFi password.

② Sonoff is too far away from your WiFi. Please take it closer.

③ Sonoff can not be added to the 5G-wifi-router, only the 2.4G-wifi is OK.

④ Make sure your router is MAC-open. If still failed, try to open a mobile hot spot and add again.

WiFi LED quickly blinks twice every second:

Sonoff has connected to WiFi but failed to connect to server. Please check your network connectivity.

Scan the user guide to read EWelink works with Amazon Echo, Google Home and Google Nest tutorials.



Scan to download EWelink free APP



Scan to read the detailed user guide

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20 cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter