

骑马钉  
尺寸: 100\*60MM  
材质: 105双铜

MADE IN CHINA

CE

FC

BLITZWOLF

User Manual

BW-WA3 PRO

1 On/Off

2 Mode Switching

3 RGB/EQ Button

4 TWS Mode

5 Play/Pause/Calls Answering

6 Volume Down/Previous Song

7 Volume Up/Next Song

-01-

Specifications

Model	BW-WA3 Pro
Supported Profiles	A2DP,AVRCP,HSP
Communication distance	≥10m
Frequency Response	20Hz—16000Hz
Impedance	4Ω±15%
Music playing time	15 (50% volume) hours Turn off RGB lights 12 (50% volume) hours Turn on the RGB lights
Battery Capacity	16000mAh
Charging time	About 6 hours
Input voltage	5V/3A
Maximum power	120W

-02-

Instructions

Button	Features	Function operation
	Turn On	Press the "POWER" button for 1.5 seconds, the speaker will enter the wireless search state by default, waiting for the device to be connected; after the wireless connection is successful, the wireless status light will be on for a long time.
	Turn RGB Lights On And Off	In the power-on state, short press the "POWER" button to turn off/on the RGB light.

-03-

	Turn Off	In the power-on state, long press the "POWER" button for 2 seconds to turn off the wireless speaker.
	Force Shutdown	In the crash state, long press the "POWER" button for 8 seconds to turn off the wireless speaker.
	Mode Switch	Short press the "MODE" button to switch the BT / TF / USB / AUX playback mode
	Disconnect And Connect wireless	In the wireless connection state, long press the "MODE" button for 3 seconds to release the wireless connection.
	Reset	Long press the "MODE" button for 5S to restore the factory settings and clear the previous operation memory.

-04-

EQ	EQ Toggle	The default EQ of the power-on speaker is subwoofer, press the "EQ" button for vocals, and then press the "EQ" button for 3D.
TWS	TWS Box Matching Function	Short press the "TWS" button to enter the TWS mode; press the "TWS" button to exit the TWS mode when the TWS is connected; return to the wireless mode.
		TWS box connection operation: 1. Turn on the two speakers (if other wireless devices are connected, disconnect them so that the speakers are in the wireless search state). 2. Press the "TWS" button of one of the speakers, then you will enter the TWS pairing mode when you hear the beep tone and the yellow light flashes;

-05-

		3. After the pairing is successful, the yellow lights of the two speakers will light up at the same time and there will be a prompt tone. The wireless light of the main machine is flashing Wait for the mobile phone to connect, the blue light of the auxiliary machine is off; 4. After the TWS is connected, the host is connected to wireless or the host is plugged into the AUX to play the music and the sub-box will also play the music of the right channel of the corresponding song at the same time. 5. In the TWS connection state, press the "TWS" button to release the TWS connection to the box and the yellow light will turn off with a prompt tone to return to the normal state.
--	--	--

-06-

Play/Pause	Press the "PLAY/PAUSE" button under BT/TF/USB playback status to pause playback.
	Press the "PLAY/PAUSE" button in the AUX playback state to mute the playback.
Answer The Call	Press the "PLAY / PAUSE" button when the call comes in to answer the call
End The Call	Short press the "PLAY/PAUSE" button during a call to hang up.

-07-

Call Rejection	Press and hold the "PLAY/PAUSE" button for 2S when the call is incoming, you can reject the call
Tail Number Redraw	In the wireless connection state, double-click the "PLAY / PAUSE" button to redial the tail number
Voice Assistant	Long press "PLAY/PAUS" 3S to activate the voice assistant function
Volume Down	When playing music, short press the "+" key, the volume will decrease by one level, a total of 16 levels.
Previous Song	When playing music, long press the "+" key for 1.5S to switch to the previous song.

-08-

Volume Up	When playing music, short press the "+" button, the volume will increase by one level, a total of 16 levels
Next Song	When playing music, long press the "+" button for 1.5S to switch to the next song.

-09-

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement.

-10-

BLITZWOLF	▲ 型号/SKU	▲ 产品名称	▲ 包装尺寸	▲ 材质&工艺
	BW-WA3 PRO	音响	100x60mm	骑马钉+157g铜版纸

PANTONE 7479C