

T10, T8, T7  
Android Tablet PC  
Quick User Guide



Our dear customer  
You have purchased a quality Winnovo product in preference to our tablet device.

Your device will serve you for many years if you provide the necessary care and attention. Instructions and pictures of the tablet are included in the guide.

We hope you enjoy using your device. Important Safety Information  
Please read the instructions in this manual carefully to familiarize yourself with your device quickly and take full advantage of all the functions of your device.

• **WARNING:** Important instructions must be observed to avoid damaging data or components or damaging users.

This user manual contains important information on the initial use of your device, its safety, its intended use, and cleaning and maintenance of your device.  
Always keep this user manual with your device.

English

#### Safety Warnings

- Do not use damaged power cords, plugs, or plugs.
- Do not touch the power cord and the device with wet hands. This can cause damage to you and your device.
- Do not charge any other battery that is approved by the battery manufacturer.
- Do not place any objects on top of the device as the screen may be scratched.
- Do not use any other touch pen and its variants as approved by the manufacturer.
- Never disassemble your tablet.
- When cleaning the product, turn off the product and disconnect the power cord.
- Do not get your device near the heaters.
- Do not scrape materials such as paint, logo on the device.
- Do not use your device if its screen is broken or cracked.
- When using with the device accessories, be careful during disassembly and installation.
- Use power cords, headphones, and other audio cords without moving them right to left, perpendicular to each other.
- Never use your device in the following situations:
  - If the device or the power cord is worn,
  - If the appliance is dropped, there is visible evidence of damage, if it does not work properly,
  - If the appliance has been damaged in such a way that the electrical parts are visible. If any of the specified conditions are detected, immediately unplug the device from the power outlet and contact the authorized service. Damaged parts of a worn device or device can cause serious injury and fire.
  - Do not attempt to repair the device yourself if any malfunction occurs on your device.
  - Do not disconnect the device. There are no user-serviceable parts inside the device.
  - Use of manufacturer's recommended accessories it may cause damage to the device and injuries.
  - If there is a problem with the product or the battery, the necessary repair and replacement of the battery must be performed only by authorized service personnel.
  - Do not use the appliance in very cold or hot, dusty, humid or dry environments, in the rain.
  - Do not allow the device to fall during use.
  - Always back up data on a PC to prevent loss of personal data.
  - Do not drop, rub, or pinch the tablet on hard objects; this can lead to damage to the surface of the tab, damage to the wrist, loss of data, or damage to other equipment.
  - Do not use your device in areas where wireless equipment is forbidden or the use of the device may cause interference or danger. Follow all relevant restrictions.
  - Do not use incompatible products. Use only genuine accessories and batteries.
  - If the device is or near fuels or chemicals.
  - Do not use the product while driving a car or heavy machinery.

Safety warnings .....	3
Adapter Information .....	4
Environmental Conditions .....	4
Important User Information .....	4
Limitation of Liability .....	4
Technical Specifications .....	5
Simplified Compliance Statement .....	5
General View .....	5
Troubleshooting .....	6

#### Adapter Information

Input: AC 100-240V, 50/ 60Hz, 0.35A  
Output: 5V 2.0A

#### Environmental Conditions

- The working environment of the product should be between 0 - 40° C ambient temperature and 35 - 90% relative humidity.
- WARNING: To avoid possible damage to your hearing, do not listen at high volume settings for long periods. Overheating can cause permanent hearing loss.
- Do not abruptly interrupt power during software update or power down. This can lead to data loss and / or system failure.
- This appliance is intended for domestic use in closed areas use is not appropriate. Use your judgment only for the intended use.
- Follow the instructions outlined in this user manual.
- WARNING: If your device is used outside its intended purpose or if its use is otherwise performed, it may create a hazardous condition. Use of the device other than its intended purpose will result in the cancellation of the device's charge. Such damage is only covered by the user.

#### Important User Information

- Some words or phrases in this manual are highlighted in a special way.
- The information contained in this user guide is protected by copyright laws.
- The text, picture, etc. copying any of the information without the written permission of the copyright holders is strictly forbidden.
- Reverse engineering and disassembly of the product supplied with the manual is strictly forbidden.
- All visual items in the grid are representative, the truth may not be correct.

Information to be taken into consideration about transportation and transportation

- Do not drop the device during shipment and protect it from impact.
- After delivery of the product to the customer, the warranty does not cover any defects or damages during transportation.

#### Limitation of Liability

All technical information, instructions for use, operation and maintenance of the device contained in this manual contain the latest information about your device. The manufacturer does not accept any liability for damage or injury that may result from failure to comply with the operating instructions in this user manual, use outside of the intended use of the equipment, unauthorized repairs, alterations not permitted on the device, and use of spare parts not approved by the manufacturer.

## Technical Specifications

Model: Winnovo T10  
 Processor: Mediatek MT8163 Quad core, up to 1.3Ghz  
 Operating System: Android™ 9.0 Pie  
 RAM: 3GB DDR3  
 Storage: 32GB, support Micro SD up to 64 GB  
 Screen: 10.1 inch 1280 X 800  
 Display: IPS Screen and 5 points touch screen  
 Music: MP3, AAC, WAV, OGG, etc  
 Video: MP4, OGM, 3GP, AVI, Etc  
 Picture: JPG, JPEG, PNG, etc.  
 Battery: 6000mAh, 3.7V  
 Adapter: DC 5V, 2A  
 Camera: Front 2.0 MP, Rear 5.0 MP  
 Wi-Fi: IEEE 802.11 b/g/n, 2.4Ghz  
 Bluetooth: BT 4.0

Ports: Micro TF/SDHC, Micro USB, 3.5mm Headphone  
 Dimensions: 243.4 x 172 x 9.85 mm  
 Weight: 510 g (tablet only)

\*\*Specifications and this manual are subject to change without prior notice.

• Conforms to AEEE directive.

This product complies with the European CE Directives 2014/53 / EU (Electro-magnetic Compatibility Directive).

This device complies with the Directive on Control of Waste Electrical and Electronic Equipment.

Google, Android, Google Play and other brands Google Inc. is the trademark of the foundation.

## Simplified Compliance Statement

Winnovo declares that the radio equipment type plate is in compliance with the directive 2014/53 /EU. The full text of the EU declaration of conformity is available on the Internet at: <https://www.winnovo.cc>


## Product Box Content

Tablet (Battery integrated in the device), Charger, USB Cable, User Manual (with Warranty Card)

## General View

In this user manual, the specifications given in the visuals and the parts indicated in the box contents may differ according to the model.  
 The images are representative.

5

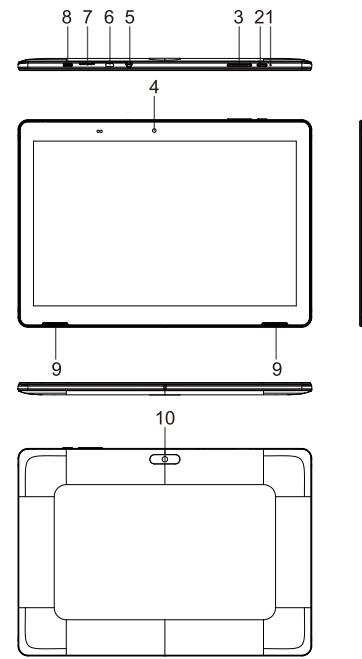

1. RESET	6. TV-OUT
2. Power button	7. Micro SD
3. Volume +/ Volume -	8. Micro USB
4. Front Camera	9. Speaker
5. Headphone	10. Rear Camera

## Troubleshooting

If you detect an unusual condition on your device, you can try to solve the problem in the description of the table.

If your device still does not continue to operate normally, please contact Winnovo via [www.winnovo.cc](http://www.winnovo.cc) or follow us on Facebook page [@winnovoclub](https://www.facebook.com/winnovoclub)

6

PROBLEM	REASON	SOLUTION
Tablet no LAN/Wifi connect.	Incoming signal is too low	May the signal is weak or bad. If you are on the ground, signal reception may be reduced. Change another place and try again.
Skip touchscreen	May your hands wet, tablet software or touch screen can not find touch operation.	While touching the touch screen, make sure it is dry. If the touch screen is scratched or if it is damaged, contact us.
Intermittent lockups or Tablet stops responding	May too many applications under operating	Press and hold the power button for 5 seconds. If the tablet does not turn off then press the Reset button located near SD card slot.
Tablet beeps and the battery icon blinks Blinking	Your battery is weak	To continue using the device, recharge.
Tablet camera head error message Giving	There is not enough memory or the battery is weak.	Charge the battery. Transferring files to a PC, or open up some space by deleting some files in memory.
My Tablet does not turn on out of the box	Low power	Plug the AC Adapter into the wall and connect to the Tablet. The tablet should now power on. Winnovo recommends to charge the device for 8 hours before first use. For a device that is completely discharged, leave it plugged in and turned off for at least 12 hours.
Unable to make a connection to your Computer	Compatible with USB jack or PC latest version drivers not loaded	If you are using the USB cable with your device make sure it is compliant. Your PC has the right drivers installed and be sure to update it.

## Disposal of your device in an environmentally friendly manner

This symbol on the product or on its packaging indicates that the product must not be treated as household waste. Instead of and delivered to the current collection point which recycles electronic equipment.

This product is correct, you will be able to prevent the potential negative consequences of environment and human health arising from waste treatment of the product. Recycling of materials will help to conserve natural resources. For more information about recycling this product, please contact your local municipality, the household waste disposal service or the shop where you purchased the product.

## Suggestions for Energy Saving

When you do not use it, turn off the device like wi-fi, blue tooth. If necessary, disable unnecessary sounds such as application notification and key sound. Depending on what you need, reducing the brightness and volume will enable you to use energy efficiently.

## Proper Battery Disposal

(For countries with separate collection systems) The marking on the battery, the guide and the luggage compartment indicate that this pile of battery should not be disposed with other household waste. Hg, Cd or Pb chemical symbols indicate that the battery contains mercury, cadmium or lead above the reference values specified in EC Directive 2006/66. The battery supplied with this product can not be changed by the user. For detailed information on replacement, please contact your service provider. Do not try to remove the battery or throw it into the fire. Do not disassemble, crush or punch. If you intend to dispose of the product, necessary measures will be taken in the field of waste collection to restore the product, including the battery, and repair it.



[www.winnovo.cc](http://www.winnovo.cc)

5

6

## FCC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.