
 
 


AMO

USER GUIDE

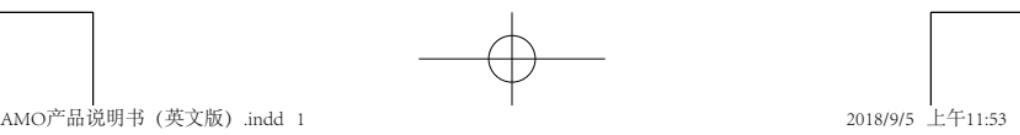





SAFETY WARNING & INSTRUCTIONS



This symbol indicates that caution is required when operating the product.

⚠ DANGER

If you do not follow the safety precautions, there is a high and imminent possibility that it will result in death or severe injury.

⚠ WARNING

If you do not follow the safety precautions, there is a possibility that it may result in death or severe injury.

⚠ ATTENTION

If you do not follow the safety precaution, there is a possibility that it may result in injury or damage to the households nearby or product breakage.

⚠ DANGER

Do not use your AMO Holder with the cap removed. Doing so may result in personal injury.

 


If the Pocket Charger has fallen into water, do not reach for it. Doing so may result in personal injury. Should this happen during charging, unplug the AMO Device immediately and only retrieve it if you can do so safely.



Do not attempt to repair or open any component of the AMO Device, or to replace any AMO component batteries. Doing so may result in personal injury.






- In the event of the AMO Holder or Pocket Charger battery fluid leaking, avoid contact with skin and eyes. If contact occurs flush thoroughly with water and seek medical attention immediately.
- Do not operate the AMO Device if it is not working properly, if it sparks or becomes unusually hot when not in use or not in charging mode. If this happens, stop using the AMO Device.
- Do not attempt to short circuit your AMO Holder or Pocket Charger by attaching wires or other materials to their contacts, terminals or connectors. Doing so may result in personal injury.

⚠ WARNING

 - Do not immerse any item of your AMO Device or components (except the detached AMO Holder cap and the cleaning tool) into water. Solvents or any other liquids other than AMO Cleaning Sticks must never be used for cleaning.
- Do not operate the AMO Device in the presence of flammable materials, liquids and gases, or in areas where oxygen is being administered.
- Do not operate the AMO Device if you see/suspect that it has been damaged, modified, dismantled or immersed in liquid. Doing so may result in personal injury.
- Do not insert anything other than tobacco stick exclusively designed for AMO(tobacco stick) into an AMO Holder. The only exception is when any AMO Holder is turned off and cooled down, you can use the cleaning hook to remove a part of a tobacco stick stuck in the AMO Holder cap.
- When you carry around AMO Holder, please ensure that no material enter inside the AMO Holder. It may result in personal injury or burn.
- Use only the AMO USB Power Adaptor that came with your AMO Device. Do not use power supplies designed for other products or voltage converters.





⚠ ATTENTION

- Keep the AMO Device and its components out of reach of children.
- Charge the Pocket Charger indoors only.
- Do not remove the tobacco stick during usage.
- Heating does not stop if you remove tobacco stick during usage. In that case, switch off the Holder or place the Holder back in the Pocket Charger immediately.
- Please use the cleaning tool when the AMO Holder is cooled down enough.
- The tobacco plug side of tobacco stick is hot immediately after usage. when you dispose it, please hold the filter end.
- Do not drop your AMO Holder or Pocket Charger or otherwise subject it to strong shock.





DISCLAIMER

The safety precautions mentioned here are very important so please make sure you follow them.

The AMO Holder and Pocket Charger are battery powered and thus require charging to operate. Please do not leave the AMO products in a car or near a heater as this will deteriorate battery capacity.

Before using the AMO Device read all the instructions carefully. Keep this User Guide for future reference. To reduce the chance of injury, always use the AMO Device in accordance with the manufacturer's instructions. Warnings and safety instructions included in this User Guide cannot cover all possible conditions and situations that could occur. Caution and care must be exercised when using or maintaining any personal electronic product.

 
Only use heated tobacco unit with AMO Device. No other products are compatible with AMO.

This device can be used with persons with reduced physical, sensory and mental capabilities or lack of experience and knowledge only if they have been given supervision or instruction concerning the use of the AMO Device in a safe way and understand the hazards involved.

Your AMO Holder and Pocket Charger use lithium ion batteries. When you dispose of them, please follow the classification of each city government.

About lithium ion batteries

- If you charge/release or keep the device under hot temperature, it will accelerate the deterioration of the battery. Do not leave the device in the car or near heaters.
- If the device is left unused for a long time, the voltage will go down naturally due to self-discharge. Make sure to charge the battery before use.



- If the usage time becomes extremely short despite proper charging, the battery is reaching its end of usage life.
- When you do not use the device for a long time, avoid storing the device in fully-charged status or under high temperature/humidity condition in order to avoid accelerated deterioration of the battery.

Do not expose the AMO Device to excessive heat or moisture.

Do not light the tobacco stick with a match or lighter.

Do not operate your AMO Holder where the use of electric devices are prohibited.

Do not place your AMO Holder in your mouth.

After use you may notice some spots or discoloration on the tobacco stick.

 
This occurs during the course of normal usage.

- a. Keep the tabacco sticks dry and never re-use them;
- b. Clean the Holder regularly.

Not following the directions above may negatively affect your experience.

Safely dispose of tobacco sticks in a waste bin.


The AMO Device must not be sold to minors.



HOLDER/POCKET CHARGER


- ① Power Button(To switch ON/OFF)
- ② Holder Charger Indicator Light
- ③ Heating Button
- ④ Charging Port(Use the provided cable and AC Adaptor.)

A full charger can recharge the Holder at least 20 times.)

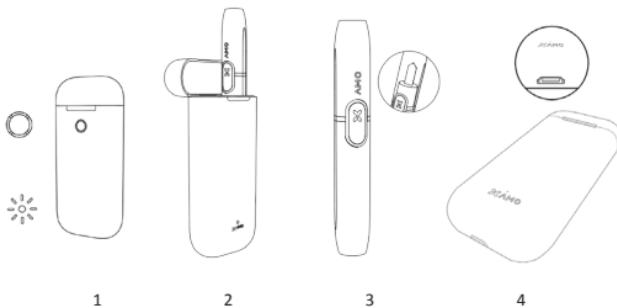

Pocket Charger Lights Display Logic

 - Pulsing white light(s) indicate(s) it is charging
- Solid white light(s) indicate(s) it is charged.
- No light(s) indicate(s) it is on stand-by, or switched OFF mode.
- Red light(s) indicate(s) it is malfunctioning, or defective.



GET STARTED

① Turn On/Off the Pocket Charger

Press the Power Button for 2s to switch on.

Press the Power Button for 5s to switch off.




② CHARGE THE HOLDER

Insert the Holder into the Pocket Charger as shown below.




1

Put the lid on

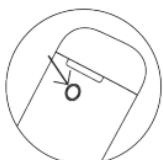

2

Once the lights stop pulsing(up to 3 minutes) then the Holder is charged, remove it from the Pocket charger.

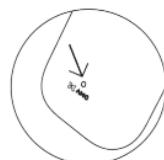


3

③ INSERT

Insert the tobacco stick into the Holder up to the printed line as shown below.

Never twist the tobacco stick, as you could break the Heater Blade.

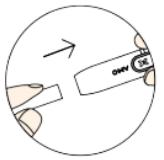

1

 


2



3

9




4 HEAT


Press and hold until the light turns pulsing white. There is Vibrate alert after 20s duration of Pre-heat.

When the light turns solid white, you can enjoy a tobacco stick for 6 minutes or 14 puffs, whichever comes first.


The last 30 seconds or 2 puffs are indicated when the light blinks white and vibration is felt, after which is automatically switch off.

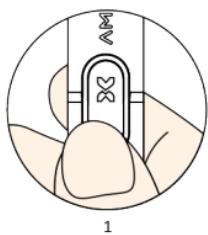

1

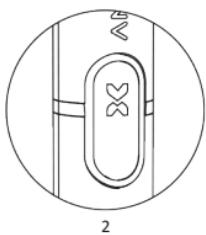

2

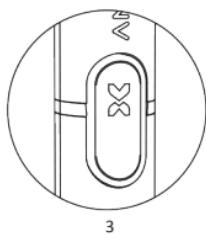


3

5 REMOVE


- To remove a tobacco stick from the Holder, first slide the Cap as shown below (1) and then remove (2).
- Never twist the tobacco stick, as you could break the Heater Blade. It is normal to notice some discoloration of the tobacco stick after use. Dispose as normal household waste.
- After every tobacco stick consumption, place the Holder back in the Pocket Charger. It takes up to 3 minutes to charge it.




1

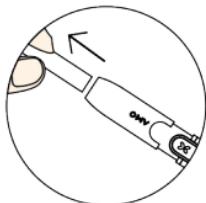

2

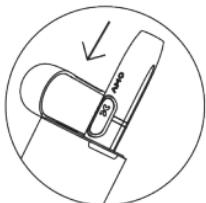

3


 


HOLDER MAINTENANCE

1 PREPARE For optimal performance and consistent taste, we recommend that you clean the Holder after every 20 tobacco sticks.

Always remove the Cap before cleaning as shown opposite.


To open the AMO Cleaner Brush, unclip the "Heater Brush" from the "Cap Brush" (1) and remove the "Cleaning Hook"(2).

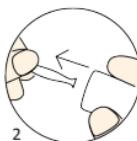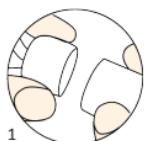

! Make sure the Holder is switched OFF before cleaning it. Avoid contact of any AMO cleaning accessories(Cleaning Brush, Cleaning Hook) with any source of ignition, eyes and skin.

2 CLEAN You can either use the cleaning Brush, or the Cleaning Stick , or one after the other to clean the Holder.


Cleaning the Holder in 4 steps with the AMO Cleaner Brush:

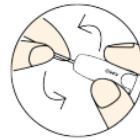

Cleaning the Holder in 4 steps with the AMO Cleaning Stick:



 
! To avoid breaking the Heater Blade employ a gentle circular motion when using the Cleaning Stick.
-Use only to clean AMO Holder.
-Do not soak other solutions.
-Do not use when AMO Holder is heated.



TROUBLESHOOTING


1 The Holder Cap does not close/clip properly.

Check alignment between the Cap and Heating button, if the problem persists, clean the Holder as shown on previous page.

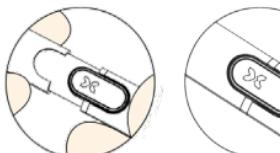

2 The Pocket Charger Lid does not close.

- Check if the Holder insert properly. The heating button should face to the left side (as shown below).
- Check if the Cap closes properly. If not, please go to troubleshooting #1.
- The Pocket Charger Lid Opening Button may be broken. Please contact Customer center.

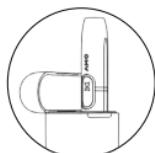

3 I cannot insert the tobacco stick into the Holder

A tobacco portion from a previous tobacco stick is stuck in the Cap, use the Cleaning Hook(1) from the AMO Cleaner Brush, then push the tobacco out as shown below(2&3). To avoid this from happening again, see page 10, step#5 REMOVE.



1



 
2



3

4 Extreme temperatures affect the AMO Device


If the AMO Device is exposed to extreme temperatures for a certain period of time. it might stop working until it is back within normal ambient conditions. Try to shield it from such exposure.



5 Blinking red light on the Pocket Charger


- Holder light on the Pocket Charger, this indicates a Holder malfunction.
- Power light on the Pocket Charger, this indicates a Pocket charger malfunction.

For a and b, before calling Customer center please try to restart the AMO Device.

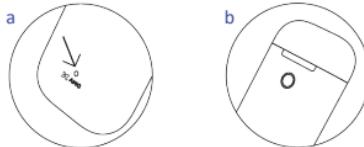


6 The light is red on my Holder.

- This could indicate that the Holder is not fully charged.
Place the Holder in the Pocket Charger and wait until it is fully charged.
- Check that the Pocket Charger is switched ON and is charged enough.
- If none of the above, please contact Customer center.

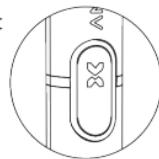

7 The tobacco stick duration is too short.

- If you puff rapidly, the duration will be shorter as the Holder firmware is designed for 6 minutes or 14 puffs, whichever comes first.
Try to pace yourself between puffs.
- When you activate the Holder, wait for the solid white light before using it. You can then enjoy a tobacco stick for 6 minutes or 14 puffs, whichever comes first.
- It might be time to renew your Holder as the battery may have reached its end of life cycle.

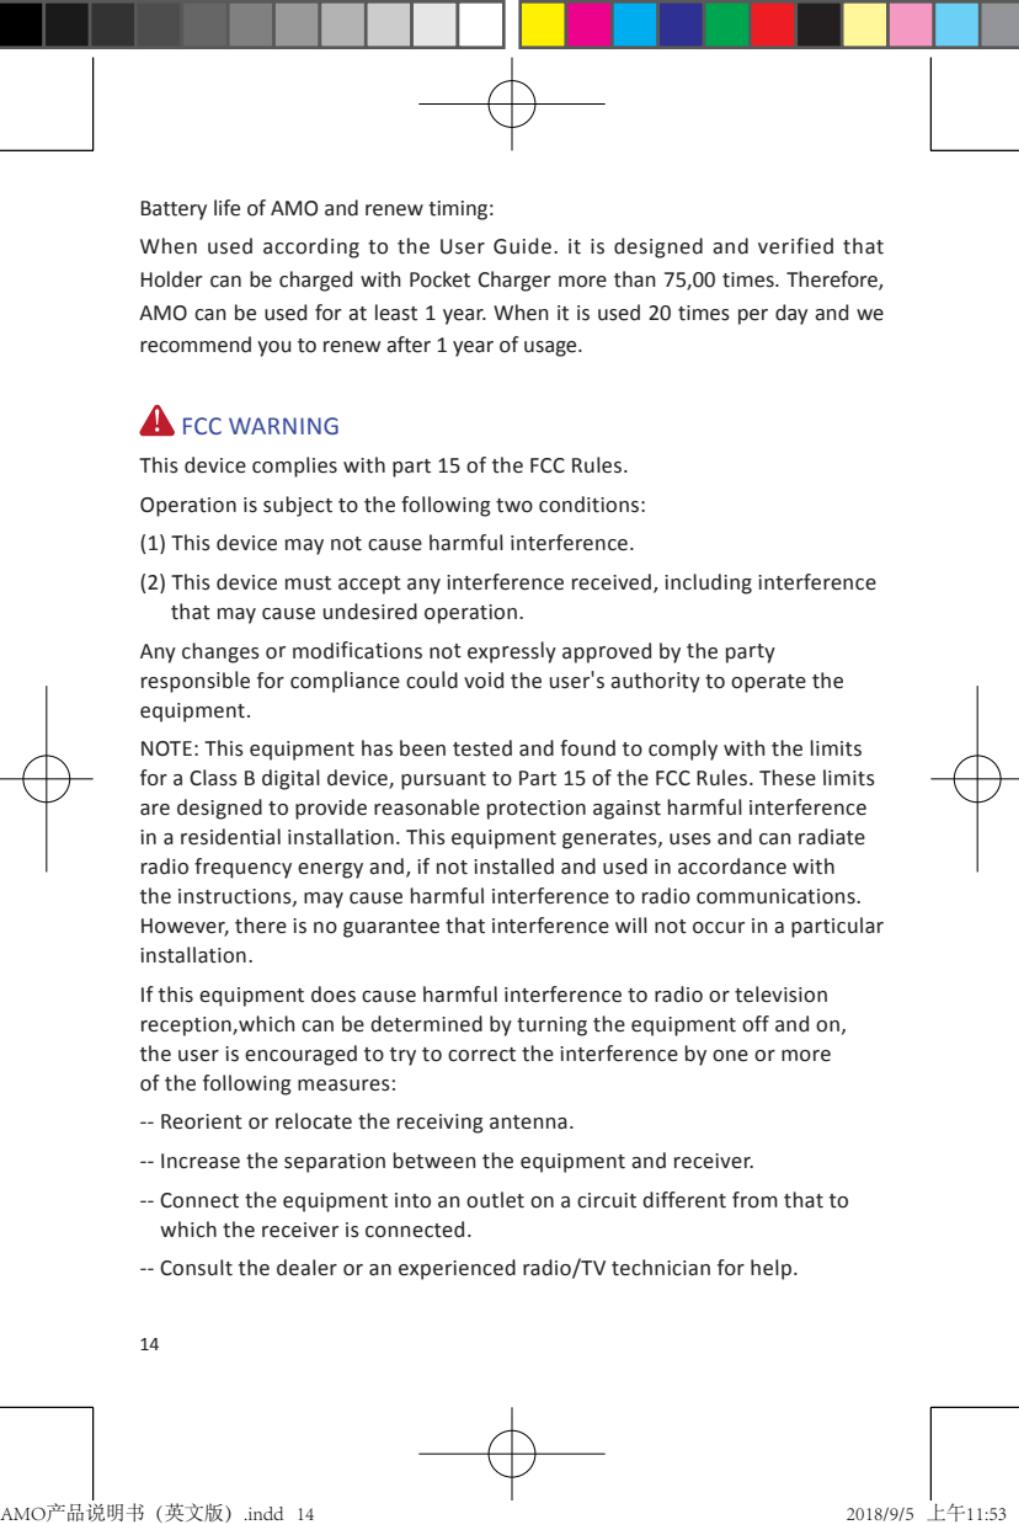

Battery life of AMO and renew timing:

When used according to the User Guide, it is designed and verified that Holder can be charged with Pocket Charger more than 75,00 times. Therefore, AMO can be used for at least 1 year. When it is used 20 times per day and we recommend you to renew after 1 year of usage.

FCC WARNING

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

 
- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

FCC ID: xxxxxxxx



IC Caution:

RSS-Gen Issue 4 December 2014" & "CNR-Gen 4e Décembre 2014:

- English:

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

- French:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et.
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

 


CUSTOMER CENTER & AFTER SALES SERVICE

Toll free number: [400-9699-883](tel:400-9699-883)

15





ATTENTION: This product must not be sold to minors.

AMO is designed, manufactured by Shun Bao Technology.
Trademarks also owned by Shun Bao Technology.

User Guide 1.0.0

