

PHILIPS

CD Soundmachine

3300 Series

TAZ3300B/37 TAZ3300W/37



User manual

Register your product and get support at:
www.philips.com/support

Contents

| | | | | | |
|---|------------------------------|------|----|-----------------------------|-------|
| 1 | Important Safety Notice | 3 | 9 | Connect with headphone | 11 |
| 2 | Your CD Soundmachine | 5 | 10 | Product Specification | 12 |
| | What's in the box | 5 | | USB playability information | 12 |
| | Overview of the main unit | 6 | | Supported MP3 disc formats | 13 |
| 3 | Get started | 7 | 11 | Troubleshooting | 14-15 |
| | Connect power | 7 | 12 | Trademarks | 15 |
| | Turn on/ Standby | 7 | | | |
| | App download | 7 | | | |
| 4 | Play from CD | 8 | | | |
| 5 | Listen to the radio | 9 | | | |
| 6 | Play from Bluetooth | 9-10 | | | |
| 7 | Play from USB | 10 | | | |
| 8 | Listen to an external-device | 11 | | | |

1 Important

Safety

Read and understand all instructions before you use this CD soundmachine system.

If damage is caused by failure to follow the instructions, the warranty does not apply.



This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering. The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. **WARNING:** To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the device.

CAUTION: To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never look into the laser beam inside this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power

- Make sure that there is enough free space around the product for ventilation.
- Only use attachments/ accessories specified by the manufacturer.
- Battery usage **CAUTION**-to prevent battery leakage which may result in bodily injury, property damage, or damage to the product:
 - Install the battery correctly, + and - as marked on the product.
 - The battery (packed or installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
 - Remove the battery when the product is not used for along time.
- The product shall not be exposed to dripping or splashing.
- Do not place any source of danger on the product (e.g. liquid filled objects, lit candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Please use the product safely in an environment with temperature between 0 ° C and 40 ° C.

Notice

Any changes or modifications made to this device that are not expressly approved by MMD Hong Kong Holding Limited may void the user's authority to operate the equipment.

Compliance

Hereby, TP Vision Europe B.V. declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. You can find the Declaration of Conformity on www.philips.com/support.

Care of the environment

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Regulation (EU) 2023/1542 which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

Removing the disposable batteries

To remove the disposable batteries, see battery installation section.

Environmental information

All unnecessary packaging has been omitted.

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove the discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

This apparatus includes this label:



Note

- The type plate is located on the bottom of the product .

2 Your CD Soundmachine

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/support.



Power cord

Introduction


With this CD Sound machine, you can:

- Listen to FM radio;
- Enjoy audio from discs, and other external audio devices;

What's in the box

Check and identify the contents of your package:

| | |
|---------------------|-----|
| • Main unit | × 1 |
| • Power cord | × 1 |
| • Quick Start Guide | × 1 |
| • Safety sheet | × 1 |
| • Warranty card | × 1 |

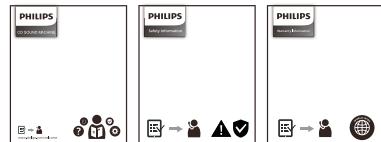

Quick Start Guide



Safety sheet/Warranty card

- Power cord quantity and plug type vary by regions.
- Images, illustrations and drawings shown on this user manual are for reference only, actual product may vary in appearance.



Main unit

Overview of the main unit

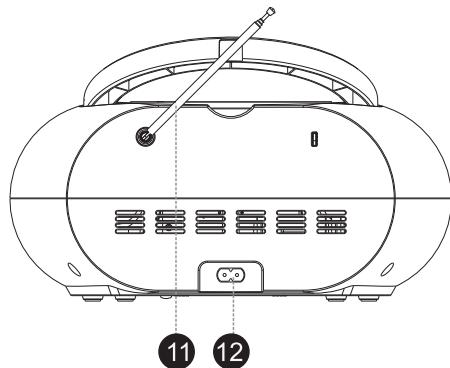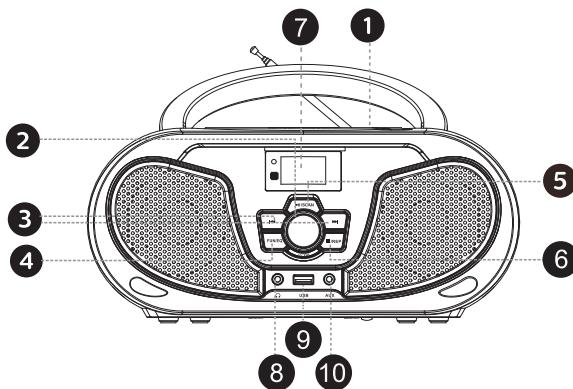


1. Disc tray
Disc compartment.
2. **O/VOL**
Push to turn on or turn off;
Rotate to increase the volume
3. **<>**
Skip the previous/next album/navigate
preset station.
4. Press to switch input modes;
Long press to switch between equaliser
modes.
5. **FM/SCAN**
Start and pause play.
6. **■/RPT**
Stop the play & Repeat play & memory play
7. **Display screen**
Display play information.
8. **AUX**
Connect external audio device.
9. **USB**
Connect USB storage device.
10. **○**
Connect the external earphone device.
11. **ANTENNA**
FM antenna.
12. **AC IN**
Insert power cable plug to AC IN socket.

3 Get started

! Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

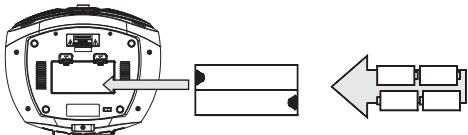

Always follow the instructions in this chapter in sequence.

Connect power

The unit can be powered by either AC power or batteries.

Option 1 : AC power


! Warning

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! When you disconnect the AC power, always pull the plug from the socket. Never pull the cord.

Connect the AC power cord to the wall socket.

! Note

- To save energy, turn the unit off after use.

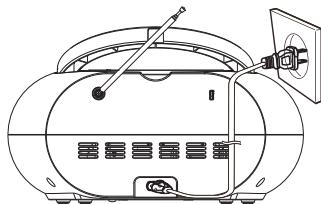

Option 2 : Battery power

! Caution

- Batteries contain chemicals, so they should be disposed of properly.

- 1 Open the battery compartment.
- 2 Insert 4 batteries (type : 1.5V R14/UM2/CELL) with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

Turn on/Standy

Press the Standby button on the unit to turn on and switch to last source, press it again to turn off.

Switch to standby mode

- The product switches to standby mode automatically when there is no audio detected for over 15 minutes.
- Press Standby button to wake up the product from standby mode.

4 Play from CD

Play a CD




Note

- You cannot play CDs encoded with copyright protection technologies.
- When an audio-in cable is plugged, CD playback stops, and the unit switches to audio in mode automatically.
- Make sure that no external device is connected with the CD sound machine through AUDIOIN socket before you play a CD.

You can play commercially available audio CDs:

- CD-Recordables(CD-R)
 - CD-Rewritables(CD-RW)
 - MP3 discs
- 1 Switch the source selector to CD.
↳ CD displays on the screen.
 - 2 Open the CD compartment.
 - 3 Insert a CD with the printed side facing up and close the CD lid gently.
↳ Your CD sound machine starts to play automatically.
 - To select a track, press $\blacktriangleleft\blacktriangleright$.
 - To pause CD play, press $\blacktriangleright\middle\blacktriangleright$.
 - To resume CD play, press $\blacktriangleright\middle\blacktriangleright$ again.
 - To stop CD play, press \blacksquare .

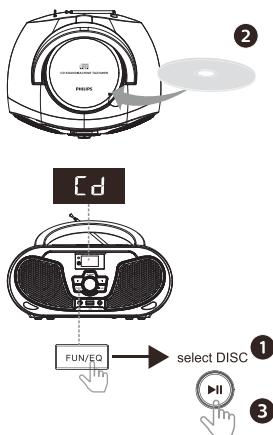

CD Play

Push OPEN, place a disc in the CD compartment, and then close the cover.

NOTE: The label side should face up.

2. Press the FUN/EQ button and select Cd to enter the CD mode. The disc will load, display the total number of tracks on the screen and start playing.
3. Press $\blacktriangleright\middle\blacktriangleright$ /SCAN button to pause playback. Press again to restart playback.
4. Press the $\blacktriangleleft\blacktriangleright$ or $\blacktriangleright\blacktriangleright$ button to skip to previous or next track, respectively. Press and hold the same button to rewind or fast-forward a track, respectively.
5. Press \blacksquare /RPT button to set Repeat function: One, All, Off. Press and hold the button to stop playback.

5 Listen to the radio

With this product, you can listen to FM radio.



Note

- Position the antenna as far as possible from TV, or other radiation source.
- For optimal reception, fully extend and adjust the position of the antenna.

1. Press the FUN/EQ button and select rad to enter the FM radio mode.

2. Press and hold the ▶/II/SCAN button to automatically scan the frequency range for radio stations and store them in presets.

3. Press the ▶/II/SCAN button to select the next preset radio station.

4. Press the or button to manually search radio stations. Each press will move the frequency up/down by 0.01 MHz. Press and hold the buttons to search for the previous/next station.

5. To begin manually assigning a preset number to a radio station, press the ■/RPT/MEM button. Press the ▶/II/SCAN button to pick a preset number. Press the ■/RPT/MEM button again to save the station to the preset.



Note

- You can store a maximum of 20 FM radio stations.


6 Play from Bluetooth

Play from classic bluetooth



Note

- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between the unit and the device can reduce the operational range.
- The effective operation range between this unit and your Bluetooth enabled device is approximately 10 meters (30 feet).
- The unit can memorize up to 8 previously connected Bluetooth devices.

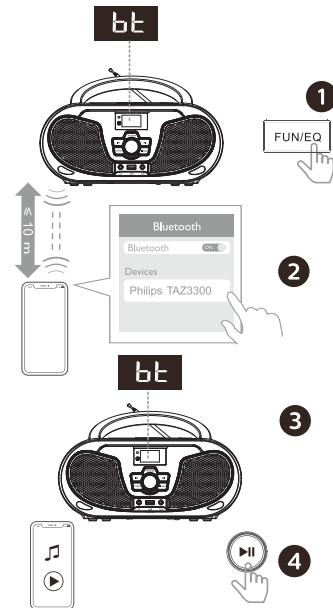

7 Play from USB

1. Press the FUN/EQ button and select bt to enter Bluetooth mode.
2. On your connecting device, enable Bluetooth.
3. In the Bluetooth settings, search for nearby devices.
4. Look for Philips TAZ3300 in the list of available devices. If it doesn't appear, return to step 1.
5. When you see Philips TAZ3300 in the list, select it to start the Bluetooth pairing process, and confirm.
6. Once pairing is successful, any audio played on your device should now come through the boombox.
7. Adjust the volume on the external device and on the boombox to get the desired sound level.
8. Use the controls on the boombox or your external music player to play, pause or skip tracks.



Note

- Make sure that the USB device contains playable audio content.
- Support FAT16/FAT32 file format. Support ≤ 128G.

1. Plug in your USB flash drive with music files.
2. Press the FUN/EQ button and select USb to enter USB mode. The playback will begin automatically.
3. Press the **|<<|** or **|>>|** button to skip to previous or next track, respectively. Press and hold the same button to rewind or fast-forward a track, respectively.
4. Press the **■/RPT** button to set Repeat function: One, File, All, Off.
5. Press and hold the **■/RPT** button to stop playback.
6. Press the **|>||/SCAN** button to restart playback.



Note

Turn off playback and then switch to a different input mode or turn off the device before removing the USB flash drive. Removing the USB flash drive without following these steps may result in data corruption or USB flash drive damage.

8 Listen to an external device

Connect one end of an AUX audio cable (not supplied) to the 3.5mm AUX port on the boombox.

2. Connect the other end to the headphone jack on the external device (e.g., smartphone, MP3 player, records player).
3. Press the FUN/EQ button and select AUX.
4. Turn on the external music player and start playing music. You should now be able to hear the music from the external music player playing through the boombox.
5. Adjust the volume on the external device and on the boombox to get the desired sound level.
6. Use the controls on your external music player to play, pause or skip tracks.



Note

- The AUDIO-IN socket is not for headphones.

9 Connect with headphone

To listen through headphones Connect headphones to the (headphones) jack.

