

PHILIPS

CD Soundmachine

5000 Series

TAZ5000



User manual

Register your product and get support at:
www.philips.com/support

 
Contents

1	Important	3
	Safety	3
	Notice	4
	Declaration of conformity	4
2	Your Micro Music System	5
	What's in the box	6
	Overview of the main unit	7
3	Get started	8
	Connect power	8
	Turn on/Turn off	8
	App download	8
4	Play	9
	Play from disc	9
	Play from USB	9
5	Listen to the radio	10
	Listen to FM radio	10
6	Presetting stations to Favorite Radio Stations	11
7	Play from Bluetooth-enabled devices	11
8	Source mode menu	12
9	Product information	13
	USB playability information	13
	Supported MP3 disc formats	14
10	Troubleshooting	14

1 Important

Safety

Read and understand all instructions before you use this micro music system. If damage is caused by failure to follow the instructions, the warranty does not apply.

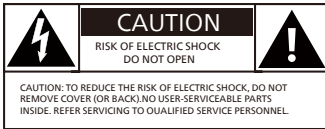

This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering. The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. WARNING: To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the device. CAUTION: To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)



Warning

- Never remove the casing of this apparatus.
 - Never lubricate any part of this apparatus.
 - Never look into the laser beam inside this apparatus.
 - Never place this apparatus on other electrical equipment.
 - Keep this apparatus away from direct sunlight, naked flames or heat.
 - Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power
-
- Make sure that there is enough free space around the product for ventilation.
 - Only use attachments/accessories specified by the manufacturer.
 - Battery usage CAUTION -to prevent battery leakage which may result in bodily injury, property damage, or damage to the product:
 - Install the battery correctly, + and - as marked on the product.
 - The battery (packed or installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
 - Remove the battery when the product is not used for a long time.
 - The product shall not exposed to dripping or splashing.
 - Do no place any source of danger on the product (e.g. liquid filled objects, lit candles).
 - Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
 - Please use the product safely in an environment with temperature between 0°C and 40°C.

Notice

Any changes or modifications made to this device that are not expressly approved by MMD Hong Kong Holding Limited may void the user's authority to operate the equipment.

Compliance

Hereby, TP Vision Europe B.V. declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. You can find the Declaration of Conformity on www.philips.com/support.

Care of the environment

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Regulation (EU) 2023/1542 which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

Removing the disposable batteries

To remove the disposable batteries, see battery installation section.

Environmental information

All unnecessary packaging has been omitted.

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license.



**Be responsible
Respect copyrights**

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove the discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

This apparatus includes this label:



Note

- The type plate is located on the back of the product.

2 Your CD Soundmachine

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/support.

Introduction

 
With this CD Sound machine, you can:

- Listen to FM radio;
- Enjoy audio from discs, and other external audio devices;
- Program the play sequence of tracks.


The CD sound machine offers you Dynamic Bass (DBB) to enrich sound.

What's in the box

Check and identify the contents of your package:

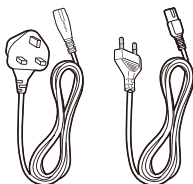


 - Main unit
- Power cord (x2) (Power cord quantity and plug type vary by regions)

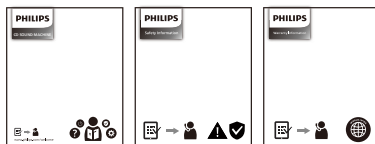

- Quick Start Guide
- Safety sheet
- Warranty card
- Images, illustrations and drawings shown on this user manual are for reference only, actual product may vary in appearance.

 Overview of the main unit

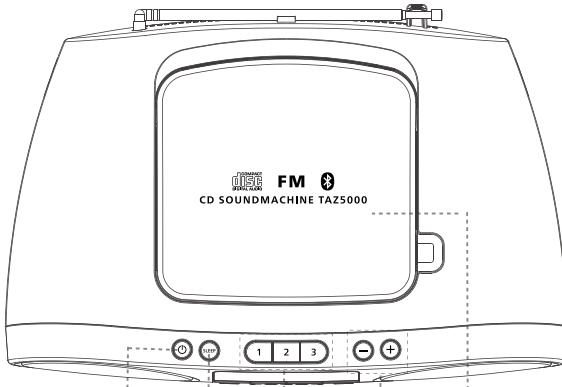

1. Power

- Turn on or turn off the unit.

2. Sleep

- Select a sleep timer enter the standby.

3. Favorite

- Select the favorite preset station.

4. Volume-/+

- Decrease the volume/Increase the volume.

5. Disc tray

- Disc compartment.

6. FM

- Enter the FM mode.

7. USB/AUX IN

- Switch between the USB/AUX IN mode.

8. MENU(MODE)

- Enter source menu setting.

9. Display screen

- Display play information.

10. CD/BT

- Switch between the CD/BT mode.

11. PLAY/PAUSE

- Start and pause play.

12. OK/PROG/PRESET

- Confirm the selection/Program tracks /Store radio stations.

13. EARPHONE

- Connect the external earphone device.

14. USB

- Connect USB storage device.

15. AUDIO IN

- Connect external audio device.

16. ALBUM/PRESET +/-

- Skip the previous/next album/navigate preset station.

17. Stop

- Stop the play.

18. TUNE+/-/NEXT/PREVIOUS

 
 
- Fine tune (increase/decrease) frequency /Skip the next/previous track.

19. AC IN

- Insert power cable plug to AC IN socket.

20. ANTENNA

- FM antenna.

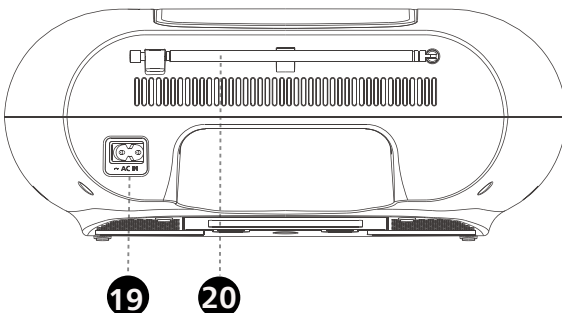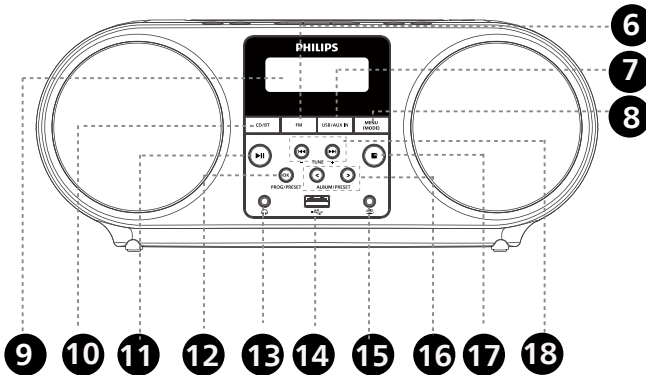

3 Get started

! Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

Connect power

The unit can be powered by either AC power or batteries.

Option 1: AC power

 
! Warning

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! When you disconnect the AC power, always pull the plug from the socket. Never pull the cord.

Connect the AC power cord to the wall socket.



- To save energy, turn the unit off after use.

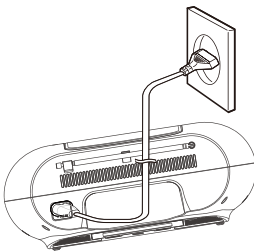


Option 2: Battery power

! Caution

- Batteries contain chemical substances, so they should be disposed of properly.

 - 1 Open the battery compartment.
- 2 Insert 6 batteries (type: 1.5V R14/UM2/CELL) with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

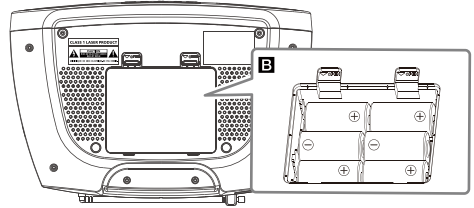

Turn on/Turn off

Press the Standby button on the unit to turn on and switch to last source, press it again to turn off.

 
Switch to standby mode

- The product switches to standby mode automatically when there is no audio detected for over 15 minutes.
- Press Standby button to wake up the product from standby mode.

App download

Scan the QR code and press 'Download' button, or search 'Philips Entertainment' in the Apple App Store or Google Play to download the app.

Get Connected

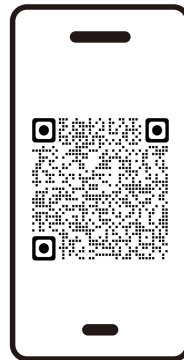


Entertainment app

The Philips Entertainment App puts you in charge of the music you are listening to. You can customize the sound so that your music experience always best suits your needs.

4 Play

Play from disc

 - 1 Open the disc compartment.
- 2 Insert a disc with the label side up.
- 3 Close the disc compartment.
- 4 Press **CD/BT** button on the unit to select DISC source.
- 5 Play starts automatically. If not, press **▶II**.

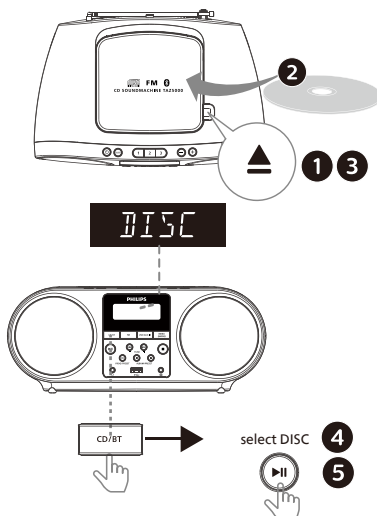


Play from USB



Note

- Make sure that the USB device contains playable audio content.

 
- 1 Insert a USB device into the socket.
- 2 Press **USB/AUX IN** button on the unit repeatedly to select the USB mode.
- 3 Play starts automatically. If not, press **▶II**.

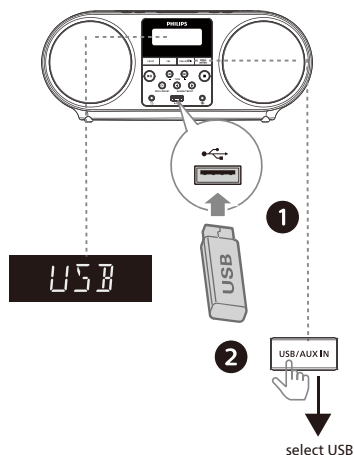

Listen to an external device

You can listen to an external device through this unit with an MP3 link cable.

 - 1 Connect an MP3 link cable (not supplied) between:
 - **AUDIO IN** jack (3.5 mm) on the product,
 - and the headphone jack on an external device.
- 2 Press **USB/AUX IN** repeatedly to select **AUDIO IN** source.

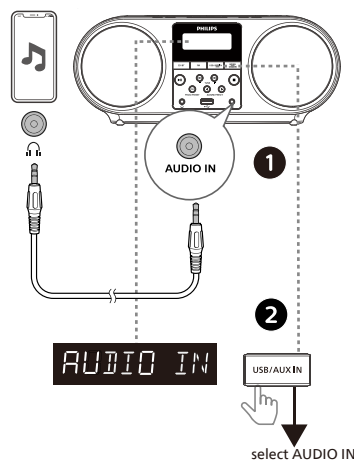

5 Listen to the radio

With this product, you can listen to FM radio.



Note

- Position the antenna as far as possible from TV, or other radiation source.
- For optimal reception, fully extend and adjust the position of the antenna.

Listen to FM radio

Tune to an FM radio station

- 1 Press **FM** button to select FM source.
- 2 Press and hold **◀◀** / **▶▶** for three seconds.
 - ↳ The radio tunes to a station with strong reception automatically.
- 3 Repeat step 2 to tune to more stations

To tune to a weak station:

Press **◀◀** / **▶▶** repeatedly until you find optimal reception.

Store FM radio stations automatically



Note

- You can store a maximum of 30 FM radio stations.

- 1 Press **FM** button to select FM source.
- 2 Press and hold **PROG/PRESET** for three seconds.

Store FM radio stations manually

- 1 Tune to a FM radio station.
- 2 Press **PROG/PRESET** to activate program mode.
 - ↳ **[P01]** is displayed.
- 3 Press **ALBUM/PRESET** to allocate a number from 1-30 to this radio station, and then press **PROG/PRESET** to confirm.
- 4 Repeat steps 1-3 to program more stations.



Note

- To overwrite a programmed station, store another station in its place.

Select a preset FM radio station

In FM mode, press **<** / **>** to select a preset number.

- While listening to FM radio, you may toggle stereo and mono sound in the menu.

Display RDS information

RDS (Radio Data System) is a service that allows FM stations to show additional information.

- 1 Tune to a FM radio station.
- 2 Toggle **INFO** menu to display various RDS information (if available), such as station name, program type, time, etc.

6 Presetting stations to Favorite Radio Stations

You can preset up to three favorite stations to FAVORITE RADIO STATIONS (1-3) buttons. Assign or FM program for each button.

1 Press FM repeatedly to turn on the radio function and select the band "FM."

2 Tune to the station you want to preset.

3 Press and hold the desired FAVORITE RADIO STATIONS (–SET) (1-3) button until you hear a beep.

The tuned station is preset to the selected button of FAVORITE RADIO STATIONS (1-3) and the same number as that of the button will light up on the display.

(Example: Presetting FM 87.50 MHz to number)

To change the preset station

Repeat steps 1 to 3.

 
 
 
The preset station on the button will be replaced by the new one.

Listening to preset stations with FAVORITE RADIO STATIONS

Press the desired FAVORITE RADIO STATIONS (1-3) button.

Note

To prevent the preset from being changed by mistake, do not hold down the button. If doing so, the preset on the button will be replaced by the currently tuned station.

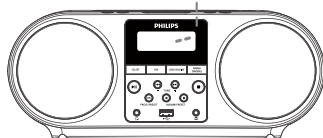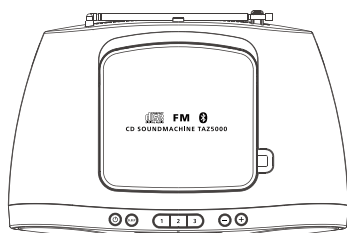


7 Play from Bluetooth-enabled devices



Note

 - Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between the unit and the device can reduce the operational range.
- The effective operation range between this unit and your Bluetooth enabled device is approximately 30 meters.
- The unit can memorize up to 8 previously connected Bluetooth devices.

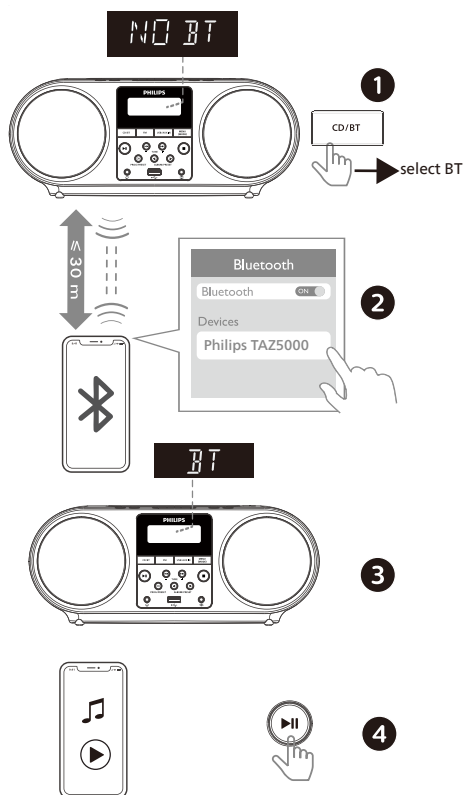

- 1 Press **CD/BT** on main unit to select the Bluetooth source.

↳ **[NO BT]** (Bluetooth) is displayed.

- 2 On your device that supports Advanced Audio Distribution Profile (A2DP), enable Bluetooth and search for Bluetooth devices that can be paired (refer to the user manual of the device).

Select '**Philips TAZ5000**' on your Bluetooth enabled device.

- 3 After successful pairing and connection, the Bluetooth indicator turns **[BT]**, and you will hear the prompt sound from the unit.

- 4 Play audio on the connected device.

- ↳ Audio streams from your Bluetooth enabled device to this product.

8 Source mode menu

The source mode menu is used to operate some function in different mode except button direct function on the unit, it also view related information and includes CD/USB/FM/Bluetooth/AUDIO IN menu.

CD/USB mode:

The CD/USB source mode includes menu as below:

MODE/DBB/INFO/DIM/SYSTEM.

MODE: Repeat mode for CD, USB source, Stereo or Mono mode for FM source.

DBB: The item includes the DBB2/DBB1/OFF option.

INFO: Toggle display different information.

DIM: Used to adjust the brightness of the display screen, it can adjust HIGH/MEDIUM/LOW three types brightness of the display screen.

SYSTEM: The item has three option: Dim/Reset/Version.

The reset is used to reset factory setting.

Version displays the current source module version.

Bluetooth/AUDIO IN mode :

The Bluetooth/AUDIO IN source mode includes menu as below:

Bluetooth source mode menu:

BT PAIR/DBB/DIM/SYSTEM.

BT PAIR: The item includes BT PAIR YES/NO.

The DBB/DIM/SYSTEM menu please refer as above CD/USB source mode menu.

AUDIO IN source mode menu:

DBB/DIM/SYSTEM.

The DBB/DIM/SYSTEM menu please refer as above CD/USB source mode menu.

FM mode:

The FM source mode includes menu as below: SCAN SET/MODE/DBB/RDS INFO/DIM/SYSTEM.

SCAN SET : Select the strong or all.

MODE : Switch the stereo or mono mode.

RDS INFO : Display RDS information.

The DBB/DIM/SYSTEM menu please refer as above CD/USB source mode menu.

9 Product information



Note

- Product information is subject to change without prior notice.
- **Rated output power:**
Total 4W (RMS)
- **Acoustic frequency response:**
125Hz-20KHz
- **Speaker driver:** 2 x 3"full range 4Ω;
- **Bass enhancement:** 2 x bass port
- **Support disc type:** CD-DA, CD-R, CDRW, MP3-CD (8/12 cm)
- **Bluetooth version:** V5.4
- **Bluetooth supported profiles:** A2DP V1.3, AVRCP V1.6
- **Bluetooth frequency band / Output power:** 2.402GHz~2.480GHz ISM Band / ≤ 9dBm (Class 2)
- **USB playback:**
 - Type A, USB Direct 2.0,5V/500mA, MSC fle format, FAT 16/32
 - Support USB up to 128G
- **Tuner frequency range:**
FM 87.5-108MHz
- **Preset stations:** 30 (FM)
- **AUDIO IN input level:** 500mV +100mV RMS
- **Power:** 100-240V~, 50/60 Hz(AC Input)
- **Operation power consumption:**
12 W
- **Standby power consumption:**
< 0.5W
- **Dimensions (W x H x D):**
310 x128 x 210 mm (Main unit);
- **Weight:** 2.05 kg (Main unit);

USB playability information

Extension	Codec	Sample Rate	Bitrate
.mp3	MPEG 1 Layer 1	32~48 kHz	32~320 kbps
	MPEG 1 Layer 2	32~48 kHz	32~320 kbps
	MPEG 1 Layer 3	32~48 kHz	32~320 kbps
.wav	WAV	8~48 kHz	Up to 1536 kbps
.wma	WMA	8~48 kHz	48~192 kbps

Compatible USB devices:

- USB flash memory (USB2.0 or USB1.1)
- USB flash players (USB2.0 or USB1.1)
- memory cards (requires an additional card reader to work with this unit)

Supported USB formats:

- USB or memory fle format: FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA bit rate (data rate) : 48~192 kbps
- WAV bit rate (data rate) : Up to 1536 kbps
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- File name in Unicode UTF8 (maximum length: 32 bytes)

Unsupported USB formats:

- Empty albums: an empty album is an album that does not contain MP3 files, and will not be shown in the display.
- Unsupported file formats will be skipped. For example, Word files (.doc) or MP3 files with the extension .dif will be ignored and will not be played.
- WMA, AAC, WAV, PCM audio files: DRM protected WMA files. (Note: only support some wav audio files).
- WMA files in lossless format.

Supported MP3 disc formats

- ISO9660, Joliet
- Maximum title number: 128 (depending on file name length)
- Maximum album number: 99
- Supported sampling frequencies: 32 kHz, 44.1 kHz, 48 kHz
- Supported Bit-rates: 32~256(kbps), variable bit rates

10 Troubleshooting



Warning

- Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No power

- Make sure that the AC power cord of the device is connected properly.
- Make sure that there is power at the AC outlet.
- As a power-saving feature, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

No sound or poor sound

- Adjust the volume.
- Check that the speakers are connected correctly.
- Check if the stripped speaker wires are clamped.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.
- As a power-saving feature, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

Cannot display some files in USB device

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

USB device not supported

- The USB device is incompatible with the unit. Try another one.

Poor radio reception

- Increase the distance between the unit and your TV or other radiation sources.
- Fully extend the radio antenna.
- Connect an outdoor radio antenna. You may purchase a replacement antenna cable with a L-shape plug on one end, as shown below.
 - Connect the L-shape plug to this product, and fit the plug on the other end into your wall socket.

Music playback is unavailable on this unit even after successful Bluetooth connection.

- The device cannot be used to play music through this unit wirelessly.

The audio quality is poor after connection with a Bluetooth-enabled device.

- The Bluetooth reception is poor. Move the device closer to this unit or remove any obstacle between them.

Bluetooth cannot be connected with this unit.

- The device does not support the profiles required for this unit.
- The Bluetooth function of the device is not enabled. Refer to the user manual of the device to find out how to enable the function.
- This unit is not in pairing mode.
- This unit is already connected with another Bluetooth-enabled device. Disconnect that device and then try again.

The paired mobile device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to this unit or remove any obstacle between them.
- Some mobile phones may connect and disconnect constantly when you make or end calls. This does not indicate any malfunction of this unit.



Specifications are subject to change without notice.

2024 © Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

TAZ5000_10_UM_V1.0

