


PROSCAN

RUGGED PORTABLE BLUETOOTH SPEAKER MODEL NO:PSP1820

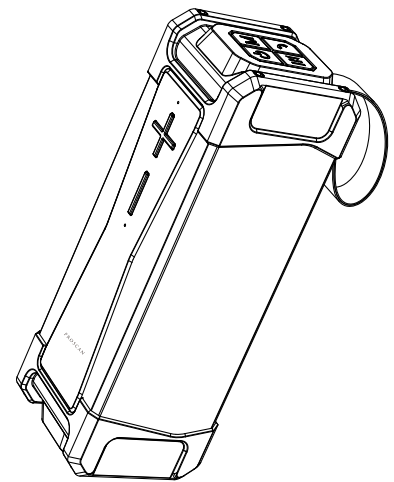

USER MANUAL

This product has been manufactured and sold under the responsibility of CURTIS INTERNATIONAL LTD.
PROSCAN, and the PROSCAN logo are trademarks used under license by CURTIS INTERNATIONAL LTD. – further information at www.proscan-brand.com.
All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

PACKING LIST

Upon opening the package, please check for the following items:

- 1 x Speaker
- 1 x Charging cable
- 1 x Instruction manual


DO'S AND DON'TS

- Do not play music at excessive levels as damage to hearing and / or equipment may result.
- Do not use outdoors in wet or in damp surroundings.

SPECIFICATION

Power: 7W*2
Frequency Response: 90Hz-20KHz
SNR: ≥85dB
THD: ≤10%
Battery: 1500mAh 3.7V
DC input: 5V/1A
Speaker driver: 66mm X2
FM: 87.5~108.0 MHz
Transmission Distance: 10m
Dimension: (WxHxD): 86X86X253 mm

PRODUCT OVERVIEW

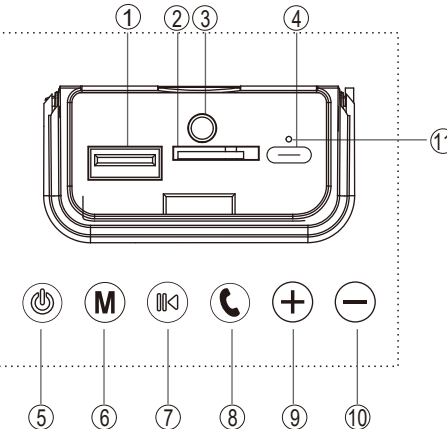

- 1.USB JACK
- 2.TF JACK
- 3.AUX input
- 4.DC interface (5V)
- 5.Power(OFF/ON)
- 6.MODE Lightly press to enter into selection for Bluetooth, FM Radio,AUX Input,USB/TF
- 7.Play/Pause&TWS (Wireless Bluetooth Connection: under bluetooth mode, long press this button to pairing another TWS speaker; Under FM mode, connect charge cable as antenna, long press Play/Pause&TWS to enter into automatic scan and all the scanned radio stations will be saved automatically.)
- 8.Phone call
- 9.Next track/Volume up
- 10.Previous track//Volume down
- 11.Charging Status RED=Charging
Light off = Fully Charged

POWER SOURCE

- 1.Please charge the unit at least 4 hours before first time using.
2. Push the on/off switch to turn on or off the unit.

CHARGE THE BATTERY

When the battery is charging, the CHARGE STATUS lights shows on the LED display is red. After the battery has fully charged, the light turns off. 1. Connect the USB charge cable to the DC 5V interface of the speaker firmly. 2. When the battery is fully charged, please disconnect the USB charge cable from the speaker. 3.The speaker works normally when charging.

MODE

Lightly press to enter into playing mode selection(Bluetooth,FM Radio,AUX Input, USB/TF).

PREVIOUS/NEXT BUTTON

Under playing status, press PREVIOUS/NEXT button to get back to a previous or next song.Press and hold to volume down or up.

PAUSE/PLAY BUTTON

To stop playing the current track, please press PAUSE/PLAY button on the control panel. Press it once again to continue playing.

Phone call

When calling, press to answer a call,press again to hand up. long press to reject a call,press twice to ring up a call.

AUX IN JACK

1. Connect an audio cable to the AUX IN JACK of the speaker and to the audio output socket on the external audio devices

such as MP3 player, discman,etc,then select AUX by pressing the MODE button on the control panel .
2.Play from an external audio device.

USB/TF JACK

Insert USB/TF card directly for playing.

FM FUNCTION

Lightly press MODE button to switch to FM mode, connect charge cable as antenna,long press PLAY/PAUSE button on control panel for automatic searching and saving the radio stations, by pressing PREVIOUS or NEXT you can select a previous or next radio station.

BLUETOOTH CONNECTION

Press MODE button on control panel to select Bluetooth mode. Simultaneously turn on the Bluetooth setting on your phone, tablet or any other bluetooth enabled audio device and select "PROSCAN PSP1820" , the unit and device will then connected via Bluetooth. Press the "NEXT SONG" and "PREVIOUS SONG" button on the control panel to select the song, press " PLAY/PAUSE" button to control the playing status.

TWS PAIRING MODE

1. Powered on two PSP1820 units and make sure that both units are on the Bluetooth mode.
2. Don't connect to any Bluetooth devices.
- 3.Double press the 'MODE' button. It will pair both units together after a few seconds along with a tone coming out after connected successfully.
4. Turn on the Bluetooth devices and searched the pairing name of PROSCAN PSP1820 and tap to connect it.
5. Now you can play the music from your Bluetooth devices.

FCC STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that maycause undesired operation.

FCC RF Radiation Exposure Statement:
1.This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

2.This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with minimum distance **5mm** between the radiator and your body.
To make a warranty claim, please email support@curtiscs.com or call 1-800-968-9853.

90 DAY WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such

warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

For service assistance and product information, please call: 1-800-968-9853.
Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON,
L5S 2A3 www.curtisint.com

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.

Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.