



# LCD Advertising Player **User Manual**



**This manual contains important safety precautions and information of correct use.  
Please be sure to read this manual carefully before use so as to avoid any accidents.**

Do not place the product in hot, wet or dusty environment, especially in summer, do not leave the product inside a car with all windows closed.

Avoid dropping, impacting or shaking the product violently, otherwise it may cause damages or malfunctions. Select a proper volume to avoid ear problem when using earphones.

Do not cross the road or drive vehicles, using headphones to avoid traffic accidents.

Be sure to use the provided chargers and accessories in the package.

Be sure to charge the product when the following situations take place,

- The battery icon shows lower or empty.
- System automatically shut down and it turns off soon after restart.
- Operation keys do not respond properly.

# specification

## Hardware

Color LCD Display Screen  
Capacitive multi-touch (10 touch) point function  
Wi-Fi (IEEE802.11 b/g/n) for internet connection  
USB host for OTG function  
Support SD card slot recognizing up to 64GB  
Built-in speaker & Built-in MIC  
AC power supply 100V-240V  
Wall mount or stand on floor design

## Software

Android OS  
Google browser  
Wi-Fi connection  
4k HD file playback  
Support APK installation  
Video: AVI, RM/ RMVB, FLV, MPG4 – 1, MPEG – 2 etc.  
Audio: MP3, WMA, AAC, WAV etc.  
Photo: JPEG, BMP, GIF, PNG, TIFF

### ***Important Notice***

If the device is freezing or stuck, press the reset or remove power plug to re-boot.

- When the performance is slow after using some applications, it is recommended to close running application in setting menu.

### **Caution**

 
- For charging, be sure to use the power AC cable or adapter that is provided in the package, otherwise, the device may be damaged and does not work.
- The device is equipped with high performance chips and needs careful operation

# 1. Power On/Off

this product support plug & play function; Connect DC to power on, remove DC to power off.

## 2. Desktop

After turning on the device, desktop displays with shortcut icons and arrow panel at the right side

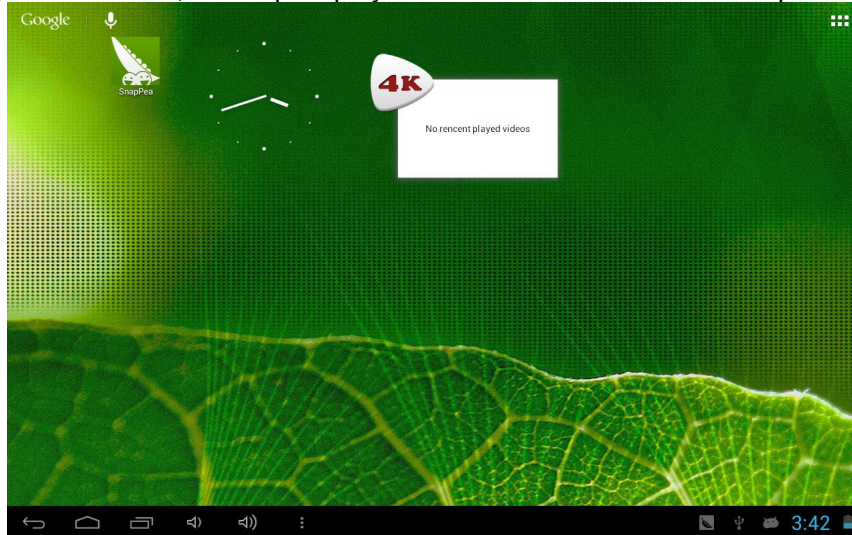


### **3. Standby mode(Screen off mode) / Unlock the screen(optional)**

Standard without this lock mode, it's only optional.


# 4. System settings

 On the desktop, press menu button and select system settings.

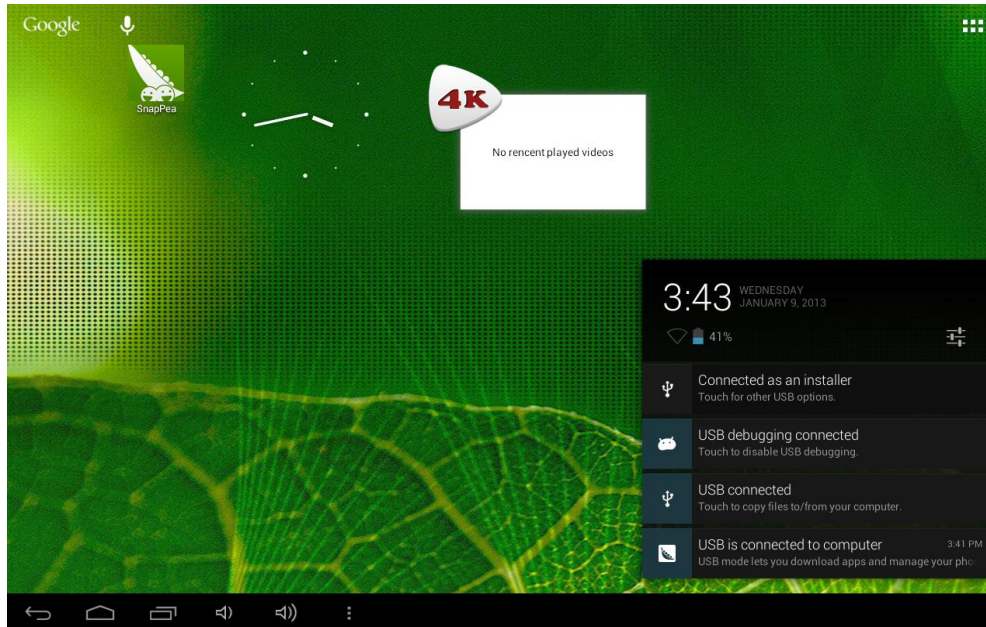


# Press System Settings
 
## 1. Wireless & networks

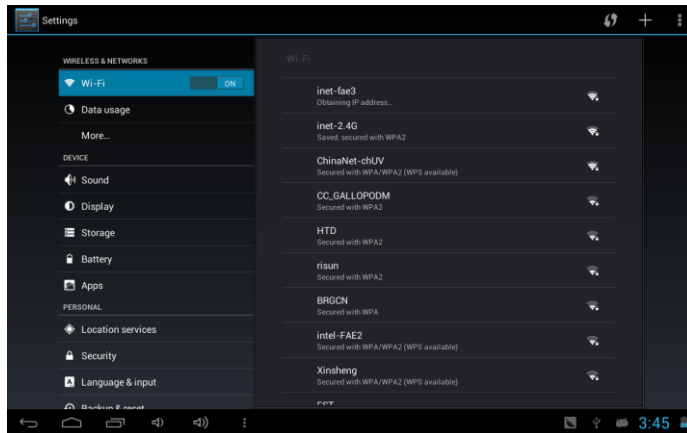


## 2. Data usage

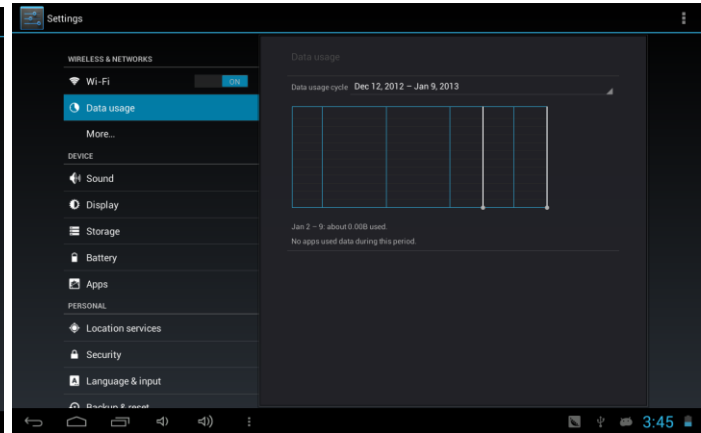 


Wi-Fi – Press Wi-Fi to turn on/off Set up each setting as you like. Wi-Fi settings - Press Wi-Fi settings, then the device will automatically search the available Wi-Fi signals. Select the network you want to connect with.



### 3. More...

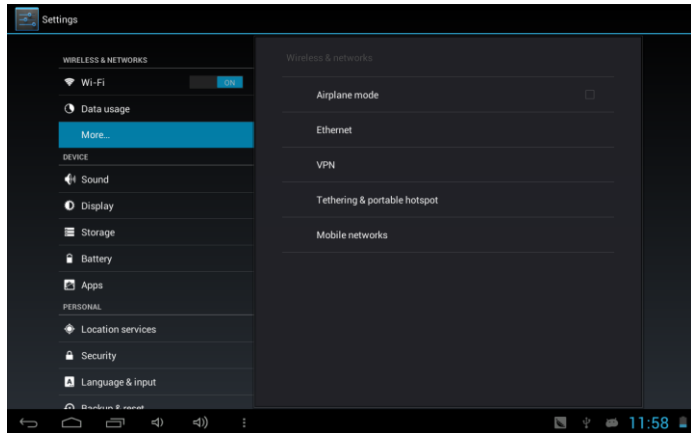 


### 4. Sound

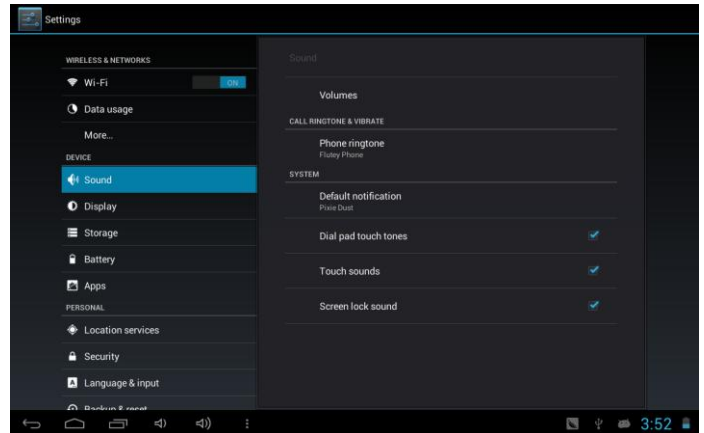 


For more information on mobile data and Bluetooth options, Flight mode, Bluetooth sharing, 3G support information

## 5. Display

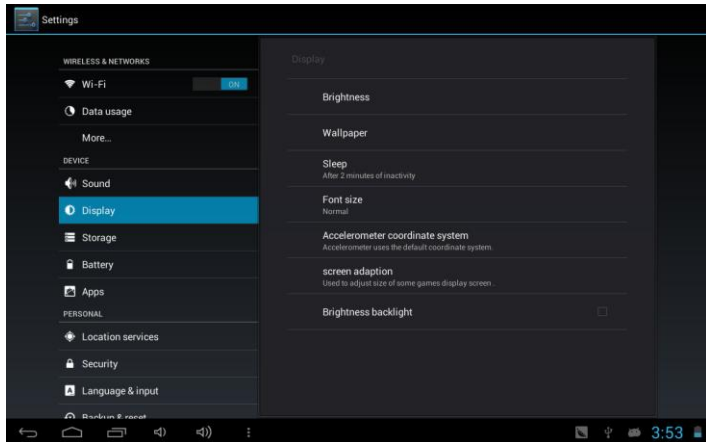 

Set up each setting as you like


## 6. Storage

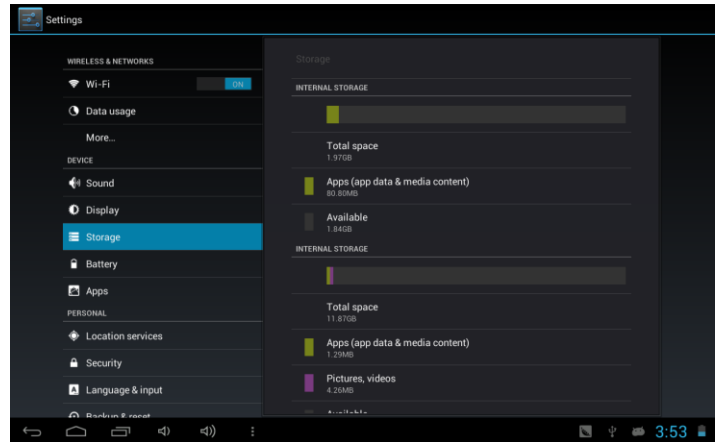 

Check device memory and microSD card status.  
Unmount SD card – Unmount the SD card for safe removal.

## 7. Battery

 Optional, standard without battery.

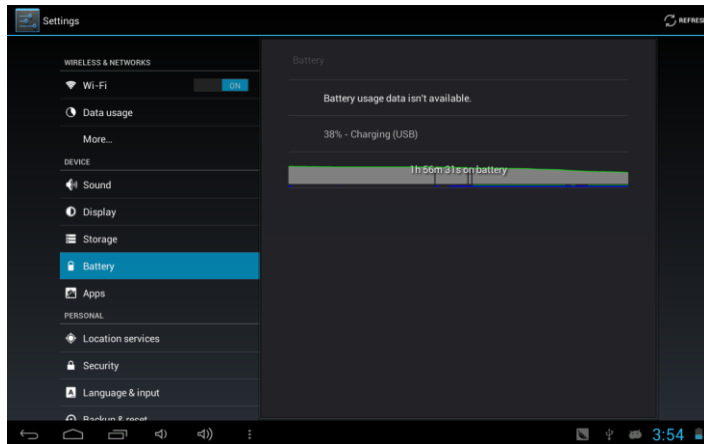

## 8. Apps

Manage downloaded or running applications.



Downloaded.

All installed application are listing.



Keep pressing an application to manage.  
Press Uninstall to uninstall the selected application.

Running services  
View and control currently running services.

## **9. Account & sync**

Create your account. After connecting Wi-Fi network, the e-mailing system synchronizes your account with the device. Emails are automatically downloaded into the device.

## **10. Location services**

 
Google's location service - Let apps use data from sources such as WiFi and mobile networks to determine your approximate location

## 11. Security

Screen lock – Protect your device from unauthorized use by creating a personal screen unlock pattern. Make passwords visible – Show password as you type.

Unknown sources - If you want to allow installation of non-Market

Applications, Press Unknown sources and presses OK.

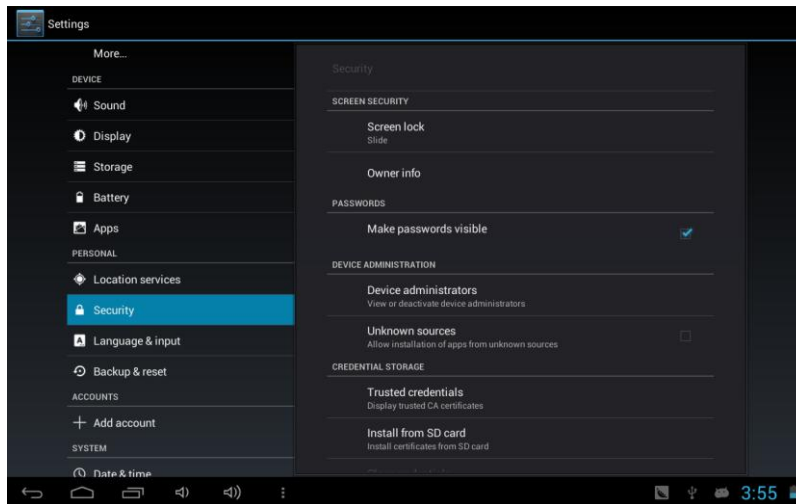


Install from SD card – Install encrypted certificates from SD card.

## 12. Language & input

 Language – Choose your preferable language.

Keyboard & input method – Change keyboard & keyboard settings.

On Language & input settings, if you need other languages besides English on keyboard, press the relevant keyboard and enter the chosen Keyboard settings, select Keyboards, press the language you need.

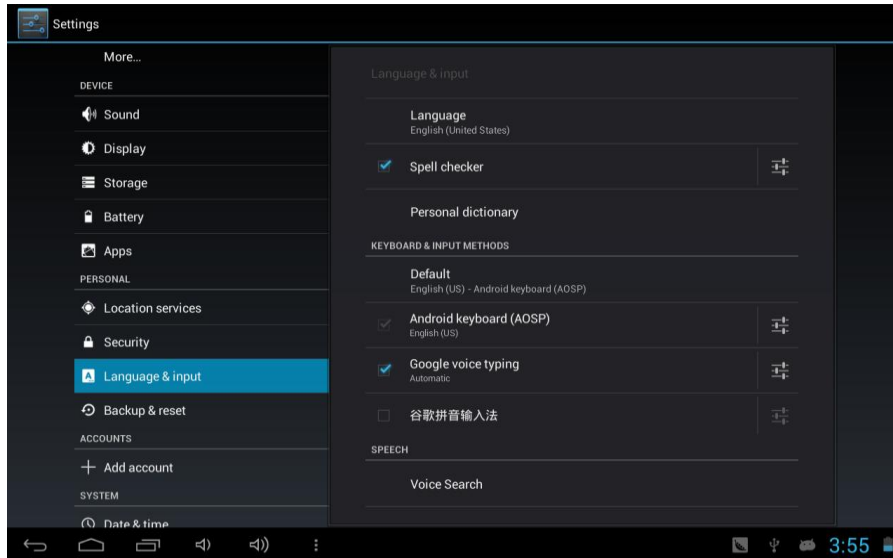

## 13. Backup & Reset

## 14. Date & time

Set date & time and format

## 15. Accessibility

 
 
Set date & time and format

## 16. Developer options

Set options for application development

## 17. About tablet


See status, legal information, ETC

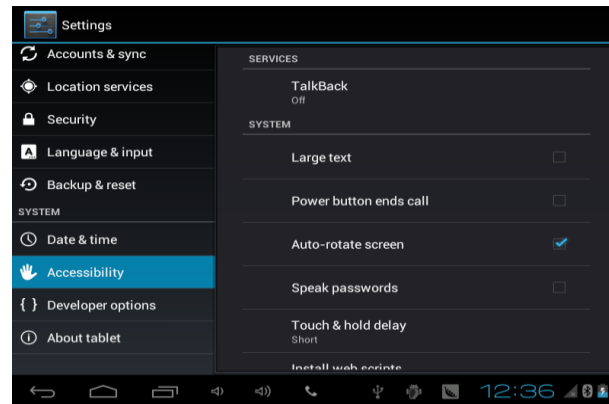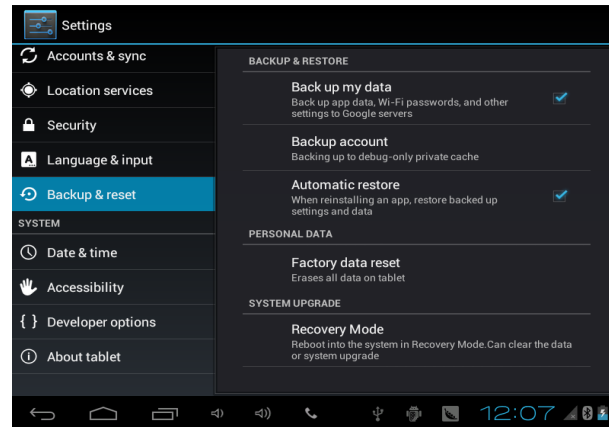





# How to connect/disconnect the device with/from the computer

  On main desktop, connect the device with the PC,  
touch right side of the status bar on the bottom of desktop

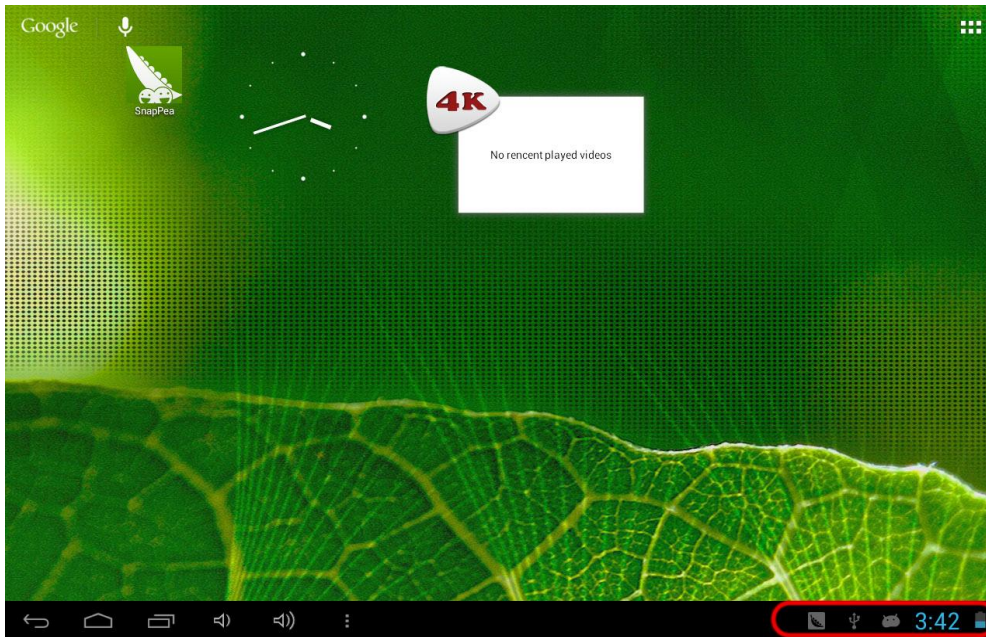

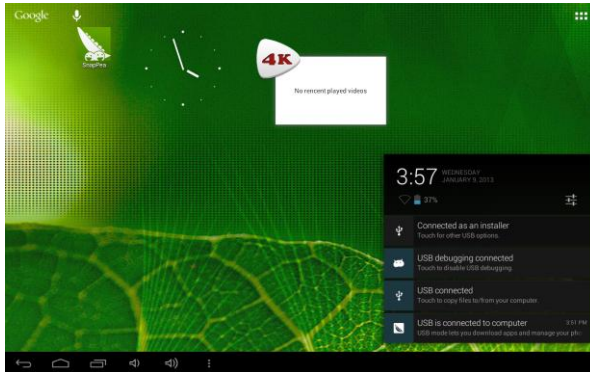

 Press “USB connected”, select “Turn on USB storage”.  
The device is recognized at Explorer of the computer.  
Now you can use it as an external storage.

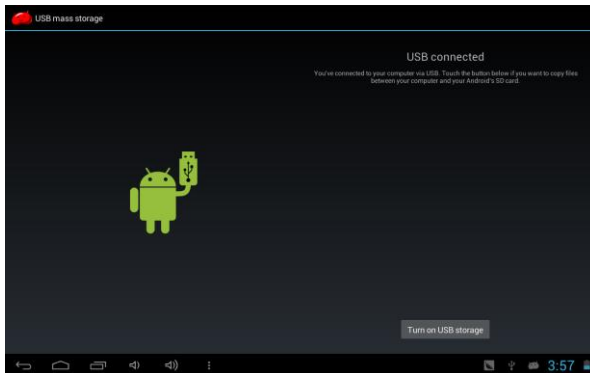

After finishing your work,  
Press “Turn on USB storage”to unmount it.

# How to install Applications(.apk file) into the device

## **Method 1.**

1. Connect the device with internet. See above [1.Wireless & networks] in order to connect internet.
2. Run “Getjar” and search the applications you want to install.
3. Follow the instruction on the screen for installation.


## **Method 2.**


1. With your computer, search application file(.apk) that you want to install into the device.
2. Download the file(.apk) into your computer.
3. Connect the device with your computer.  
See above [How to connect/disconnect the device with/from the computer.]
4. Copy and paste .apk file into the device and disconnect it from your computer.
5. Run “File browser” and .apk file that was copied into the device.
6. Press the file to install and follow the instruction on the screen.

**Note**

# How to make desktop icons


Press the upper right side icon of desktop, the pop-up displays.

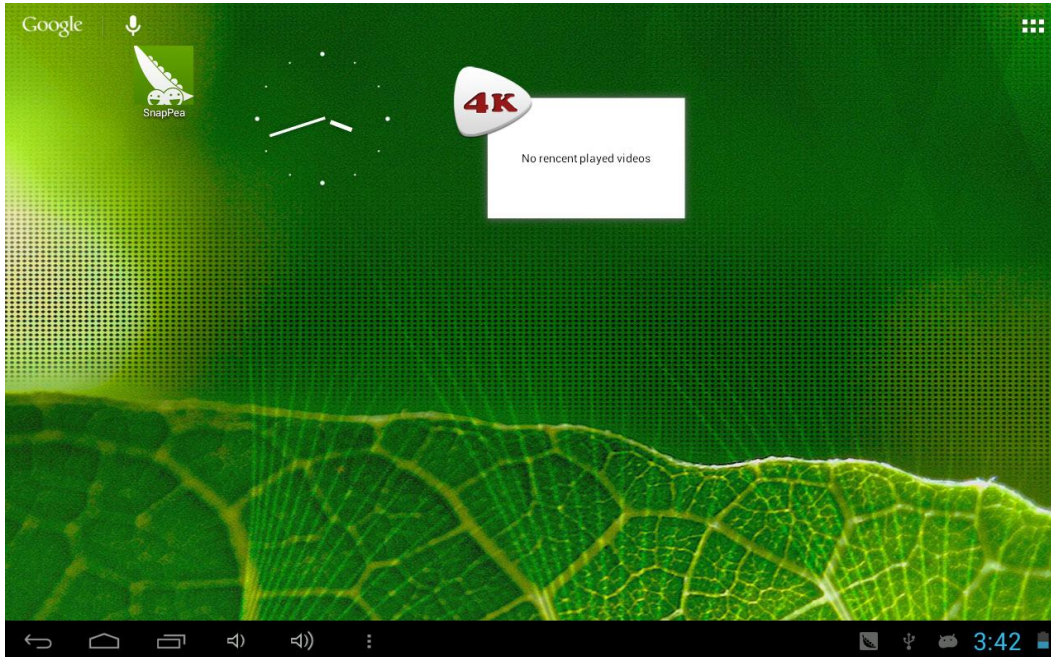 

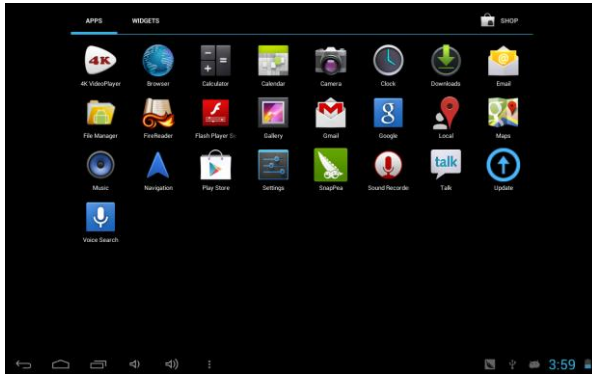 

### **Shortcuts**

 Long press your desired APK icon and put it on the desktop.

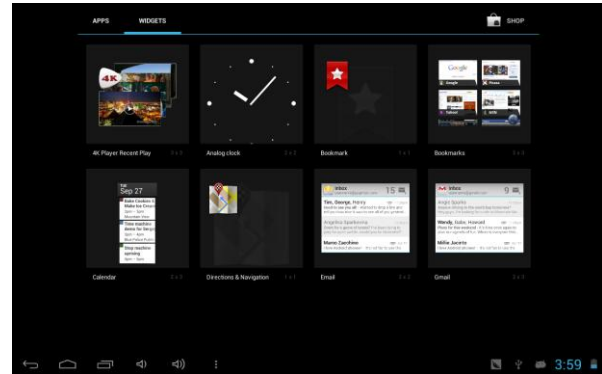

### **Widgets**

 
Press Widgets and press your desired icon to put it on the desktop.

### **Wallpaper**

Long press the desktop, press Wallpapers and select one of categories of wallpaper. Select one you desire and press Set wallpaper.

# Change Input Method

If your device was installed with other more input method, long press setting icon of keyboard, and the pop-up displays.



## Webpage not available

The webpage at <https://www.google.com/webhp?client=tablet-unknown&source=android-home> might be temporarily down or it may have moved permanently to a new web address.

### Suggestions:

- Make sure you have a data connection
- Reload this webpage later
- Check the address you entered



Select the installed keyboard, then the keyboard will appear with your desired language you install

### FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.