

Smart board

USER MANUAL



TOUCH SCREEN SOLUTION



Table of Contents

1. Important information and safety cautions	01
2. How to install	02
2.1 How to install wall mounted stand	02
2.2 How to intsall floor stand	04
3. Ports and keys instructions	07
4. Wireless Transmitter FunctionIntroduction	11
5. Basic Operation	12
6. Quick use guide	13
6.1 Free accessories list	13
6.2 How to turn on-off device	13
6.3 How to Install WIFI antenna	14
6.4 How to connect PC	14
7. Troubleshooting Guide	15

1.Important information and safety cautions

1. Please read the instructions carefully before using and keep it for future reference.
2. Installing the device on stable place in case of falling and injuries, especially for children. When mounting the device on a wall, be sure to install the product according to the method recommended by the manufacturer. This is a safety issue.
3. Keep the product away from high temperature and humidity environment.
4. Regular cleaning can prolong the service life of the machine. Before cleaning, be sure to turn off the power and unplug the power cord.
5. The way to keep the screen clean and effective is to add a small amount of softener or cleaner in warm water, wet it with a soft cloth, wring it out and wipe it with it. If there is extra water on the screen, make sure it air drying before you open the machine.
6. To remove dirt or dust from the machine case, wipe with soft, dry, flannelette. Be sure not to use wet cloth.
7. If you want your machine to rest for a period of time, it is best to unplug the power to prevent any damage caused by lightning or radio waves.
8. Do not use attachments which are not recommended by the manufacturer. Use of improper attachments can result in accidents. If machine need to repair, make sure the replacement the same characteristics and performance as the original parts. Use of unauthorized parts can result in fire, electric shock or other danger.
9. When damage requiring service, just unplug the power cord from the AC outlet. Do not open the machine arbitrarily. If you have any questions, please contact the relevant customer service personnel or maintenance personnel.

CAUTION


1. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. This user manual includes detailed usage instructions for your product. Please read this manual thoroughly.
3. Figures and illustrations in this user manual are provided for reference only and may differ from actual equipment appearance.
4. Equipment design and specifications may be changed without notice.

2.How to install

2.1 How to install wall mounted stand

Step1


Please put the equipment on flat surface(down the screen), between the equipment and the mesa, there should be a soft object space (e.g. rubber pad, cotton, foam, etc.) in order to avoid the equipment surface to be bruised as shown in the figure below:

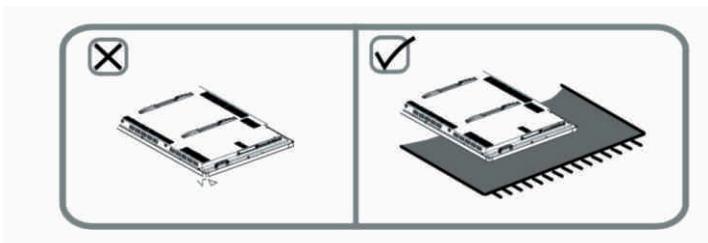

Step2


Please check the assembling accessories before installing. Different model and size different accessories. The picture is for reference only, the specific kind prevail. Please refer to following pictures to installing.

Part Name	Qty	Code
Hanging plate	1	a
Hanging arm	2	b
7*52 Screws	4	c
10*80 Screws	2	d
10mm Expansion rubber plug	4	e

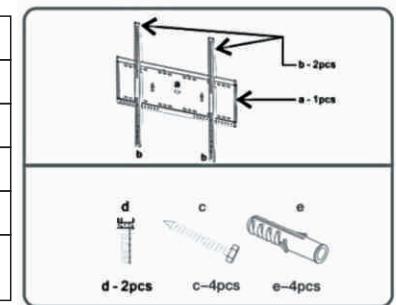


Step 3

Take out 4pcs screws from inside the backside of device, add 2pcs hanging arm b on the relevant place, turn 4pcs screws tightly to fasten b. Then put the 2pcs screws d into the associated location, no fixed temporarily.

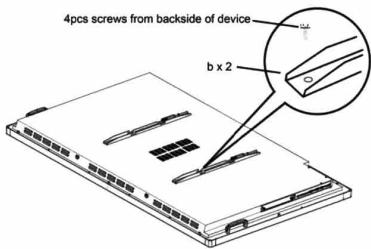


Step 4

Advising to choose solid wall or concrete wall, use hanging plate a to adjust the reached height, confirming 4 holes, it is recommended to use 10 mm drill bit punch, hole depth is greater than the sum of inflation rubber plug length plus the wall surface coating thickness. Put 4pcs e into holes completely by hammering. If it is not tighten, need to replace the right drill bit. As shown below:

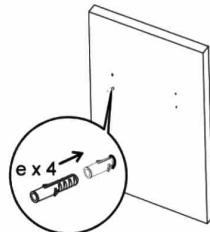


Step 5

Turning 4pcs screws c into 4pcs e to fasten a by screwdriver. As shown below:

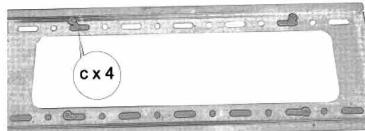

Step 6

Place the device horizontally and vertically by hanging arm on the wall panel. Adjusting the device in the middle of hanging plate a. Finally turn the 2pcs screws d to fix the device.

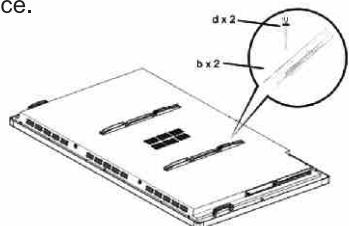


2.2 How to install floor stand (optional)

32-60 inch advise to use small floor stand. 65-98inch advise to use big floor stand.

Step1


Please put the equipment on flat surface(down the screen), between the equipment and the mesa, there should be a soft object space (e.g. rubber pad, cotton, foam, etc.) in order to avoid the equipment surface to be bruised as shown in the figure below:

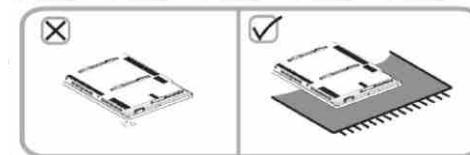

Step 2:

Please check the assembling accessories before installing. Different model and size different accessories. The picture is for reference only, the specific kind prevail. Please refer to following pictures to installing.

part Name	Qty	Code
Hanging plate	1	a
Hanging arm	2	b
Holder	2	r
Middle plate	1	g
Base plate	1	h
Wheels	4	i
M8 Nut	4	j
Spacer	4	k1
M6 Spacer	8	k2
M8*30 Screw	4	s1
M6*50 Screw	4	s2
M8*60 Screw	4	s3
M6*40 Screw	2	s4
Wrench	1	w

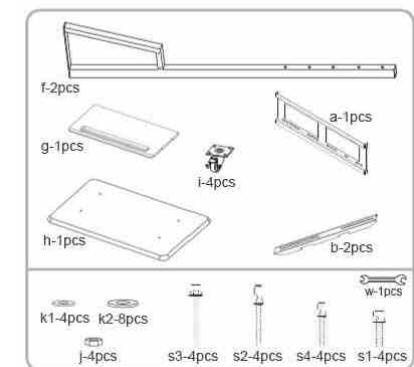

Step 3:

Take out 4pcs screws from inside the backside of device, add 2pcs hanging arm b on the relevant place, turn 4pcs screws tightly to fasten b. In order to ensure the stability and safety of the equipment, it is forbidden to hang the equipment upside down. If this step already done, please ignore.

Step 4:
Assembling 4pcs wheels i into base plate h by only turning.

Step 5:
Connecting 2pcs holders f and base plate h by turning 4pcs s1-k2, no fixed temporarily. (In order to better assemble middle plate and hanging plate)

Step 6:
Fasten middle plate g and 2pcs holders f by turning 4pcs s2-k1, then fasten hanging plate a and 2pcs holders f by turning 4pcs s3-k2-j

Step 7:
Fasten 4pcs screws s1-k2 under the base plate by wrench

Step 8:
Place the device horizontally and vertically by hanging arm on the wall panel.
Adjusting the device in the middle of hanging plate a. Finally turn the 2pcs screws s4 to fix the device.


DISCLAIMER

According to the following situation (one of the following), the company does not assume the responsibility for free warranty.

- Incorrect using methods, product damage caused by violation of product instructions.
- Unauthorized alteration or maintenance.
- Hardware damage caused by improper assembly.
- Exceeding the permitted using environment.
- Because of the abnormal external forces.
- Natural disaster or other irresistible force.
- Unable to provide valid purchase vouchers.


Any personal or property damage caused by any improper installation or improper use, we do not assume the responsibility.

If you have any questions about installing stand, please contact our after-sales service dep. anytime.

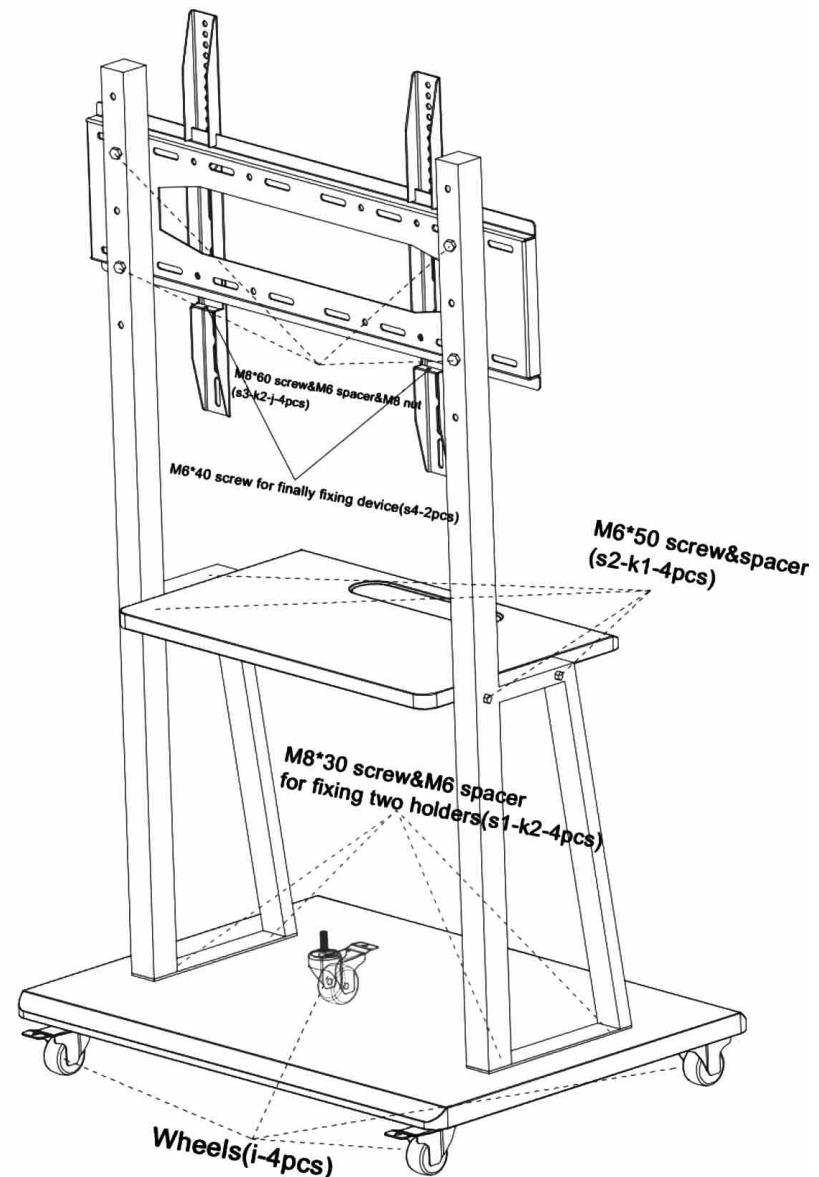


3. Ports and keys instructions

1. Model size:55"

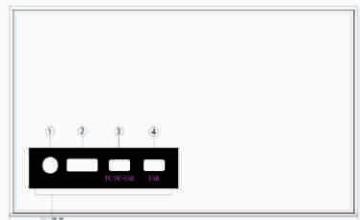


2. Model Sizes:65",75",85",86"

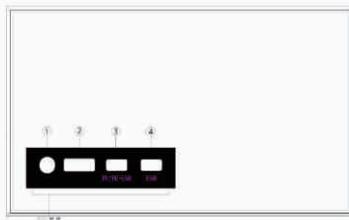

Interface	Function Description
① POWER	Turn On
② Indicator / Remote Sensor	Indicator Light / Remote controller sensor
③ USB	TV/PC USB Input
④ USB	PC USB Input

Interface	Function Description
① Indicator / Remote Sensor	Indicator Light / Remote controller sensor
②③ USB	TV/PC USB Input
④ TOUCH	Touch Signal Output
⑤ HDMI	HDMI Input
⑥ ECO	Energy saving
⑦ POWER	Turn On/Off
⑧ HOME	One key to Homepage
⑨ VOL-	Volume-
⑩ VOL+	Volume+
⑪ MENU	Menu
⑫ SOURCE	Signal source

3. Model Size:65",75",85",86"


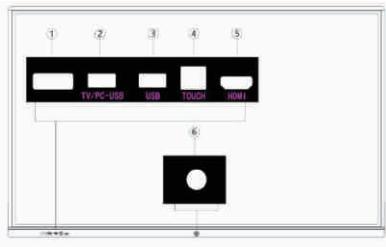


Interface	Function Description
① Indicator / Remote Sensor	Indicator Light / Remote controller sensor
②③ USB	TV/PC USB Input
④ TOUCH	Touch Signal Output
⑤ HDMI	HDMI Input
⑥ POWER	Turn On/Off

Display and Interfaces

1. Android System Connections

(Pictures for reference only, subject to our available products.)

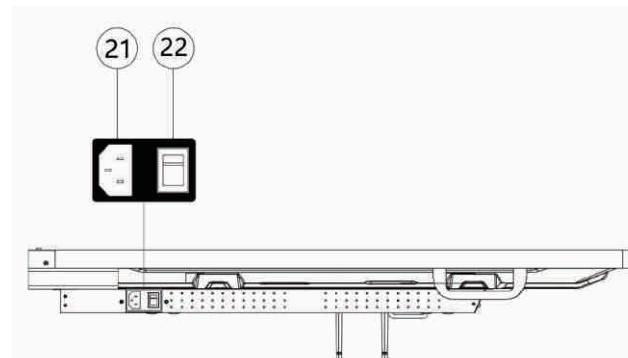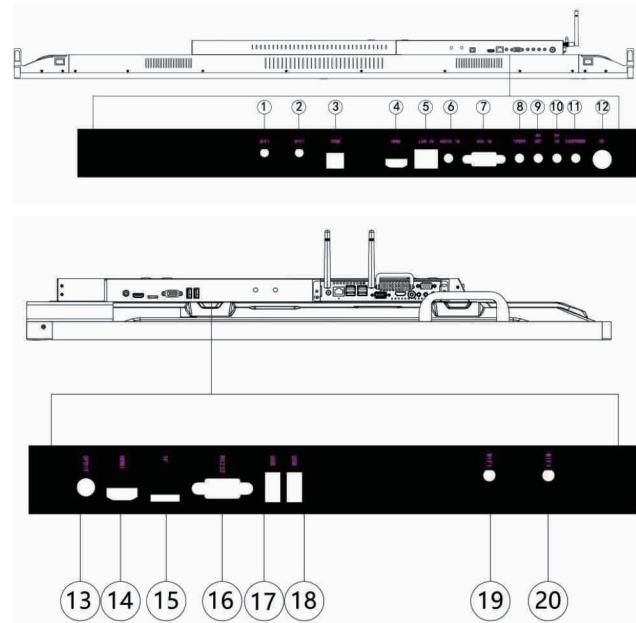


Display and Interfaces

Interface	Function Description
①②⑩⑪ WiFi	WiFi signal receiving bar
③ TOUCH	Touch Signal Output
④⑭ HDMI	HDMI Input
⑤ LAN IN	Internet Input (Only for Android system)
⑥ AUDIO IN	Video signal Audio Interface
⑦ VGA IN	Connect with equipment with VGA Output
⑧ YPBPR IN	YPBPR Input
⑨ AV OUT	AV Output
⑩ AV IN	AV Input
⑪ EARPHONE	Audio collection interface
⑫ RF IN	Radio Frequency Input and TV signal interface
⑬ SPDIF OUT	Coaxial output
⑮ SD card	Memory extension interface (TF card)
⑯ RS232 UART	Connect Central Control Devices with RS232
⑰⑱ TV-USB IN	USB, suggest using for system upgrading
⑲ AC IN	Connect AC Input
⑳ Power	Power On/Off

OPS Interfaces

2. PC Interfaces

(Different configs OPS interfaces may has little difference , subject to real product.)

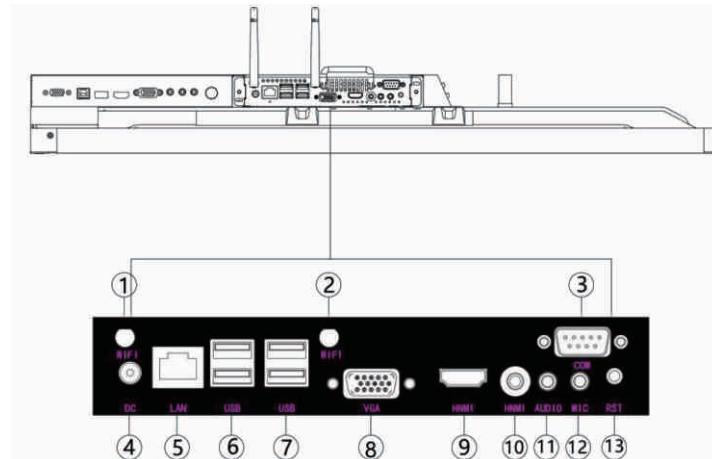


①② WiFi	WiFi signal receiving bar
③ RS232	Serial port
④ DC	12V DC Input
⑤ LAN	Internet Interfaces,connect RJ45 to Internet
⑥⑦ USB	Connect USB devices,such as USB keyboard,mouse , U disk , etc
⑧ VGA OUT	VGA Output
⑨ HDMI OUT	HDMI Output
⑩ AUDIO	Audio Output
⑪ MIC-IN	Connect to devices with Microphone sound collection (For recording)
⑫ RST	System Reset

Remarks : If without PC modual , don't have the interfaces above.

4. Wireless Transmitter



(The image is only a reference)

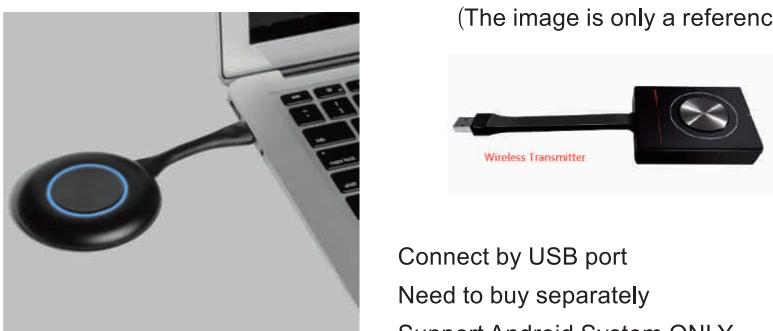


Connect by USB port
Need to buy separately
Support Android System ONLY


5. Basic Operation

1. Turn on the Monitor

Step 1: Use 100V-240V 50/60Hz AC as the monitor power supply. The power plug is fully plugged in and the outlet ground wire is well connected.

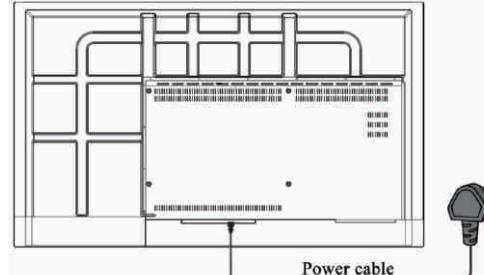

Step 2: Turn on the Rocker switch (back side of the monitor, next to power outlet). Enter standby state, the power indicator turns to red color.

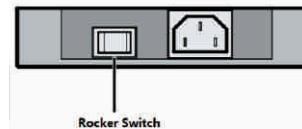

Step 3: Press the "Power" button on the front panel or the remote control standby button to turn on the monitor. The OPS (built-in computer) will be turned on together. The power indicator will be blue after turning on.

2. Turn off the Monitor

Step 1: Press the PC power to turn off the OPS in advance.

Step 2: Press the "Power" button on the front panel or the remote control standby button to turn off the monitor. The power indicator will be red after turning off.

Step 3: Turn off the Rocker switch or plug off the power cable.

Notices:

- Be sure to turn off the PC power before turning off the power, otherwise it may damage the monitor.
- Be sure to turn off the Rocker switch or unplug the power cable, otherwise it may damage the monitor.
- Do not switch the machine on and off in a short time, otherwise it may damage the monitor.

6.Quick use guide

6.1 Free accessories list

If any items missed or damaged, please contact your customer service immediately.

CONTENTS:

No.	Part Name	Qty
1	Wall mounted stand	1set
2	Screws	1bag
3	Antenna	2pcs
4	Remote control	1pcs
5	Writing pen	1pcs
6	User manual	1pcs
7	Wireless Transmitter(optional)	1pcs
8	Floor stand(optional)	1pcs
9	Floor stand quick installing guide(optional)	1pcs

6.2 How to turn on-off device

The device power line is on the right of device, plug the power, turn on side power key, the front power light which on the right of device turn blue, that shows device turn on successfully.

Press the front power key on the middle of device or press remote control power key, the power light turn red, which shows the device turn off, if press front power key on the middle of device again, then turn on device again.

 
If device need to turn off for a long time, please turn off the side power key and unplug power line.

NOTES:

1. Avoiding restarting many times in a short time.
2. Different size different

6.3 How to install WIFI antenna

Directly turning WIFI antenna on the antenna location tightly, the pictures is only for reference, specific WIFI location and quantity please refer to real object.




6.4 How to connect PC

There are two methods to connect PC, one is by VGA cable (prepared by yourself), another is by HDMI cable (prepared by yourself or free accessory)

Method 1

Connect device VGA input port (on the right of device) and PC VGA port by VGA cable.

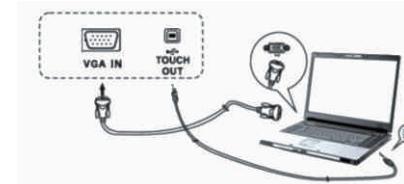

Method 2

Connect device HDMI input port (on the right of device or on the front of device) and PC HDMI port by HDMI cable.

Advising that if use front HDMI input port, the cable ≤ 3 M, if use side HDMI input port, the cable ≤ 5 M.

NOTES:

If need touch screen function, please connect device USB touch out port (on the right of device) and PC USB port by USB cable. (Please refer to method 1 picture)



7. Troubleshooting Guide

No power	1. Please check power socket, whether plug into the socket. 2. If still no power, please unplug waiting 1 minute, restart to plug and turn on device again
There is no signal on the blue screen after the device is turned on	Please turn on-off device, restart.
No pictures	1. Check the WIFI antenna connect well or not 2. Switching to other channels for a try
Pictures is clear but no voice(PC mode)	1. Check the device is under mute state. 2. Choose the audio icon on the right of screen desktop--right click--click broadcast equipment--appear two loudspeakers--choose the one that no checking--confirming
The voice is loud, but screen color is not good	Please add the brightness and contrast ratio
The WIFI can not connect in Windows system	1. Check whether the WIFI antenna connect well or not 2. Check whether install WLAN card driver, if not, please download, then install into computer by USB flash disk.
4k screen no display 4K resolution(3840*2160)	1. Please confirm the computer support 4K solution firstly. 2. Then click right key on blank of computer desktop--click screen resolution--adjust screen resolution--click advance setting--click monitor--refresh rate, become 30Hz--confirming and saving changes

Kindly contact our after-sales service dep. or authorized agency If any question you have.

Warranty Card

Name: Tel.: Add:
Model: Serial No.: Date of Purchase:

To guarantee your interests, please fill out this warranty card carefully. Please check the following warranty terms.

Thank you for purchasing our product. This warranty card is the after-sale service credential. It is warranted to the original owner for one year from the date of purchasing against manufacturing defects in material and workmanship under normal use. This warranty only covers the repair and replacement, doesn't include consumables, shells, accessories, cables, software and user manual. Only original purchase can claim this warranty. After warranty expired or ownership changed, the owner should take the responsibility to pay for parts and labor. In all cases, it will be the responsibility of the owner to pay for the delivery cost to get product repaired.

This warranty is not applicable to the followings:

- 1: Damage due to accident, misuse, abuse, vandalism or natural disaster (i.e. lightning, earthquake).
- 2: Improper or inadequate maintenance.
- 3: Fail to provide the valid warranty card or invoice of purchase.
- 4: Unauthorized modification or commercial use (i.e. the warranty is tampered/ altered or transferred).
- 5: Damage in return transit.
- 6: Normal wear of parts (wear & tear that occurs over time and with use).
- 7: Repairs made by unauthorized service technician.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.