


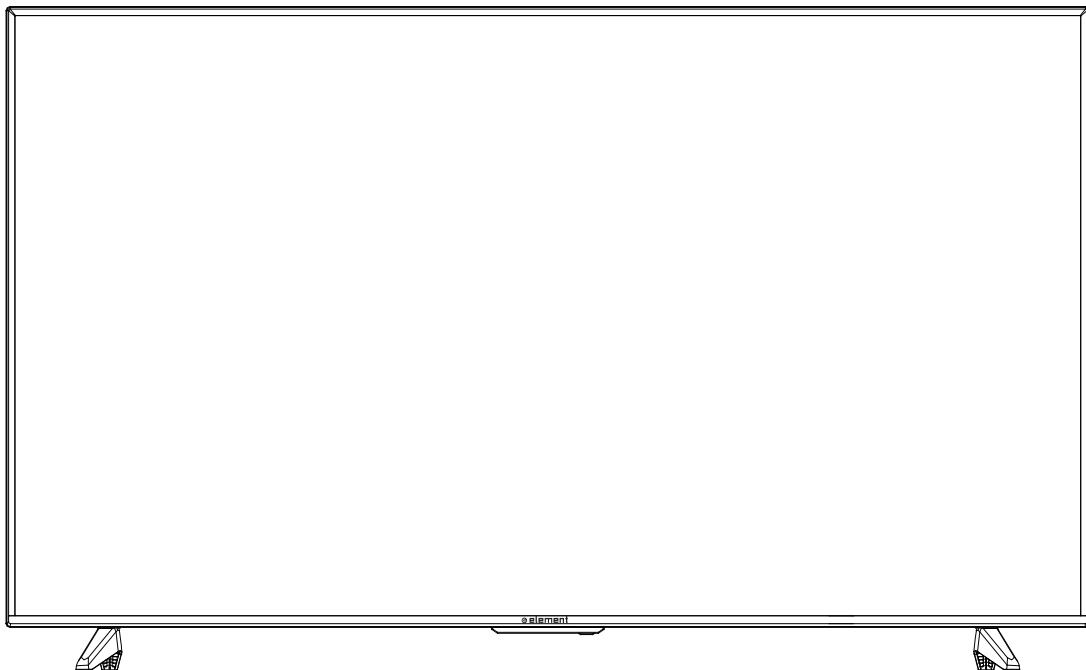

Digital LED TV

Please refer to the actual product



INSTRUCTION MANUAL

Please read all the instructions carefully before using this TV,
and keep the manual for future reference.



CONTENTS

Important Safety Instructions	2
Additional Safety Information	3
Preparations	6
What's Included	6
Front View	7
Rear View	8
Wall Mounting	8
Remote Control	9
Connecting External Devices	10
TV SETUP	11
Turning On/Off Your TV	11
Initial Setup	11
Source	13
Channel Selection	13
Volume Adjustment and Mute Setup	13
Current Channel Information	
Picture	14
Sound	16
Function	17
Time	19
Option	20
Lock	21
Channel	22
Network Setting	24
INTERNET/Screencast Operation	27
Parental Control	31
Troubleshooting	33
FCC Notes	36
OTT APP Service	37

IMPORTANT SAFETY INSTRUCTIONS

- **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- **Keep these instructions** – The safety and operating instructions should be retained for future reference.
- **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- **Follow all instructions** – All operating and use instructions should be followed.
- **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- **Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- **Do not install near any heat sources** such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Do not defeat the safety purpose** of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please keep the unit in a well-ventilated environment.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus should not be exposed to dripping or splashing. Objects filled with liquids, such as vases should not be placed on apparatus.

WARNING: The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: The main plug is used as disconnect device, the disconnect device shall remain readily operable.

WARNING: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc in the United States and other countries

ADDITIONAL SAFETY INFORMATION

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

Electrical Safety

- The TV set should only be connected to a main power supply with voltage that matches the label at the rear of the product.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on them, which may damage the leads.
- Hold the main plug, not the wires, when removing from a socket.
- During a thunderstorm, or when not using the television for extended period of time, turn off the power switch on the back of the television.
- Do not allow water or moisture to enter the TV or power adapter. Do NOT use in wet, moist areas, such as bathrooms, steamy kitchens or near swimming pools.
- Pull the plug out immediately, and seek professional help if the main plug or cable is damaged, liquid is spilt onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Qualified personnel must only service this apparatus.
- To avoid battery leakage, remove exhausted batteries from the remote control, or when not using for long period.
- Do not break open or throw exhausted batteries on a fire.
- Do not mix old and new batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.

Physical Safety

- Do not block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around.
- Do not tap or shake the TV screen, or you may damage the internal circuits. Take good care of the remote control.
- To clean the TV use a soft dry cloth. Do not use solvents or petroleum based fluids.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong, the wide blade, or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs.
- Unplug the apparatus during lightning storms or when unused for long periods.
- Refer all servicing to a qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled, or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please always connect your television to a power outlet with protective ground connection.



INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

Avant d'utiliser ce produit, il faut lire toutes les instructions de sécurité et de fonctionnement.

Conserver ces notes - les notes relatives à la sécurité et aux opérations devraient être conservées pour référence ultérieure.

Toutes les mises en garde doivent être respectées.

Toutes les instructions relatives aux opérations et à l'utilisation sont respectées.

L'équipement ne doit pas être utilisé à proximité de l'eau ou de l'humidité, par exemple près de webasement ou de la piscine.

Il ne doit pas être installé à proximité d'une source de chaleur, telle qu'un radiateur, un registre thermique, un four ou d'autres dispositifs générateurs de chaleur (y compris des amplificateurs).

Il ne faut pas compromettre la sécurité des prises polarisées ou de masse. La fiche sans pôle comporte deux lames, l'une plus large que

l'autre. La fiche de mise à la Terre comporte deux lames et une troisième prise de masse. Pour votre sécurité, offrez une lame large ou une troisième lame.

Si la fiche ne convient pas à votre prise, consultez l'électricien pour remplacer l'ancienne prise.

La ligne d'alimentation électrique est protégée contre le déplacement ou l'extrusion, en particulier au niveau de la prise et de la ligne d'alimentation à partir de la sortie du dispositif.

Seuls les chariots, supports, trépied ou tables spécifiés par le fabricant sont utilisés ou vendus avec le matériel lorsqu'ils sont utilisés. Il faut faire attention à la combinaison de chariots / équipements pour éviter les renversements.



Veuillez connecter ce dispositif à la prise de courant pendant ou pendant la tempête.

Tous les travaux d'entretien sont confiés à du personnel qualifié. L'équipement est exposé à la pluie ou à l'humidité, ne fonctionne pas normalement ou ne tombe pas. Écogiste bien ventilé.

Avertissement: pour réduire les risques d'incendie ou de choc électrique, il est interdit d'exposer le matériel à la pluie ou à l'humidité. Les instruments ne doivent pas être exposés à des gouttelettes ou à des éclaboussures. Les objets remplis de liquides, tels que les vases, ne doivent pas être placés sur des instruments.

Avertissement: les batteries ne doivent pas être exposées à des environnements surchauffés tels que le soleil. Incendie.

Avertissement: la prise principale sert de dispositif de déconnexion.

Avertissement: pour réduire le risque de verrouillage électrique, ne pas enlever le couvercle (ou le dos), car il n'y a pas de pièces pouvant être réparées par l'utilisateur. Services pour le personnel qualifié.



Le symbole foudre avec flèche dans son triangle isolaté est conçu pour rappeler à l'utilisateur la présence d'une « tension dangereuse » non isolante dans le boîtier du produit, qui peut être une valeur efficace constituant un risque d'électricité.



Les points d'exclamation dans le triangle isolaté sont conçus pour informer l'utilisateur des instructions de fonctionnement et de maintenance essentielles qui accompagnent le dispositif.



Son équipement est de type II ou double. Il n'a pas besoin d'une connexion sécurisée.



Termes HDMI et HDMI HIGH-DEFINITION MULTIMEDIA INTERFACE et emblème HDMI.

Informations supplémentaires sur la sécurité

Pour assurer la fiabilité et la sécurité du fonctionnement de ce dispositif, lisez attentivement toutes les notes du Guide de l'utilisateur, en particulier les informations de sécurité ci-dessous.

Sécurité électrique


Pour éviter la surcharge, ne partagez pas la même prise d'alimentation avec un trop grand nombre d'autres composants électroniques. Si vous déplacez la douille de la douille de la douille ou si vous n'utilisez pas la télévision pendant de longues périodes, saisissez la prise principale plutôt que le fil électrique. Adaptateur de puissance N'utilisez pas l'humidité à proximité de la salle de bains, de la cuisine humide ou de la piscine, enlevez immédiatement la prise, si la prise principale ou le câble est endommagé, si le liquide est pulvérisé sur l'équipement, si l'eau ou l'humidité est accidentellement exposée et si quelque chose traverse accidentellement l'évent, demandez une aide professionnelle. Si le dispositif ne fonctionne pas normalement, Ne démontez pas le couvercle de sécurité. Il n'y a pas de pièces d'entretien à l'intérieur. Il est dangereux d'essayer de réparer le dispositif lui-même, ce qui peut rendre le produit inopérant. Firedo Ne mélangez pas les piles anciennes et nouvelles. Ne mélangez pas les piles alcalines, standard (Carbon zinc) ou rechargeables (nickel Cadmium) onckel.

Sécurité physique


O ne bloque pas la ventilation sur le couvercle arrière. Vous pouvez mettre la télé dans un casier, mais assurez-vous qu'il y ait au moins 5 cm d'espace autour de vous. Pour nettoyer la télévision à l'aide d'un tissu sec souple, attention à la télécommande. Ne pas utiliser de solvant ou de liquide à base de pétrole.) ne pas être installé à proximité d'une source de chaleur quelconque, telle qu'un radiateur, un registre thermique, un four ou tout autre équipement auxiliaire (y compris un amplificateur) produisant de la chaleur, afin de ne pas compromettre l'utilisation sûre de prises polarisées ou de masse. L'une a deux lames de polarisation, l'une plus large que l'autre. La fiche de mise à la Terre comporte deux rondelles plates et une troisième pointe de terre, une lame large ou une troisième pointe de terre pour assurer la sécurité. Si la fiche n'est pas adaptée à votre prise, consultez l'électricien pour remplacer la prise périmée. Personnel. Lorsque l'appareil est endommagé de quelque manière que ce soit, par exemple lorsqu'une ligne d'alimentation électrique ou une prise de courant est endommagée, qu'un liquide se déverse, que l'objet tombe dans l'appareil, qu'il est exposé à la pluie ou à l'humidité, qu'il ne fonctionne pas normalement ou qu'il tombe, il faut procéder à des réparations. Connectez-vous à votre télévision. Douille d'alimentation électrique avec dispositif de mise à la terre de protection

PREPARATIONS

What is Included?

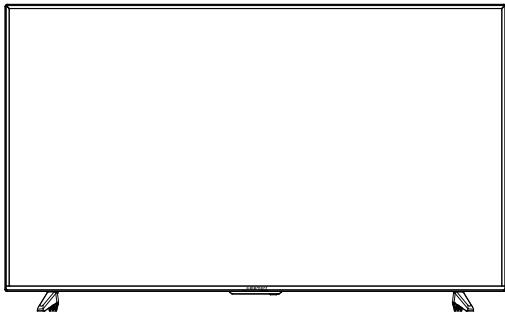


TV Set

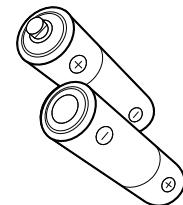

Remote Control with Batteries




User Manual

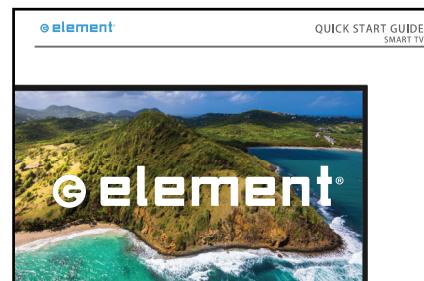

Quick Start Guide

PREPARATIONS


Front View

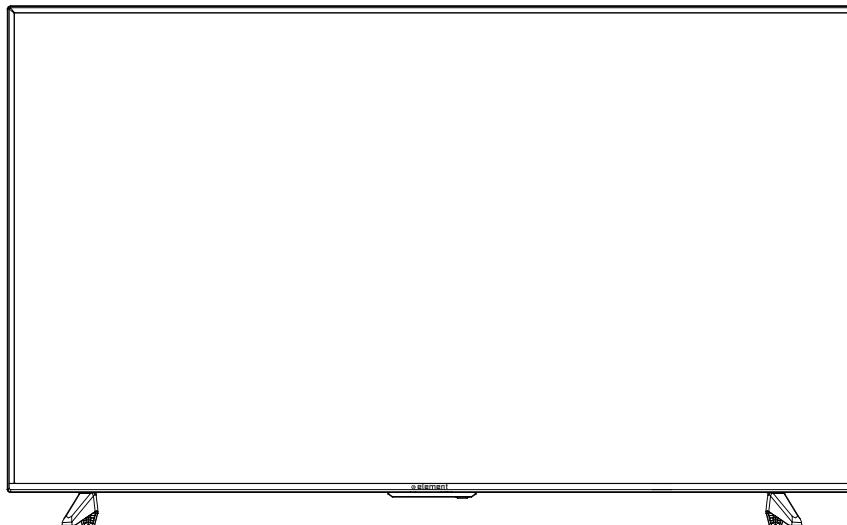

- **STANDBY**
Switch the TV between On / Standby mode.
- **SOURCE**
Press to select among different input signal sources.
- **MENU**
Display the OSD (on screen display) menu.
- **CH -/+**
Press to select a channel.
- **VOL -/+**
Press to adjust the volume.
- **LED**
The LED light indicates when the TV is activated.
- **IR**
Infrared Receiver.

PREPARATIONS

Rear View

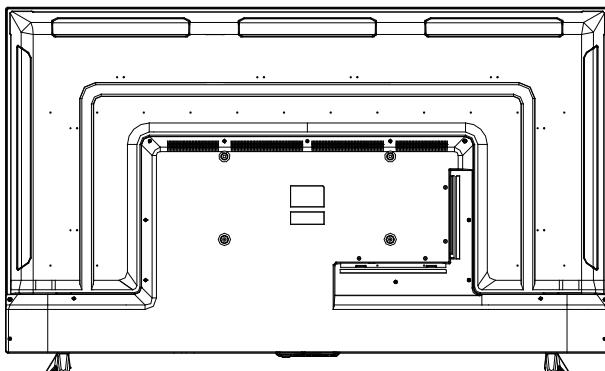

Headphone Output



Antenna Input(75Ω VHF/UHF)



Optical Output



USB Input



RJ-45



MINI YPBPR/CVBS



HDMI Input



Audio Input

Wall Mounting

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture(for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.




Your new TV is heavy, please consult with professional wall mount installer to perform this installation.

personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as: Using cabinets or stands recommended by the manufacturer of the television set. Only using furniture that can safely support the television set. Ensuring the television set is not overhanging the edge of the supporting furniture. Not placing the television set on all furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support. Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture. Educating children about the dangers of climbing on furniture to reach the television set or its controls. If your existing television set is being retained and relocated, the same considerations as above should be applied.

Un grand nombre de blessures ou de décès, en particulier chez les enfants, peuvent être évités par des mesures préventives telles que l'utilisation d'une armoire ou d'un support recommandés par le fabricant de téléviseurs, l'utilisation d'appareils de fumigation capables de supporter les télévisions en toute sécurité et l'assurance que les téléviseurs ne seront pas suspendus. Bordure d'un appareil de fumigation d'appoint: sans fixer les fumigateurs et les téléviseurs sur un support approprié, les téléviseurs sont placés sur tous les meubles (par exemple, dans un placard ou une bibliothèque) et non sur les tissus ou autres matériaux entre les téléviseurs. La fumigation aide les enfants à monter sur le matériel de fumigation pour atteindre la télévision ou son appareil de commande s'ils ont atteint et réinstallé la même réduction.



PREPARATIONS

Remote Control

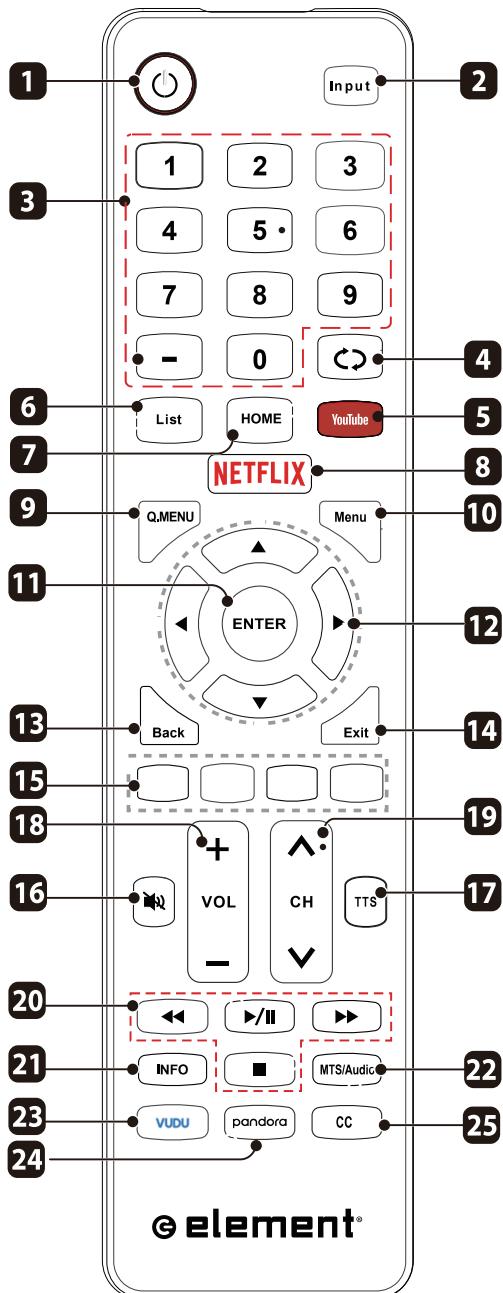

1. **POWER:** Turn the TV on and off.
2. **Input:** This button is used to switch among different sources, Select a source and press ENTER button to confirm.
3. **Digital Buttons(0-9, -):** Directly select channel with digital buttons.
4. **C:** Switch to the previous program.
5. **YouTube:** If network connects, press this key to view YouTube directly.
6. **List:** Press it to show channel list and favorite list on screen.
7. **HOME:** Press it to go to App home page.
8. **NETFLIX:** If network connects, press this key to view NETFLIX directly.
9. **Q.MENU:** Press this key to go to quick menu.
10. **Menu:** Display the main menu or exit the current menu.
11. **ENTER:** Validation key.
12. **Arrow buttons pq t u :** Use to select on-screen menu items and change menu values.
13. **Back:** Return.
14. **Exit :** Exit the menu.
15. **Color buttons:** It's used as it's showed in the EPG or Program Edit menu.
16. **MUTE:** Press this button to cut off the sound of the TV set temporarily, press again to resume.
17. **TTS (Text-To-Speech):** Press this button to adjust TTS on or off .
18. **VOL +/-:** Press these buttons to adjust the volume.
19. **CH^/v:** Press these buttons to change channel upward or downward.
20. **Digital Media Player controlbutton:** Include play/pause, stop, previous, next, backward, forward is used in USB mode . Please refer to relevant instructions in the section of multimedia player.
21. **INFO:** Display the program information.
22. **MTS/Audio:** In USB mode, press this button to switch audio track when movie is playing. In TV mode, press this button to switch MTS or Audio Language.
23. **VUDU:** Press this button to select VUDU application.
24. **Pandora:** Press this button to select Pandora application.
25. **CC:** Press this button to adjust CC mode.

Connecting External Devices

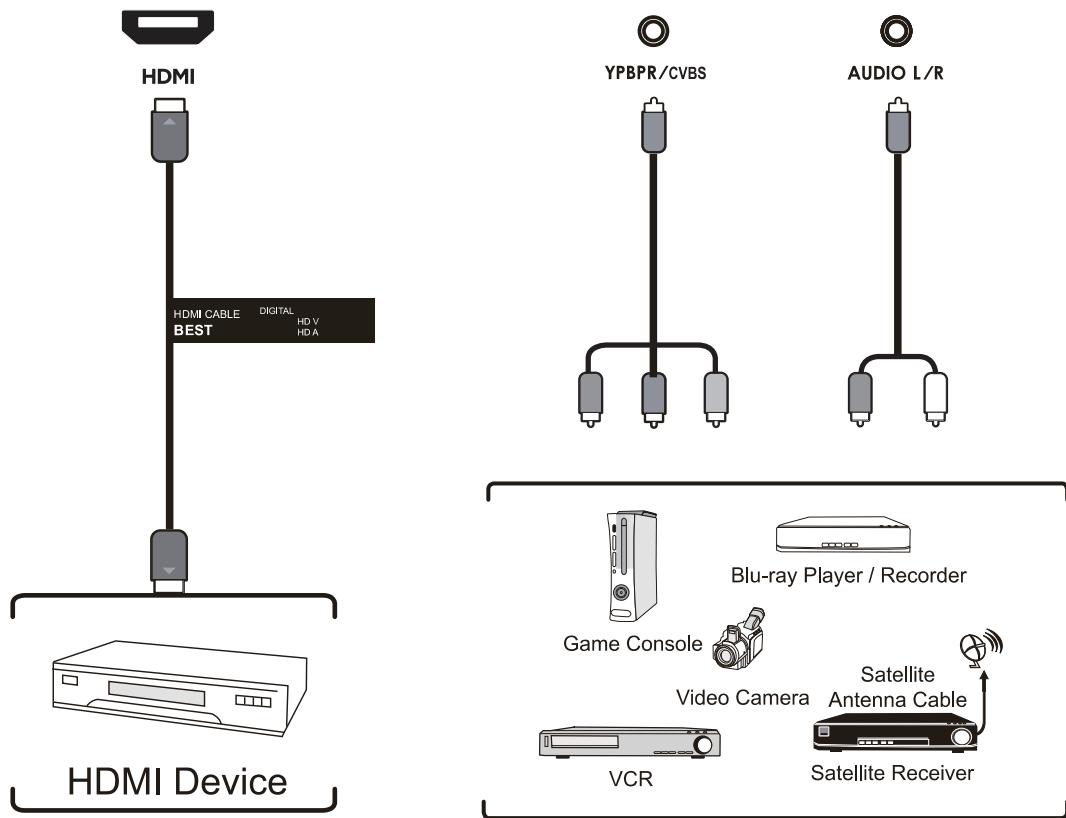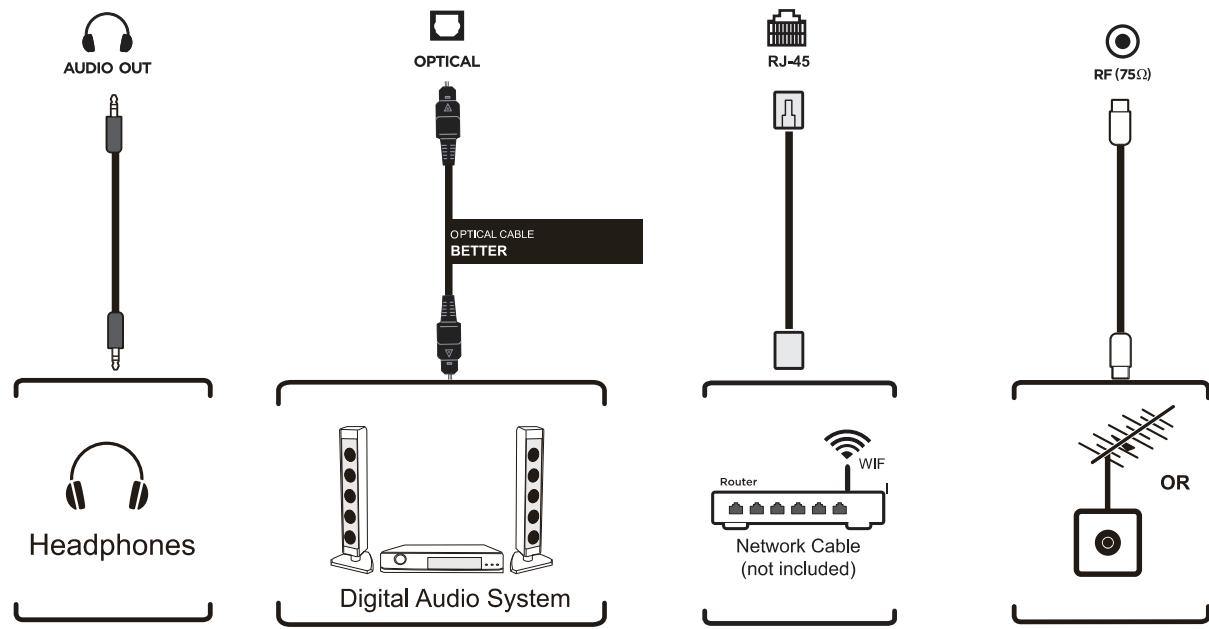

Match colored connectors to colored ports on back side of the TV.

INITIAL SETUP

Turning On/Off Your TV

- Connect the power cord to the power socket after you have completed all the physical connections. At this stage, the TV will enter Standby Mode and the blue LED indicator will illuminate.
- In Standby Mode, press the **POWER** button on the main unit or on the remote control to turn the TV on.



The **POWER** button on the main unit or on the remote control can only switch the TV into standby. To completely turn off the TV, please disconnect the power cord from the power socket.

Initial Setup


- Connect the power cord to the power socket after you have completed all the physical connections. At this stage, the TV will enter Standby Mode and the red LED indicator will illuminate.
- In Standby Mode, press the **POWER** button on the main unit or on the remote control to turn the TV on. The red LED indicator will turn blue.
- The first time you turn the TV on, it will go into the Setup Wizard. Press **◀/▶ ▲/▼** buttons to select your desired mode and press **ENTER** confirm.



1




2

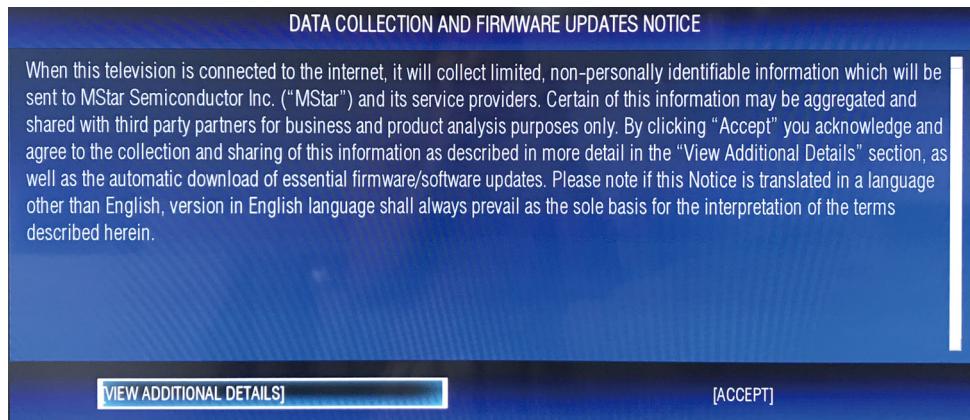

3

CUSTOMIZING TV SETTINGS

Initial Setup

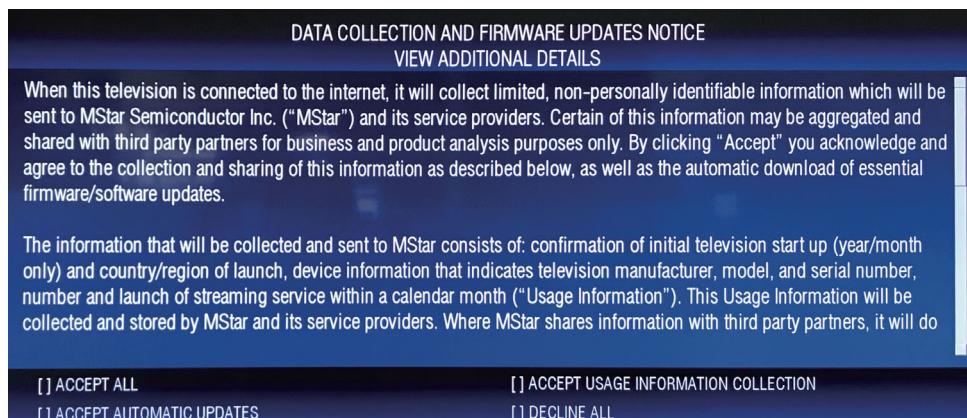



4



5

6

7

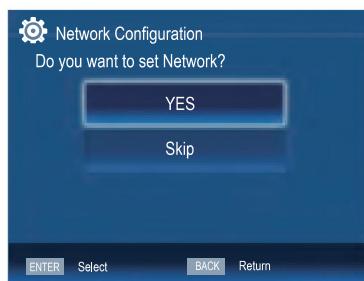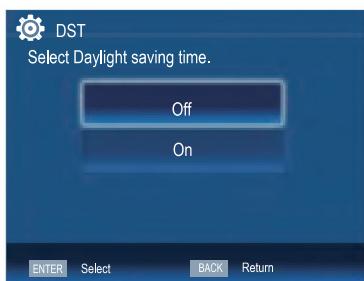

8

9

10



11


INITIAL SETUP

Source

1 Input Setup

Press **Input** key on the remote control to enter "INPUT SOURCE" menu. There are these options for you to select: "TV", "AV", "Component", "HDMI1", "HDMI2", "HDMI3", "USB".

Use /key to select a input source and press **ENTER** key to confirm.

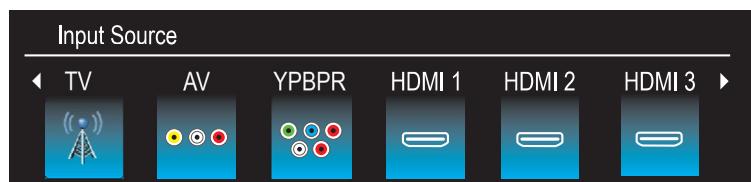

Channel Selection

2 Channels Selection

There are four ways to select channel:

- 1) Using number keys, and **ENTER** keys on the remote control to select channel directly.

To select channel 90, press   .

When you use the number buttons, you can directly select channels that were either erased or not memorized.

- 2) Using **CHΛ/V** key on the remote control or on your TV to select channel.

When you press the **CHΛ/V** key, the TV changes channels in sequence. You will see all the channels that the TV has memorized.

You will not see channels that were either erased or not memorized.

INITIAL SETUP

- 3) Press  key to return to previous channel, press it again to return to current channel.
To quickly switch between two channels that are far apart, tune to one channel, then use the number keys to select the second channel. Then use the  button to quickly alternate between them.
 is not activated if no channel has been changed after TV turning on.
- 4) Select channels from "Channels List" or "Favorite List".
Press **List** key to choose from "Channel List" menu.

3 Volume Adjustment and Mute Setup

Volume adjustment

Press VOL+/- key on the remote control or the TV to display "Volume" menu, adjust the volume of TV between 0 to 100 by using VOL+/- key:

- To increase the volume, press VOL+ key;
- To decrease the volume, press VOL- key;




Mute

Press "Mute" and the sound cuts off. The MUTE icon will appear in the lower-right corner of the screen.

To resume sound, press the "Mute" button again, or simply press the VOL+ key.

4 Current Channel Information

Press "INFO" key on the remote control to view current channel information, the indications of channel information are listed in the following table.

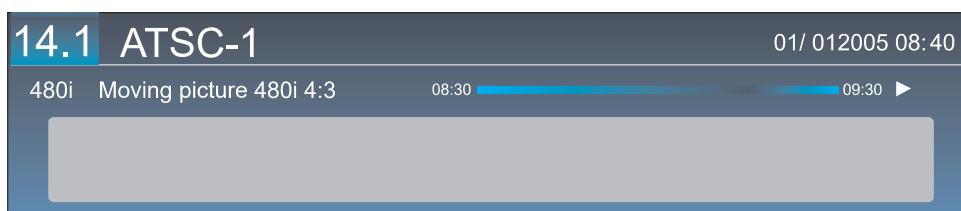

Press "EXIT" key on the remote control to exit this OSD.

TV SETUP

Picture

1. Press MENU key to display the main menu on the screen.
2. Press ▲/▼ key to select "Picture" option.
3. Press ► or ENTER key to enter "Picture" submenu.

Picture Mode

Your TV has four picture settings (Sports, Normal, Soft, User) that are preset at the factory. Only "User" mode can be set to your preference by adjusting particular items such as Contrast, Brightness, Color, Sharpness, Tint.

1. Press ▲/▼ key to select "Picture Mode" option.
2. Press ► or "ENTER" key to enter submenu.
3. Press ▲/▼ key to select one picture mode.
4. You can also press the **P.Mode** key on the remote control to select one of the picture settings.



User settings for PICTURE

(Contrast, Brightness, Color, Sharpness, Tint)

Your set has several settings which allow you to control picture quality.

1. Press ▲/▼ key to select a particular item.
2. Press ◀/▶ key to decrease or increase the value of a particular item.

Note: The adjusted values are stored according to the selected particular item.

Contrast: Adjusts the lightness and darkness between objects and the background.
Brightness: Adjusts the brightness of the picture.
Color: Adjusts the colors, making them lighter or darker.
Sharpness: Adjusts the outline of objects to either sharpen them or make them more dull.
Tint: Adjusts the Tint of the picture.

Picture Mode	
Contrast	50
Brightness	50
Color	50
Sharpness	50
Tint	0
Backlight	100
Color Temperature	

Backlight

You can change the brightness of the entire screen according to your preference.

1. Press ▲/▼ key to select "Backlight" option.
2. Press ◀/▶ key to increase or decrease the backlight value.

Backlight: Adjusts the brightness of the whole screen.

Color Temperature

You can change the color of the entire screen according to your preference.

1. Press ▲/▼ key to select "Color Temperature" option.
2. Press ► or "ENTER" key to enter submenu.
3. Press ◀/▶ key to select one Color Temperature.

Cool: Makes whites bluish.
Standard: Makes whites nature.
Warm: Makes whites reddish.

Sound


1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key to select "Sound" option.
3. Press **▶** or **ENTER** key to enter "Sound" submenu.

Sound Mode

You can select the type of the special sound effect to be used when watching a given broadcast.

Your TV has five sound settings ("Standard", "Music", "Movie", "Sports", "User") that are preset at the factory.

1. Press **▲/▼** key to select "Sound Mode" option.
2. Press "**▶**" or "**ENTER**" key to enter submenu.
3. Press **◀/▶** key to select one sound mode.
4. You can also press the **S.Mode** key on the remote control to select one of the sound.

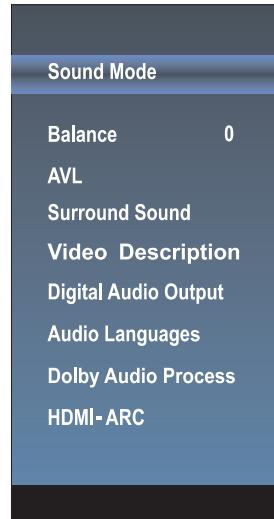

Standard: Selects the normal sound mode.
Music: Provides clear and live sound for music.
Movie: Provides live and full sound for movies.
Sports: Emphasizes bass over other sounds.
User: Selects your custom sound settings.

Balance

If the volumes of the left speaker and the right speaker are not the same, you can adjust the "Balance" to suit your personal preference.

1. Press **▲/▼** key to select "Balance" option.
2. Press **◀/▶** key to decrease or increase the value of the item.

AVL

Each broadcasting station has its own signal conditions, and it is inconvenient to adjust the volume every time the channel is changed. "AVL" automatically adjusts the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

1. Press **▲/▼** key to select "AVL" option, press **ENTER/▶** key to enter submenu.
2. Press **▲/▼** key to select "On" or "Off".

Surround Sound

This is used to turn on surround sound to gain better sound effect.

1. Press **▲/▼** key to select "Surround Sound" option, press **ENTER/▶** key to enter submenu.
2. Press **▲/▼** key to select "Surround" or "Off".

Video Description

1. Press **▲/▼** key to select "Video Description" option, press **ENTER/▶** key to enter submenu.
2. Press **▲/▼** key to select "On" or "Off".



TV SETUP

Digital Audio Output

This is used to set digital audio output.

1. Press ▲/▼ key to select "Digital Audio Output" option.
Press ENTER/▶ key to enter submenu.
2. Press ▲/▼ key to select "Auto" or "PCM".

Audio Languages

You can set the primary and secondary language for audio.

Dolby Audio Process

This is used to set Dolby Audio Process.

1. Press ▲/▼ key to select "Dolby Audio Process" option.
2. Press ENTER/▶ key to enter "Dolby Audio Process" submenu.

Dolby Audio Process	
Dolby Audio Process	Off
Mode	Standard
Surround Virtualizer	High
Dialog Enhancer	High
Auto Volume Control	Off

HDMI ARC

Turn on or turn off the HDMI ARC function.

Function

1. Press **MENU** key to display the main menu on the screen.
2. Press ▲/▼ key to select "Function" option.
3. Press ENTER/▶ key to enter "Function" submenu.

Noise Reduction

Press ▲/▼ key to select the Noise Reduction mode.

Press ENTER/▶ key to enter submenu.

Press ▲/▼ key to select the mode: off/low/middle/high/Auto.

Noise Reduction
MPEG Noise Reduction
Aspect Ratio
Link Setup
HDMI EDID
Netflix Deactivate
Netflix ESN
Netflix Version
Vudu Deactivate
TTS

MPEG Noise Reduction

Press ▲/▼ key to select "MPEG Noise Reduction" option.

Press ENTER/▶ key to enter submenu.

Press ▲/▼ key to select the mode: off/low/middle/high.

The picture will be better when it is in "high" mode.

Aspect Ratio

Press ▲/▼ key to select "Aspect Ratio" option. Press ENTER/▶ key to enter submenu.

Press ▲/▼ key to change the size of the picture on the size of the picture on the screen.

Select the aspect ratio settings: 4:3/16:9/Movie/Subtitle/Native/Panorama.

TV SETUP

Link Setup

1. Press **▲/▼** key to select "Link Setup" option.
2. Press **ENTER** or **►** key to enter "Link Setup" submenu.
Enable Link: Press **◀/▶** to turn on/off the link setup.
Auto Power On: When this option is "On" and the TV is in standby mode. To turn on the DVD can also turn the TV at the same time.
Auto Standby: When this Option is "On" and the TV is on, to turn off TV can also turn the DVD into standby mode.

Link Setup	
Enable link	On
Auto Power On	Off
Auto Standby	Off

HDMI EDID

This function is only used in HDMI mode.

1. Press "**▲/▼**" key to select "HDMI EDID" option.
2. Press "**►**" or "ENTER" key to confirm.
3. Press **▲/▼** key to select "4K" or "2K".

Netflix Deactivate

1. Press **▲/▼** key to select "Netflix Deactivate" option.
2. Press **ENTER** or **►** key to confirm.
3. Press "Yes" to confirm again, the Netflix will be activated.

Netflix ESN

Display the Netflix ESN information.

Netflix Version

Display the Netflix version.

Vudu Deactivate

1. Press "**▲/▼**" key to select "Vudu Deactivate" option.
2. Press "**►**" or "ENTER" key to confirm.

TTS

You can set TTS information in the TTS menu.

TV SETUP

Time

1. Press MENU key to display the main menu on the screen.
2. Press ▲/▼ key to select "Time" option.
3. Press ENTER/▶ key to enter "Time" submenu.

Off Time

In "Off Time" item, press ▶ button or ENTER button to enter the submenu, set the day & time to turn off the TV set.

On Time

In "On Time" item, press ▶ button or ENTER button to enter the submenu, set the time to turn on the TV set, when the TV set is in the standby mode. You can also choose which day to control your TV set in a week.



Sleep Timer

1. Press ▲/▼ key to select "Sleep Timer" option, press ▶ or ENTER button to enter the submenu.
2. Press ▲/▼ key repeatedly until the desired time appears (Off, 10mins, 20mins, 30mins, 60mins, 90mins, 120mins, 180mins, 240mins).

Notes: The sleep timer you have set will be cancelled when the TV turns off or if a power failure occurs.

Notes: When the time is less than 60 seconds, reminder information will be displayed on the screen. Press any key button to cancel timer function.

Auto Sleep

Press ▲/▼ key to select whether to open the No signal Power off features. If this function is opened, the TV will power off in ten minutes when there is no signal.

Auto Sync

You can modify the time of your TV set in Manual mode. In Auto mode, the "clock" is decided by the DTV signal.

Clock

When Auto Sync is on, the clock is got from DTV streams; Set the clock when Auto Sync is off.

Time Zone

You can choose it to modify your time zone in the TV set.

1. Press ▲/▼ key to select "Time Zone" option, press ▶ or ENTER button to enter the submenu.
2. Press ▲/▼ key to select time zone.