

**Smart Wireless Handheld Floor Washer Manual**  
— 710a



A clean and sweet home

Please read through the manual before using the product and keep it handy.

## Thanks for Choosing Us

Thanks for choosing Moptop wireless handheld floor washer

We appreciate your choice of our Moptop wireless handheld floor washer.

It can evenly wet the floor with a nozzle to produce fan-shaped sprays and quickly clean tile, marble, wood and other types of floor with reciprocating mops.


It comes with specialized cleaning cloths for efficient cleaning and easy maintenance of your floor.

Moptop wireless handheld floor washer, your good assistant!

Have a good time !

Product Presentation	1
Parts List	2
Installation Instructions	3
Instructions for Use	4
Before You Start	5
Specifications	6
Troubleshooting	6
Hazardous Substances Contained	7
Safety Information	8
About the Company	9
"Three Guarantees" Certificate	10

## Product Presentation

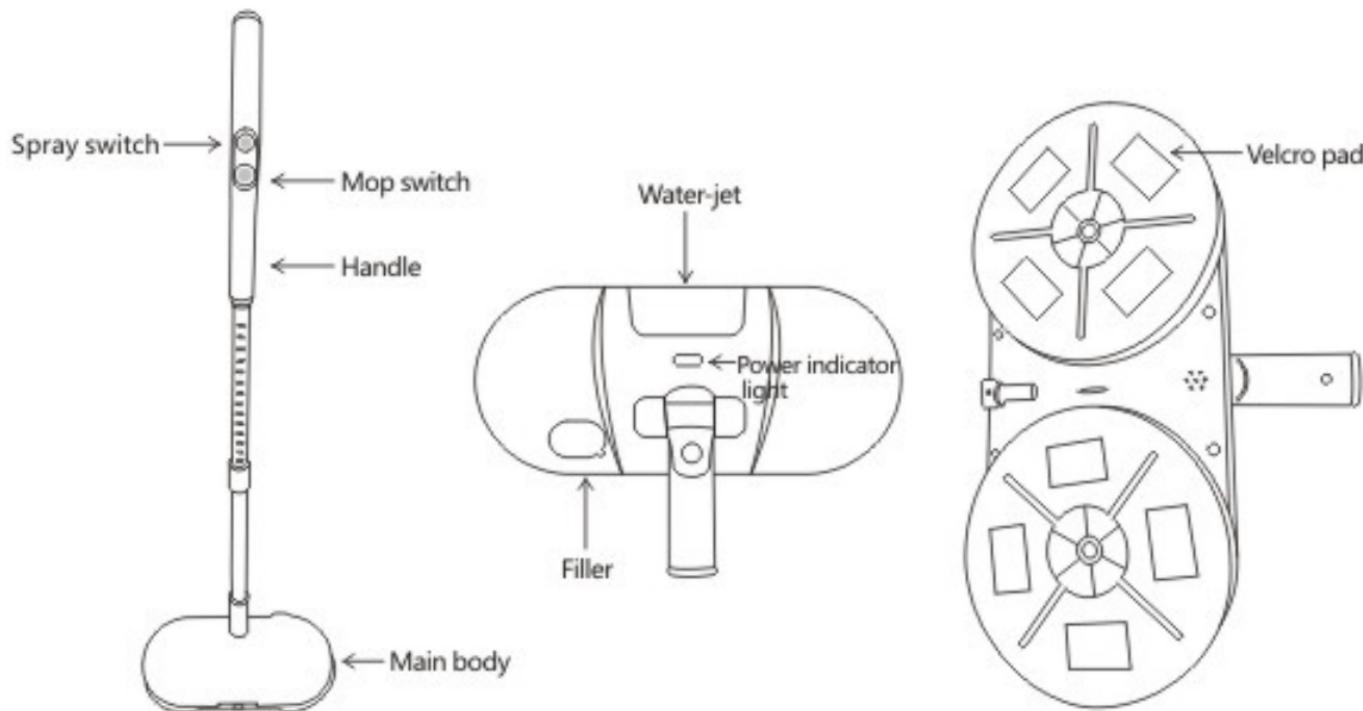

## Parts List



Measuring up



Thick mop



Disposable recyclable cloth



Power adapter




User manual


## Installation Instructions

1. Press the lock catch on the metal pipe; connect the metal pipe with the handle and the casing in succession.

Note: If the lock catch doesn't pop up, gently spin the two parts connected.

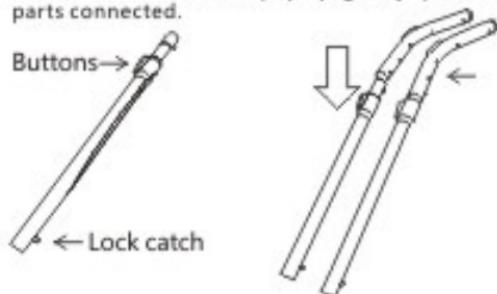

3. Put the main body onto the floor, press the lock catch on the metal pipe, and insert the handle module just assembled into the main body's moveable handle.

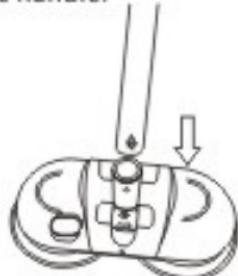

2. Straighten up the movable handle on the main body and put the main body onto the floor.



4. Place the mop onto the floor, lift the washer and aim it at the mop, where the cross on the rotary disc should match that on the mop to attach with it.



## Instructions for Use

### Power on / off

Pull the handle back until the release of lock catch; then the power indicator light will be on and the washer powered on. Straighten the handle forward and the washer will be powered off.

Note: \*The washer will become dormant after 2 minutes on standby, while the power indicator light will be off; activate the washer again by powering it off.



### Start working / spraying

The washer uses a wireless control to start working or spraying. Press the start button on the handle and the washer will start operating as the mops begin reciprocating; press the start button again and the operating will stop. Long-press the spray button and the nozzle will spray water; press the spray button again and the spraying will stop.

Notes: \*Remote control is unavailable when the washer is being charged.

\*When long-pressing the spray button, each spraying will last up to 3 seconds.

\*To ensure the sensitivity of remote control, press the button at an interval not less than 15 seconds.

### Add water


Turn up the lid of the filler and secure it with a hand. Add clean water to the tank with the measuring cup, until the water reaches the "MAX" level. Cover the filler again.

Notes:

\*The water tank has a capacity of 180ML.

\*Detergent or wax oil can be added in the water tank.

\*Please ensure that the water added is clean, or the nozzle or pump might be blocked.

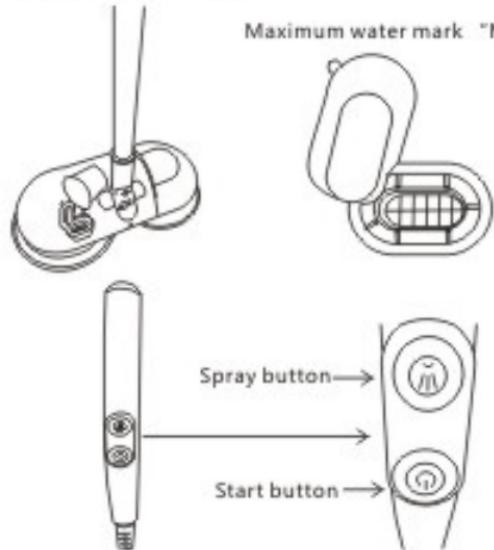

## Power indicator light

The 3 lamps indicate 100%, 65% or 30% battery life respectively if three, two or only one of them is / are on.




- \*3 lamps on indicates 100% battery life.
- \*2 lamps on indicates 65% battery life.
- \*1 lamp on indicates 30% battery life.
- \*3 lamp flashing indicates the washer is about to shut down.

## First charge


Ensure that the charger and the charging port are free of foreign objects, and insert the charger into the charging port on the washer's main body

Note: Please use an original charger.

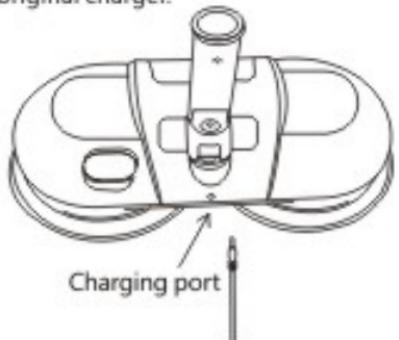

## Replace the mop

Invert the washer and tear the mop down by its edge.

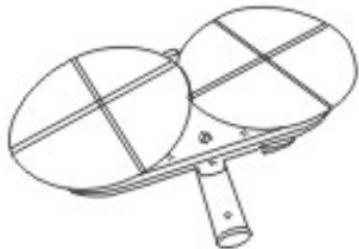

## Before You Start

### The handle

- \* When you push up the handle to power off, straighten it for autolocking

### The Velcro pad

- \* The Velcro pad may be attached with some fiber after repeated use, which can lower its performance. It's recommended to slightly clean it with a tooth brush.

### The mop

- \* Remove the mop after each use to wash and dry it timely; or use disposable mops.

## Specifications

Item	Specification
Battery capacity	2200MA
Rated voltage	14.8V
Rated power	32.56W
Output voltage of the charger	16.8V
Charge time	3--5H

## Troubleshooting

If the washer malfunctions, please refer to the following table to troubleshoot

The washer fails to run	1. The battery runs low. Recharge it before use.
	2. Replace battery for the remote controller (open the cover on back of the handle).
	3. Ensure it isn't being charged (remote control is unavailable when the washer is being charged; if so, unplug and press the power button).
The nozzle can't spray	1. Check if the tank has water.
	2. Replace battery for the handle (open the cover on back of the handle).
	3. The product can spray only while the mopping mode is on.
The mop is heavy	Check if there is enough power.
	It may be caused by excessive water contained in the mop, or the mop wasn't used properly.
	Adopt different cleaning speed as the floor's condition may be. Speed up at relatively clean areas.
It leaves water stain on the floor	1. The mop needn't to be wetted before use.
	2. Excessive water was sprayed.
	3. Use dry mop to clean it.

## Hazardous Substances Contained

Part	Hazardous substance					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr (Vi))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Circuit board	X	○	X	○	○	○
Metal components	○	○	○	○	○	○
Body case	○	○	○	○	○	○
Dry battery	X	○	○	○	○	○
Rechargeable battery	X	○	○	○	○	○

The table is compiled as per the provisions of SJ/T11364.  
 ○ indicates that the content of the hazardous substance in all homogeneous materials of the component complies with the requirements specified in BG/T 26572.  
 X indicates that the content of the hazardous substance in at least one homogeneous materials of the component exceeds the limit specified in GB/TT26572.  
 (All components marked with "X" in the table are in conformity with RoHS, or are not capable of complying with restrictions regarding hazardous substances due to global technological limitations)  
 (It indicates that the above hazardous substances exist in our products, but not all products packaged comprise the above components.)

The environment-friendly use period of dry batteries used with the product is 3 years.

The environment-friendly use period of rechargeable batteries used with the product is 5 years.

# Safety Information

## Service Restrictions

- + The product is only used for cleaning of the home environment, not the commercial or industrial environment
- + Before use, the large particle waste shall be removed. The machine has no functions of sweeping and dust collection
- + The machine is not waterproof, shall not be sprayed with water and shall not be used to clean the impounded and sticky floor
- + For cleaning of the narrow space, the obstruction or blockage of the moving parts of the machine resulting from the environmental objects shall be avoided. If there is the situation, please shut down the product with the handle for start-up button and then remove the product
- + The floor washer shall not be the toy for children
- + The appearance of the machine shall be cleaned with the rag during its shutdown mode
- + The metal bar shall not be pressed heavily or the product shall not be carried with your arms
- + The wooden floor shall be waxed carefully and attention shall be paid to the safety
- + The product shall be used in accordance with the instructions of the manual. The users shall bear any losses and damages resulting from improper use

## Battery and Charging

- + Third-party battery and charger shall not be used
- + The battery and charger shall not be dismantled, repaired or refitted personally
- + The charger shall not be close to the heat generating device (such as the heating radiator)
- + The charger shall not be wiped or cleaned with the wet cloth or hands
- + The wasted battery shall not be discarded carelessly and shall be submitted to the professional recovering bodies for disposal
- + If the power line of the charger is broken or fractured, please stop using the charger immediately and contact the customer service timely or replace it in the nearby maintenance shop
- + If the product is needed to be transported, please ensure that the machine is in shutdown mode and it's suggested that the machine be packed with the original box
- + If the machine is not used for a long time, please charge it fully and shut it down. It shall be placed in a cool dry place and be charged once every three months to avoid the over-discharge of the battery

## Performance and Fault Table of MOPTOP Wireless Handheld Floor Washer

Name	Performance and Fault
Machine	Failure of functions listed in the instruction
	Boot failure
	Failure of baseboard and washer pump
Power Adapter	Failure of power supply to the machine normally

### MOPTOP Wireless Handheld Floor Washer

Manufacturer: Shenzhen Karda Innovation Technology Co., Ltd

Product Model: 710a 810a (No further notification of model upgrade)

Executive Standard: GB4706.1-2015

Address: 1/F, Building A, No. 38, The Zhu'ao Third Industrial Zone, Guxu, Shenzhen

Website: E-mail:

Tel.:0755-61590728 Fax: 0755-61590729

Sales Center:

Hotline for free:

The explanation of the clauses related to the instruction belongs to Shenzhen Karda Innovation Technology Co., Ltd

Official WeChat Official Website

## Our Wireless Handheld Floor Washer "Three Guarantees" Certificate

The product after-sales service of the wireless handheld floor washer shall be implemented with the after-sale three guarantees services. The service contents are as follows:

### Guarantee period:

1. If there are performance faults listed in Product Performance Faults Table occurred in the product within 7 days from the date of lodgment which are detected and confirmed by our Company's after-sales service center, you can enjoy free replacement service or maintenance service
2. If there are performance faults listed in Product Performance Faults Table occurred in the product within 8 to 15 days from the date of lodgment which are detected and confirmed by our Company's after-sales service center, you can enjoy free maintenance service

Friendship tip: packaging boxes should be used in the operation process to ensure the product transport safety and it is suggested to keep the packaging boxes for at least 30 days from the date of lodgment

Type	Warranty content	Warranty period
Main machine	Main machine (including inlet lithium batteries)	3 months
Accessories	Charger adapter	3 months
Consumption materials	Mop, * disposable mop	/

Note: The consumption materials and accessories with the machine have no warranty period.

### Non-warranty lists

1. The unauthorized warranty, misuse, crash, carelessness, abuse, liquid inlet, accident, alteration, incorrectly using none-product accessories, or tearing or modifying labels or false proof marks
2. It exceeds the period of validity of three guarantees
3. Damage caused by force majeure(or overload)

## Moptop Wireless Handheld Floor Washer "Three Guarantees" Certificate

4. Conditions in which there are no performance faults
5. Faults caused by human causes for the product and its accessories

### Client Information

User name	
Phone NO.	
Address	
Product Name and Model Number	
Purchase Date	

### Maintenance records

	Maintenance Date	Fault Description and Accessory Replacement	Maintenance Center	Maintenance Engineer

Manufacturer: Shenzhen Karda Innovation Technology Co., Ltd.

Website:

Service Hotline:

Confirm the purchase time with information data including valid purchase time (including shopping receipt, purchase invoice, screenshot of purchase order, etc.). If there is no purchase time record, the date 60 days after the date of certificate of quality while leaving factory shall be deemed as the starting date of warranty.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.