 
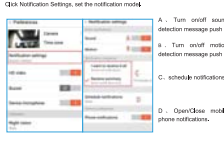 
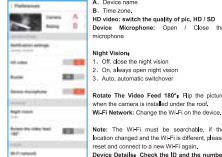 
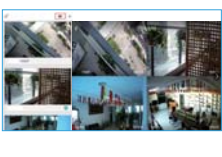 


Smart cloud storage-HD camera Instructions CLOUD-BASED STORAGE SERVICE 30 DAYS FREE EXPERIENCE (HIGHER-END AND SAFER STORAGE)  Dear customer: Thanks for your choice of our product. Before usage, please read the instructions carefully and save this brochure for further information.	2. App download and install (for smart phones) A. Search "YCC800" in the App store B. Scan the QR code provided below For Android  For iOS  C. For Android phones, please click the location service for connection. The request will be sent to you via the OS time of opening the app. Please ensure you approve it otherwise the App will not be activated and connected again.	3. Add a camera A. The product supports 2.4GHz Wi-Fi only. Before adding, please ensure your type of wireless device and the Wi-Fi connection of your phone. B. Please reset your camera before connecting your camera to the phone (Using a "Reset pin" (indicated) to press the reset button and the camera app "Reset" success). 	C. Keep for mobile screen 10-20cm before the camera, try to avoid any angle.  D. After the beep, click "Next" the loading to confirm and wait till addition successful. 	3. Cable connection (if port available) A. Connect the micro cable of the device and the router. B. Connect to internet, click "Add device" in the dashboard of the App to choose Addition by connecting to network cable.  C. Scan the QR code provided on the device to add. 	4. Function Introduction Go to homepage video page  A. My favorite B. Cloud video list, includes motion alarm video and sound alarm video C. Video to phone local D. Fast & FS E. Full Screen F. Cloud video makes drag to timeline position to check the record from the video G. Multi-Window H. New way audio I. Snapshot J. Parameter Menu
1. Main Functions: 	3. Instructions for the App 3.1 Sign up A. Click "Sign up" to create a new account for logging in B. If you forgot your password, you can reset your password, just click "Forgot password" on the login page. * Password should be at least 6 characters and not longer than 30 characters, it should be a combination of letters and numbers 	3.2 Scan the QR code provided to add a camera A. After connecting to the internet, click "Add device" and choose "device adding" by scanning the main QR code, click "Next" to proceed to the next step.  B. Enter the wireless account and password to connect. 	3.3 Wi-Fi Smart configuration A. After your phone connect to a Wi-Fi, please click "Add device" and "Choose a Wi-Fi network" to add the camera, after hearing the voice "Please use mobile phone for Wi-Fi configuration", please click the "Proceed to the Wi-Fi" button. B. Select your Wi-Fi and click "Next" with your consent. C. Enter the code "Internet connection" to use "Add device" and wait for the Wi-Fi connection to be successful. 	If you need to change Wi-Fi, please do the following: D. Open the video, click "P" in the right up corner E. Select "Wi-Fi Network" and choose your Wi-Fi, login with your password, then click "Connect" F. Unplug the ethernet cable between the camera and finish adding 	3.4 Cloud video playback & edit  Click the icon, check the cloud video page

change the 16:9 of the video  use the first of the video Click save, and the video will be saved to "My favorite" Automatically	3. Close/Open the camera, set your monitoring plan A. Click "Close" - check the parameter menu B. Click "Close" a QR is open or close the camera C. Set on/off time 	6. Notification Settings Click Notification Settings, set the notification mode A. Turn on/off sound detection message push B. Turn on/off motion detection message push C. schedule notifications D. Open/Close mobile phone notifications. 	8. Other Functions setting A. Device name B. Time zone HD video: watch the quality of pic, HD/SD Device: Microphone: Open / Close the microphone Night Vision 1. On: Close the night vision 2. On: always open night vision 3. Auto: automatic switch Rotate The Video Feed 180°: Flip the picture when the camera is installed under the roof. Wi-Fi Network: Change the Wi-Fi on the device. Note: The Wi-Fi must be appropriate, if the location changed and the Wi-Fi is different, please reset and connect to a new Wi-Fi again. Device Details: Check the ID and the number of the software/hardware of the device. Remove Device: Please remove the camera on your account if you need to use another account to add the camera. 	10. How to check the video on PC Login  Enter your email address and login with your password on http://www.youkucloud.com Note: Don't forget to log in	
3.5 Favorites video playback / share A. Click "My favorite" B. Choose and play the video C. Click "Share" You are share your Video on Facebook and YouTube, you can also share to Weibo. D. Select "Download" to save the video to your phone. 	5. Cloud Storage Service We offer 20GB free cloud storage service, everyone can enjoy the cloud storage service for free, after that you can choose to pay for the service with a fee cost. A. Select "Cloud service" and check Subscription packages B. There are three kinds of subscription packages for you, you can choose to pay for this service by month or year. C. The support 7x24 hours customer support, click "Go to English" and then find the portal (please read English page is advised). Note: This cloud service is supported by Amazon AWS, all the videos and messages are stored in Amazon web service, it was authorized by AWS Data Privacy product verification, ensuring your safety and privacy are protected. Due to the cloud subscription package is linked with the device, if the camera stops working and you need to transfer the subscription package to new device, please contact the seller. 	7. SD card Insert the SD card into the camera and start the camera (Don't do this while it's working)  A. Memory space 64GBG B. 128GB TF card C. H265 or H264 format D. Use after formatting E. Recommended: H265/H264/H265/H264 Note: After the SD card is inserted, the video clip will be in the SD card and also messages in the future.	9. Multi-screen viewing video (Only applies to multiple devices under the same account) 	11. Function Introduction  A. 4x Digital zoom B. Stop playback C. Volume setting D. Timeline view E. Fast FTLT F. Full Screen G. Open Open Camera H. Parameter setting, set the quality of picture and notifications. I. Cloud video makes drag to each timeline position to check the record from the video.	

Warnings:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its accessories must not be used in or near explosive or flammable atmospheres.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 20 cm between your body. This device and its accessories must not be used or operated in conjunction with any other wireless or transmitter.