


Robot Vacuum Cleaner

K306A User Manual

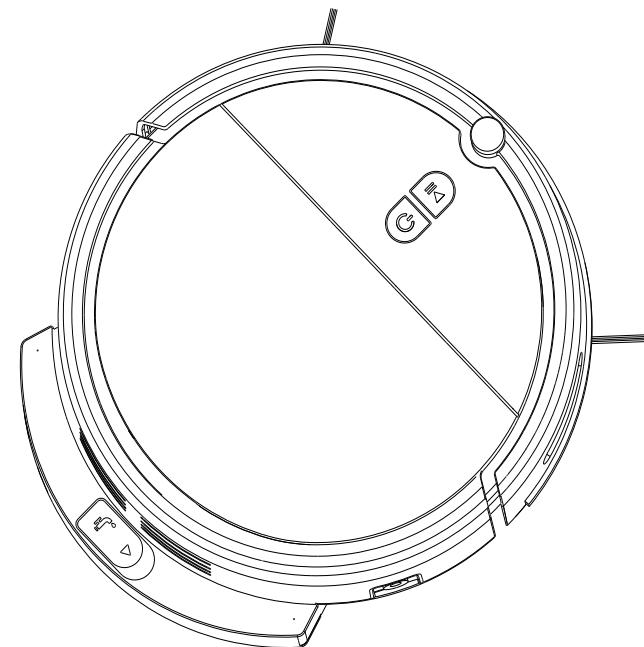

Thanks for your purchasing

Please read this manual carefully before using

Contents

1. Important Safety Instructions	1
2. Package Contents	2
2.1 Component Name	2
2.2 Structure Introduction	2
2.3 Technical parameters	3
3. Product Usage	4
3.1 Precautions	4
3.2 Quick Operation	4
3.3 Mobile App Use	5
3.4 Mode selection	8
3.5 Mopping function	8
3.6 Remote Control Usage	9
3.7 Side brush usage	10
4. Maintenance	11
4.1 Dust box and filter	11
4.2 Map plate with cloth	11
4.3 Roller brush and side brush	11
4.4 Other components	12
5. Troubleshooting	13

5. Troubleshooting


If the machine breakdown when cleaning, please follow below situation firstly

Situation	Possible Reason	Solution
Unit can not work	Unit not turned on	Turn on power switch
	Ran out of battery	Charge with adapter
Unit can not charging	Charging contact fail	Ensure adapter contact OK
	Cliff sensor dirty	Clean sensors with dry cloth
Unit going backwards	Front bumper stuck	Tap front bumper
	Unit cannot reverse	Front bumper problem
Unit working abnormally	Wheels tangled	Clean it
	Incorrectly installed	Reinstall correctly
Side brush abnormal	Tangled	Clean it
	The dust bin or vacuum inlet is clogged	Clean dust bin or vacuum inlet
Universal wheel abnormal	Tangled	Remove wheel and clean it
Other abnormality or issue persisting	Unknown	Turn unit off and on floor and turn on again


Attention: If the above solution can't solve the problems, please contact after-sales service. Please do not assemble the machine by yourself!

4.4 Other parts


Clean the cliff sensors to keep sensitivity high.

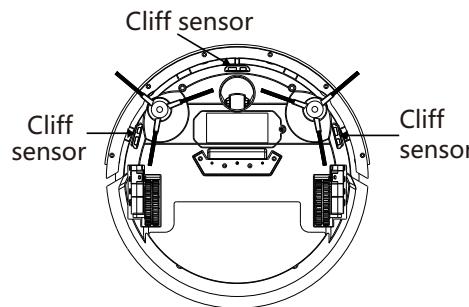


Clean the gap between the cover and bumper/clean the signal window for better obstacle avoidance.

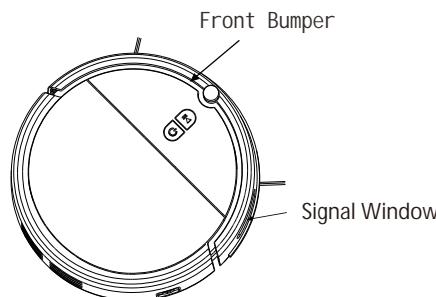

Clean the universal wheel, runner and spindle to reduce noise and debris getting caught.

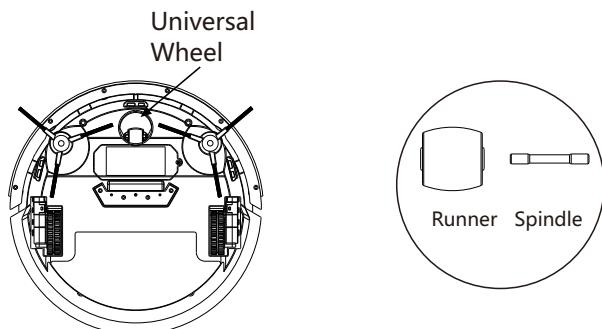



Use a dry cleaning cloth to clean the charging pole piece, the recharging pole piece and the signal transmitting window to ensure that the automatic charging process of the machine is smooth.

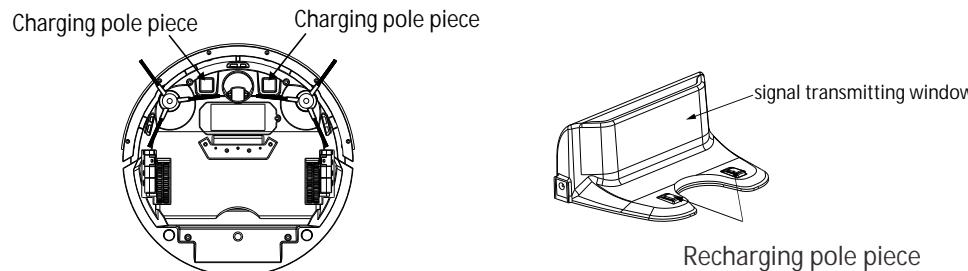

1. Safety Standard


The safety standard are intended to prevent damage to the user's person or property, so please read the following precautions carefully. The following symbols have the meanings indicated below:

Caution Violation of safety instructions may result in minor personal injury or product damage

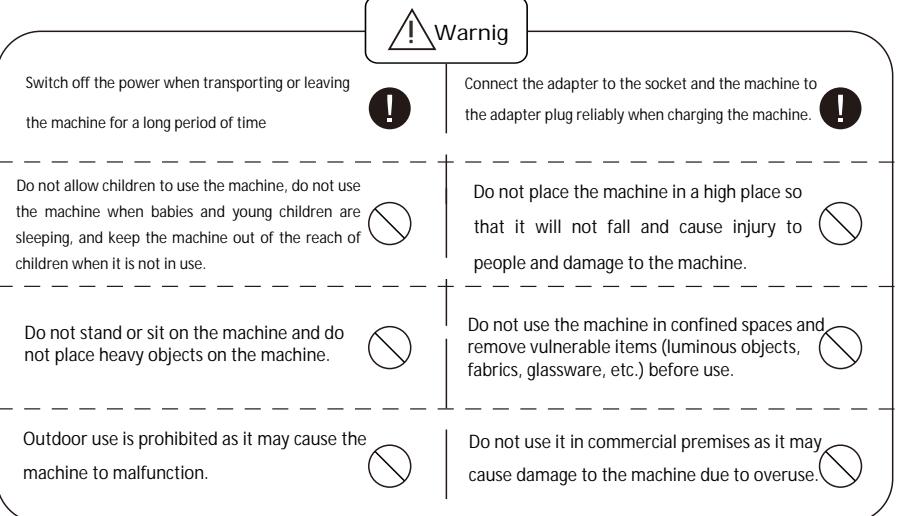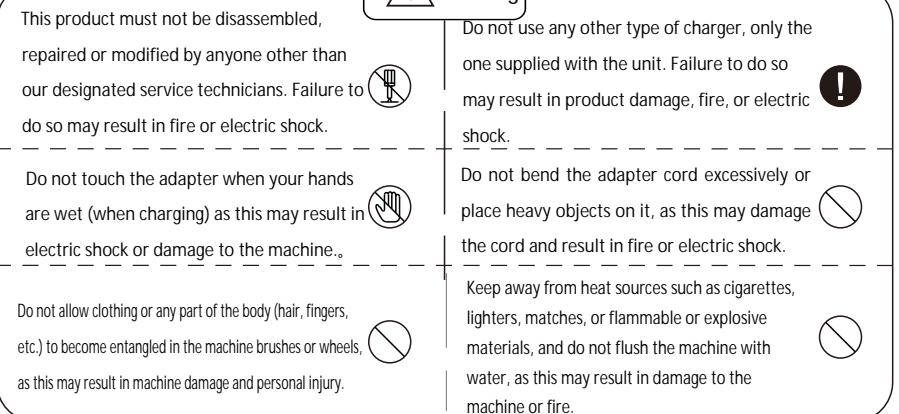


2. Product Composition

2.1 Names of components

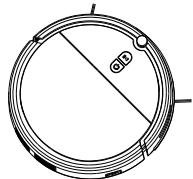

Machine

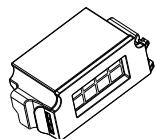


Dust box




Water tank (with cloth)



Adaptor

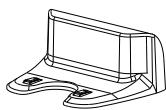

Dock station

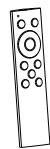


Remote Control



2.2 Structure Introduction


•Robot

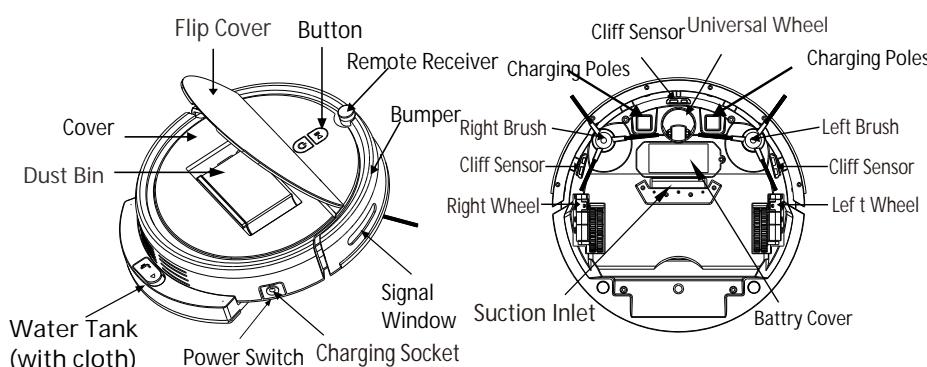

4. Maintenance

4.1 Dust box

Remove the dust box and clean up the rubbish.

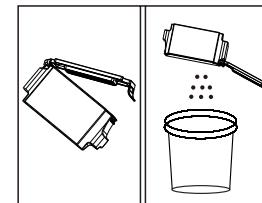


Clean the dust box (cover) with a brush or rinse with water.



Note: In order to make the machine have a continuous good vacuuming effect, the user should clean the dust box (cover) and the main machine vacuum port in time.

Air out the dust bin for effectiveness and longevity.

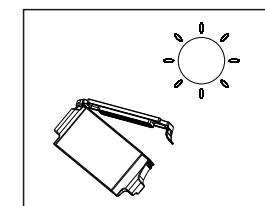


4.2 Water tank (with cloth)


After mopping, empty the water tank and remove the cloth for cleaning and drying.

4.3 Suction Inlet and side brush

Cleaning the suction Inlet: If there is a lot of dust accumulated in the suction Inlet, please clean it with a clean cloth.

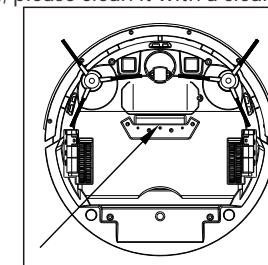


Cleaning the side brushes: remove the side brushes with gentle pressure
Clean the brushes and grooves of the brushes of debris.

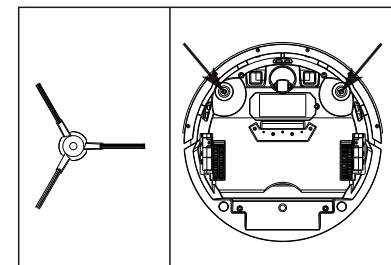


3.7 Side Brush Usage


1 Left and right side brush illustrations

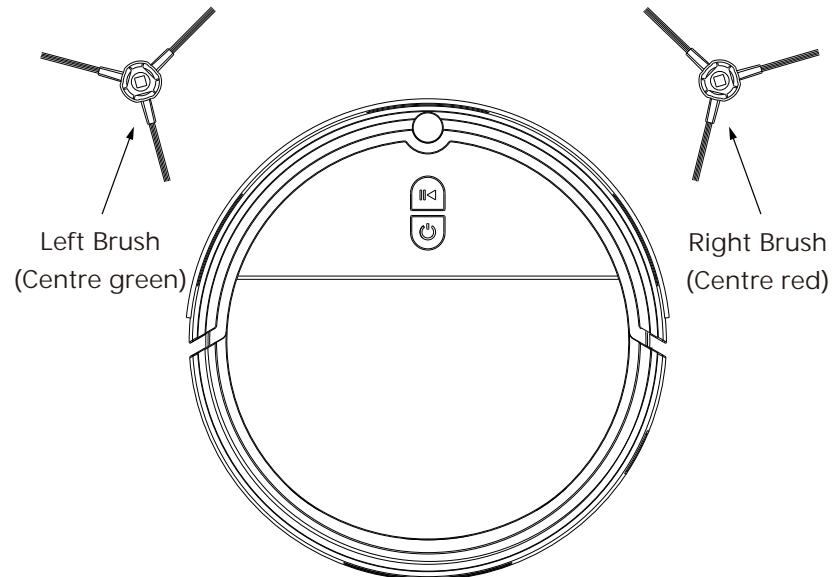

• Dust Box

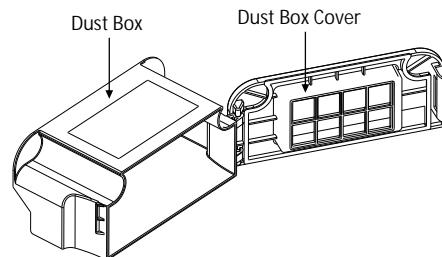

• Dock Station

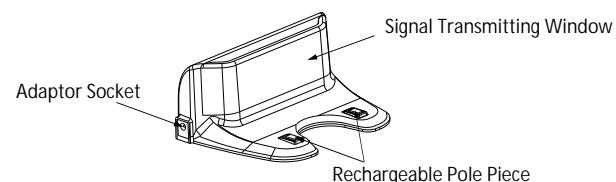

2.3 Technical Parameters

Model	K306A		
Work Voltage (V)	11.1	Rated Input Voltage(V)	15.0
Rated Power (W)	11	Rated input current (A)	0.6
Adaptor	JYH7Z-1500060-BC		
Input	100-240V~50/60Hz 0.5A		
Output	15V== 0.6A		
Battery	1500mAh Li-ion		

*Due to the continuous improvement of the product, any technical and design changes are subject to change without prior notice.

11.1

15.0

3. Product Use

3.1 Precautions

1. Please remove power cords, cords and other debris scattered on the ground before use to avoid tripping or entangling the machine.

2. Furniture, beds and other objects with less than 7.2cm clearance at the bottom may cause the machine to get stuck during use, so please pay special attention to such areas when cleaning.

3. Before using this product on the carpet, please remove the two side brushes and mop and roll up the carpet fringe.

4. The product can be used on wooden floors, tiled floors and concrete floors, as well as on short-haired carpets (less than 1cm thick).

3.2 Quick operation

① Charge the main unit (switch on the main unit when charging).


① Manual charging

Connect one end of the power adapter with the charging jack of the host, and the other end with the power supply, the key indicator light is flashing, charging connection is successful.

Red light is blinking, charging is in progress;


Green light is always on, charging is completed.

For first time use, please charge continuously for more than 8 hours; when charging the main unit, make sure the surface of the cloth is dry to avoid leaking wet on the floor.

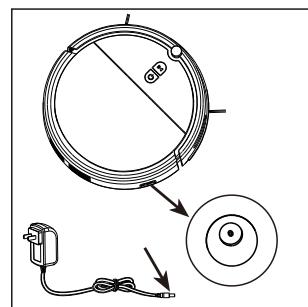

② Automatic charging

- Place the rechargeable cradle flat against the wall, with no objects placed within 1.0m to the left, right and 2.0m in front of it, and no objects with strong reflective surfaces such as mirrors.
- Connect the power adapter to the power source and to the charging station.
- When the power is low, the machine will automatically find the charging cradle and recharge it.

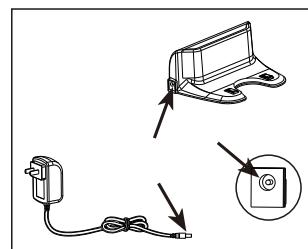

3.6 Remote Control Usage



- stopped working, into hibernation
- auto trcharge
- start / stop cleaning
- direction button (use when the machine stopped)
- start / pause automatic cleaning
- start / pause edge cleaning
- start / pause spot cleaning
- turn/on the voice
- APP connect button

3.4 Mode Selection

In order to adapt to different floor conditions and realise deep cleaning, this product is equipped with a variety of cleaning modes, which can be selected by the remote control according to the needs, and the user can also control the movement of the machine through the direction keys on the remote control.

1 Automatic Cleaning Mode

The main unit automatically carries out planned full-coverage sweeping.

2 Along the edge sweeping mode

Sweeps along the corners of the room, and the main unit sweeps along the fixed objects (e.g. walls).

3 Focused cleaning mode


Focuses on specific areas for more thorough cleaning, recommended for large areas with fewer obstacles such as living rooms.

4 Automatic recharge mode


The machine pauses cleaning to automatically find the charging seat for recharging.

3.5 Mopping Function


This machine has a mopping function, wet the rags before use for better mopping effect. Install the rag to the bottom of the water tank and then assemble the water tank to the bottom of the machine to start the mopping mode.

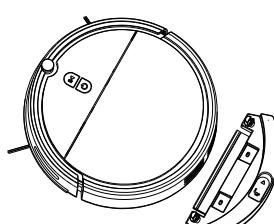

1 Remove our the water tank

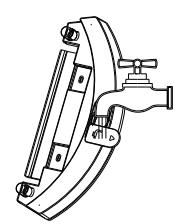

2 Open plug, inject water

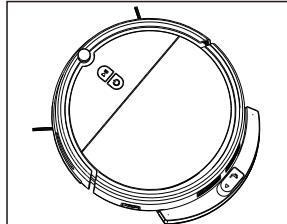

3 Install water tank to machine

Do not mop on carpet

2 Turn on the machine

Turn on the power switch of the mainframe, the key indicator lights up, the boot is successful.

3 Start cleaning

Short press machine  button to start automatic sweeping mode

4 Suspension of work

When the mainframe is working, press the mainframe  button briefly once, the mainframe stops working. (Press the  button again, the host resumes automatic sweeping.)



5 Turn off the machine

After pausing the work, turn off the power switch of the host, the key indicator goes out, and the shutdown is successful.

3.3 Mobile App Use

1 Mobile App Download & Instructions

Scan the QR code in the picture (or search for "TUYA" on your mobile phone) to download and install the product APP. For more functions, please refer to the APP interface tips.

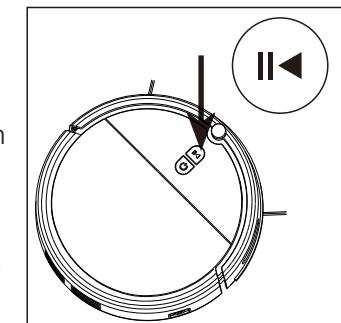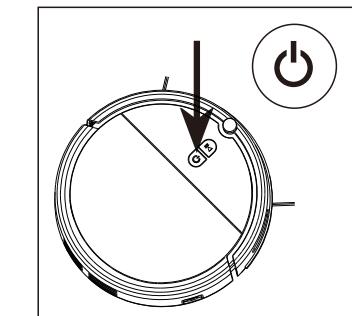

2 Machine WIFI Setting

Turn on the machine, long press  button for 3-5 seconds (or short press the "WIFI" button on the remote control), the beep will sound and the  button will blink, then it will enter the WIFI setting. After the host enters the WIFI setting, add the device in the APP interface, and connect to the network according to the prompts.

Note: 1. After the first successful network connection, users do not need to do the network operation again, when the WIFI signal changes, you need to re-connect to the network.

2. This product supports mobile phone APP remote control

3. This APP supports Android and IOS users.

FCC WARNING

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

3 The detailed distribution (hotspot distribution) steps are as follows



Step 1:
Download and log in to Tuya App




Step 2: Adding device

Step 3:
Select the Wi-Fi method to connect

Step 7: Connect with hotspot

Step 8 :
Connecting Smart Life-XXX

Step 9 :
Connect hotspot successful

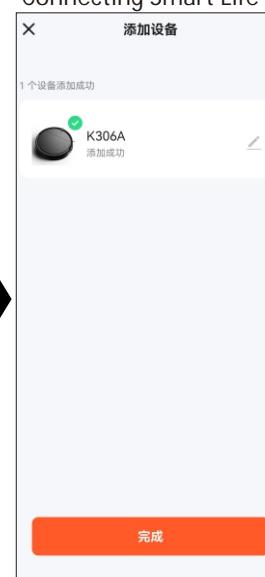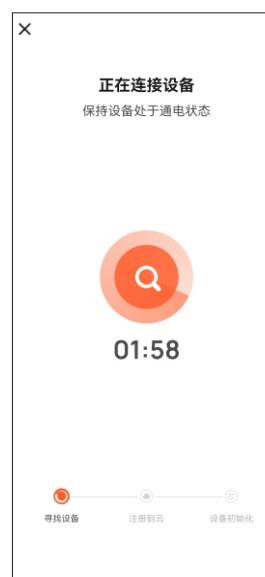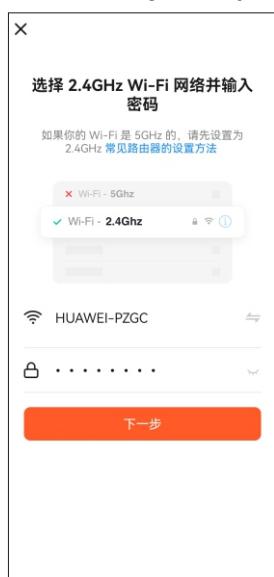

Step 4:
Enter the password to connect to the Wi-Fi

Step 5:
Make sure the machine is in Wi-Fi mode

6

Step 6:
Selection of hotspot distribution network

Step 10:
Wait for the device to connect

Step 11: Device
Connected Successfully

Step 12:
Can be controlled
remotely via APP