


Collectible Bluetooth Speaker

**Guide**

# Product Diagram

---

**bitty  
boomers**®

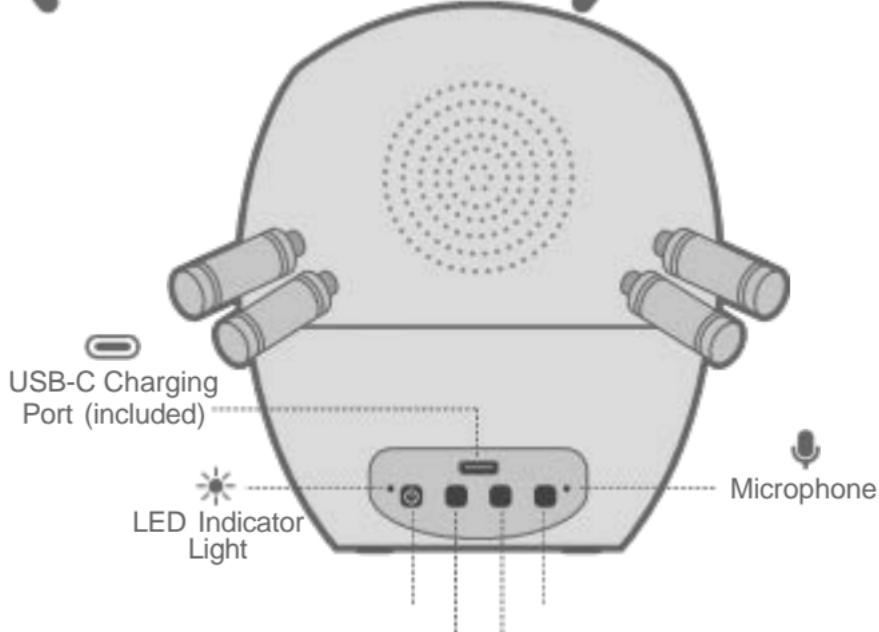

# Product Diagram

---



## Buttons

---



Press and hold for 3 seconds to turn your Bitty Boomer ON. Repeat this step to turn OFF. Short press to PLAY/PAUSE. When connected via Bluetooth, short press to answer a call. Long press to reject the call. Double click to dial back the call.



Short press MODE to toggle between modes. When connected via Bluetooth, long press for TWS function (pairing mode).



Short press for the PREVIOUS song, long press to reduce volume.



Short press for the NEXT song, long press to increase volume.

## Battery

---



Your Bitty Boomer speaker comes with a built-in rechargeable battery. Prior to using it for the first time, it is recommended to completely charge the battery. When the speaker is in low power status, the speaker will emit a tone. Connect the provided USB-C cable to a compatible AC-charger (not included), computer or laptop USB port. The LED light indicator will be illuminated red while charging. It takes approximately 3-4 hours to completely charge the battery. When charging is completed, the red LED will turn green. When the battery is fully discharged, the unit will require a minimum of 30 minutes of charging before speaker function or Bluetooth music streaming can resume.

Your speaker will automatically shut down after 5 minutes in stand by mode.

# Quick Start Guide

---

## Connecting to Bluetooth via smart phone or tablet:

Prior to using your Speaker under Bluetooth mode, you will need to pair it with a Bluetooth-enabled smart phone. After switching power on, the speaker will emit a tone and the blue indicator light will flash consecutively which indicates the Bluetooth function is available.

1. Make sure the mobile phone and the speaker are within Bluetooth range (no more than 20 feet apart).
2. Activate your mobile phone's Bluetooth function and set your mobile phone to search for Bluetooth devices. After the search is completed, select "BITTY BOOMER" from the Bluetooth device list. If Bitty Boomer is powered on but not showing up within the Bluetooth menu, try to short press MODE button to make sure it is in Bluetooth mode.
3. You can now enjoy your music with the speaker by controlling the music via your music player and with the volume being adjusted on the speaker's volume buttons or directly on your Bluetooth device.

### Note:

1. The Bluetooth speaker will only sync with one device at any time. You can select "FORGET THIS DEVICE" to disconnect.
2. A Bluetooth connection list cannot have two devices with the same name. This will cause one of the two devices to fail to connect via Bluetooth.

## Quick Start Guide pg. 2

3. When playing music on some mobile phones, the music will be transmitted to the mobile phone's speaker instead of the portable speaker. You have to select "transmit the sound via Bluetooth" in the settings menu and then choose "BITTY BOOMER" as speaker device. The music will be transmitted to the speaker. Please refer to your mobile phone's user manual for further information.
4. Some smart phone's and music players do not have smooth cache, this will cause a slight "POP" tone when paused. This is a normal sound.
5. If Bluetooth pairing fails, delete other Bluetooth devices in the connection list, restart speaker and try again.
6. The disconnection of Bluetooth is not immediate and will be delayed a few seconds before fully disconnecting from the smart phone.

### **Connecting to Bluetooth via PC/laptop or other Bluetooth enabled device:**

1. Make sure your device and the speaker are within Bluetooth range (no more than 20 feet apart).
2. Make sure Bluetooth is turned on within your device. Select "BITTY BOOMER" from the Bluetooth device list. If Bitty Boomer is powered on but not showing up within the Bluetooth menu, try to short press MODE button to make sure it is in Bluetooth mode.

### **Pairing 2 Bitty Boomers together:**

1. Make sure 2 Bitty Boomers are turned on and within range of each other (no more than 20 feet apart).
2. Make sure each Bitty Boomer is in Bluetooth mode.
3. Long press the **M** button and the 2 Bitty Boomers should automatically pair together.

# Quick Start Guide pg. 3

---

## **Microphone:**

Your speaker includes a built-in microphone. If a cellular device is connected via Bluetooth, the speaker may be used as a secondary talking device.

## Specifications

Speaker	4 OHM
Bluetooth version	5.3
Frequency response	120-10K HZ
Signal-to-noise ratio	≥84dB
Battery type	Lithium-ion polymer (3.7 V, 1500 mAh)
Battery charge time	3.5 hours @5V 500mA
Music playing time	up to 6 hours (varies by volume level and audio content)
Bluetooth transmitter frequency range	2.402-2.480 GHZ
Bluetooth transmitter modulation	GFSK, (GFSK + π/4DQPSK)
Dimensions	145 * 130 * 125 mm
Weight	550G

**Warning:** To reduce the risk of fire or electric shock, do not expose this speaker to rain or moisture (including swimming pools or objects filled with liquids, such as vases or drinks). **Warning:** Your speaker has an internal rechargeable battery. Improper usage may result in the speaker becoming hot, ignite, or bust and cause injury if exposed to conditions of abuse.

# Regulatory Information

---

**Important Safety Instructions:** 1. Always read safety and operation instructions before use. Retain instructions for later reference. 2. For indoor use only. Do not expose speaker to liquid, moisture or humidity. 3. Do not use abrasive cleaners to clean the speaker casing as they may damage the finish. Liquid cleaners can also get inside the speaker and damage internal parts. A simple cloth to wipe away dirt and other particles will do the job nicely. Always unplug the unit before cleaning. 4. Do not expose the speaker to extremely high or low temperatures. 5. Keep the unit away from direct sunlight. 6. Do not attempt to open or modify the speaker in anyway as it does not contain any serviceable parts. 7. Please store the speaker in a dry place that is free from extreme temperatures and dust. 8. Always operate the speaker on a flat and level surface. 9. If unit is plugged in, always operate away from small children or small animals as they may play with the power cord. 10. Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. 11. Always dispose of the packaging and speaker in accordance with the local regulations and in a responsible manner.

**LIMITED WARRANTY:** Bitty Boomers/ Fabrique Innovations Inc. warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser, will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor to any product the exterior of which has been damaged or defaced which has been subjected to misuse, abnormal service or handing or which has been altered or modified in design or construction. The limited warranty described herein is in addition to an applicable law. **ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.** Some states do not allow limitations on how long an implied warranty last, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of Bitty Boomers/ Fabrique Innovations Inc..

The warranties described herein shall be the sole and exclusive warranties granted by Bitty Boomers/ Fabrique Innovations Inc. and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Bitty Boomers/ Fabrique Innovations Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability or otherwise. In no event shall Bitty Boomers/ Fabrique Innovations Inc. be liable or in any way responsible for any incidental or consequential economic or properly damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. **THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.**

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Fabrique Innovations Inc./ Bitty Boomers is under license. Other trademarks and trade names are those of their respective owners.

# Regulatory Information

---

FCC Warning: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## IC Caution:

English: This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. Le matériel a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences. Le dispositif peut être utilisé dans des conditions d'exposition portables illimitées.

© 2023, Fabrique Innovations Inc., © 2023 Bitty Boomers • © 2023 NETFLIX • Distributed by Fabrique Innovations Inc., New York, NY 10018 • 800-511-1595 • All Rights Reserved • Made In China

(6



FC

CP65 ROHS

FCC ID: 2ARI7BB6 IC: 24431-BB6

CMIIT ID: 2020DP3626 QDID: 172491 HVIN: BB6  
DECLARATION/DÉCLARATION/DECLARACIÓN ID: D056623

For Questions or Technical Support Please Contact:  
[support@bittyboomers.com](mailto:support@bittyboomers.com)