

80X150mm

720mm

www.phonemax.cc



PHONEMAX
Quietly Outstanding

User Manual

Read me first

- ◆ Please read this manual before operating your mobile phone, and keep it for future reference.
- ◆ The descriptions in this manual are based on the default setting.
- ◆ Images and screenshots used in this manual may differ from the actual product.
- ◆ Available features and additional services may vary by device, software or service provider.
- ◆ Our company is not liable for performance issues caused by third-party applications.

Contents

Assembling	- 1 -
Unpack	- 1 -
Charge the battery	- 1 -
Install the SIM card	- 1 -
Install the memory card	- 1 -
Getting started	- 1 -
Turn on your device, reboot and off	- 2 -
Switch to flight mode	- 2 -
Home screen	- 2 -
Task bar	- 2 -
Notification panel	- 2 -
Auto rotation	- 2 -
Lock & unlock the screen	- 3 -
Customize your device	- 3 -
Charge the battery	- 4 -
Using the device for the first time, you must charge the battery	- 4 -
1. You can charge the device with a travel adapter or by connecting the device to a PC with a USB cable.	- 4 -
2. Battery full icon is shown when finished if your device is off.	- 4 -
Wi-Fi: Activate or deactivate the Wi-Fi connection.	- 4 -
Bluetooth: Activate or deactivate the Bluetooth connection.	- 4 -
Communication	- 5 -
Phone	- 5 -
Contacts	- 5 -
Messaging	- 5 -
Email	- 5 -
Web	- 5 -
Browser	- 5 -
Entertainment	- 5 -
Cameras	- 5 -
Tools	- 5 -
Calendar	- 5 -
Alarms	- 5 -
File Manager	- 5 -
Sound Recorder	- 5 -
Calculator	- 5 -
Connectivity	- 5 -
USB Connection	- 5 -
Wi-Fi	- 5 -
Bluetooth	- 5 -
Safety Precautions	- 5 -
Care & Maintenance	- 5 -
Warnings	- 5 -

Assembling

Unpack

Check your product box for the following items.

- Mobile phone
- User manual
- Charger

You can purchase additional accessories from your local retailer.

Charge the battery

To use only your device's non-network services, switch to flight mode. Please follow the instructions below to turn on flight mode:

Tap **Settings** → **Network & Internet** → **Advanced** → **Airplane mode** from application list to turn on flight mode.

Home screen

The home screen has multiple panels. Scroll left or right to the panels on the home screen, you can view indicator icons, widgets, shortcuts to applications, and other items.

Task bar

The task bar is shown at the top of the screen. It displays commonly used option buttons, battery level indicator, current time and other indicator icons.

Indicator icons

Icon	Definition	Icon	Definition
	Open Wi-Fi available		Flight mode activated
	Wi-Fi connected		New email
	Signal strength		New text or multimedia message
	B'F connected		Call in progress
	Uploading data		Missed call
	Downloading data		Call on hold
	Connected to PC		Call diverting activated
	Alarm activated		Battery power level

Getting started

Turn your device on, reboot and off

To turn on your device, press and hold the power key. To reboot your device, press and hold the power key, select "reboot". To turn off your device, press and hold the power key, select "power off".

Switch to flight mode

To use only your device's non-network services, switch to flight mode. Please follow the instructions below to turn on flight mode:

Tap **Settings** → **Network & Internet** → **Advanced** → **Airplane mode** from application list to turn on flight mode.

Wi-Fi: Activate or deactivate the Wi-Fi connection.

Bluetooth: Activate or deactivate the Bluetooth connection.

Notifications: Activate or deactivate the notification feature.

Task bar

The task bar is shown at the top of the screen. It displays commonly used option buttons, battery level indicator, current time and other indicator icons.

Indicator icons

Icon	Definition	Icon	Definition
	Open Wi-Fi available		Flight mode activated
	Wi-Fi connected		New email
	Signal strength		New text or multimedia message
	B'F connected		Call in progress
	Uploading data		Missed call
	Downloading data		Call on hold
	Connected to PC		Call diverting activated
	Alarm activated		Battery power level

Customize your device

To customize your device according to your preferences, tap **Settings** from application list or notification panel.

Manage applications

To manage the applications installed on your device, tap **Settings** → **Apps & notifications**.

1.To uninstall an application, select an item and tap **UNINSTALL**, tap **OK** to confirm.

2.To stop or change the settings of an application, select an item and tap the option you need.

Security

You can protect your device and data by setting screen lock or encrypting your mobile phone.

◆ **Set a screen lock**

To set a screen lock, tap **Settings** → **Security & location** → **Screen lock** from application list.

- **None**: Deactivate the screen lock.
- **Swipe**: Slide to unlock the screen.
- **Pattern**: Draw a pattern to unlock. Follow the instructions to draw your lock pattern. When prompted, draw the pattern to unlock the screen.

Flashlight

Activate or deactivate the Flashlight.

Auto-rotate screen

Activate or deactivate the auto rotation feature.

Battery Saver

Activate or deactivate the Battery Saver.

Brightness

Adjust the basic brightness level of the display to lighter or darker.

Settings

Access Settings application.

Auto rotation

If you rotate the device while using some features, the interface will automatically rotate as well. To prevent the interface from rotating, open the notifications panel and select **Auto-rotate screen**, then tap it to Off.

Display

Select **Settings** → **Display** → **Advanced** → **Sleep** from application list, you can set the time before the screen times out and goes into lock mode. (you have not entered any characters or made other selections).

Display size

1.You can set it **Settings** → **Display** → **Advanced** → **Display size**

Data saver

1.You can set it **Settings** → **Network & Internet** → **Data usage** → **Data saver**

Quick Switch

1. You can switch applications by simply double clicking the "Recent" button.

Reset mobile phone

You can reset system and desktop settings to their original values by the following steps:

1.Select **Settings** → **System** → **Advanced** → **Reset options** from application list.

2.Tap **Erase all data (factory reset)**.

3.Tap **RESET PHONE**.

4.Tap **ERASE EVERYTHING**.

The device resets to the factory default settings automatically.

Warning: Factory data reset will erase all data from your device, including your Google account, system and application data and settings, and downloaded applications.

Communication

Phone

To use calling functions, tap **Phone** from application list.

◆ To make calls, you can use any of the three ways:

- **Enter numbers** by using the virtual numeric keypad on the screen.
- **Password**: Enter a password to unlock. When prompted, enter the passcode to unlock the screen.
- **Pattern**: Draw a pattern to unlock. Follow the instructions to draw your lock pattern. When prompted, draw the pattern to unlock the screen.

Answer a call

To answer a call, swipe up the screen.

◆ **Decline or end a call**

To decline a call, Swipe down the screen.

Call settings

To change call settings, tap the option button at the lower Right of the dial-up interface.

1.**Ringtone & Vibrations**

◆ You can set different ringtones for incoming calls.

2.**Call settings**

◆ **Call settings**

3.**Display size**

4.**Display**

5.**Screen lock**

6.**Screen lock**

7.**Call waiting**

If call waiting is activated, the network notifies you of a new incoming call while you have a call in progress or you can make a new call during a call.

Contacts

Tap **Contacts** from application list to access contacts.

- **All**: List all your contacts saved in the device memory and SIM cards.
- **Favorites**: List the contacts that you have set as favorites or the contacts that you have sent message to or dialed.

Export to MEMORY card

To export contacts from your device to a memory card, tap the option button at the upper left and then select **Export** → **Export contacts** → **.vcf file** → **Select MEMORY card** → and then click **OK**.

Import from MEMORY card

To copy the contacts from the SIM card, click the option button at the upper left and then select **Import** → **COPY CONTACTS FROM select USIM** → **click NEXT** → **COPY CONTACTS TO select Phone contact** → **click NEXT** → **select contacts, and then click OK**.

Import from .vcf card

To copy the contacts from the .vcf file, click the option button at the upper left and then select **Import** → **COPY CONTACTS FROM select .vcf file** → **click NEXT** → **COPY CONTACTS TO select Phone contact** → **click NEXT** → **select one or multiple .vcf files to import, click OK**. Choose .vcf files, and then click **OK**.

Search for contacts

1.Click at the upper right from contact list screen, enter the desired information, then your device shows the result.

Message

Learn to create and send a text or multimedia message, and view or manage messages that you have sent or received.

◆ **View messages**

1.Click Messaging from application list.

2.Click the message to view the detailed information.

◆ **Create and send SMS**

1.Click from application list.

2.Click enter **NEW MESSAGE**.

3.In **Type name or number** field, enter the recipient's mobile phone numbers manually. If you enter more than one number, separate the numbers with a comma.

3.In **Type test message field**, enter the text of the message.

4.Click to send the message.

◆ **Create and send MMS**

Multimedia message can include pictures, sound and text.

1.Click enter **NEW MESSAGE**.

2.In **Type name or number** field, enter the recipient's mobile phone numbers manually. If you enter more than one number, separate the numbers with a comma.

3.Click **Attach** to Select one of the items below.

- Pictures: Insert image.
- Capture picture: Capture new picture and insert the picture.
- Videos: Insert video.
- Capture video: Capture new video clip and insert the video clip.
- Audio: Insert sound clip.
- Record audio: Record sound clip and insert the sound clip.
- Slideshow: Add more than one slide.
- Contact: Insert contacts.
- Calendar: Insert Calendar.

4.In **Type test message field**, enter the text of the message.

5.Click to send the Multimedia message.

Email

To receive and send mail, you must have a remote mailbox service. This service may be offered by a service provider. Your device is compliant with applicable internet standards for POP3/IMAP/Exchange.

Before you can send or receive mail on your device, you need to set up an email account and define the email settings correctly. You can define more than 1 mailbox.

◆ **Set up your email**

1.Click from application list.

2.You can use mailbox guide to set up your mailbox, tap **Next** until it's done.

3.If you need to add another email account, tap the **option button** at the upper left → **Settings** → **Add account**, then set up the email account with the mailbox guide.

When you are finished setting up the email account, the email messages are downloaded to your device. If you have created more than two accounts, you can switch between email accounts. Select an account name at the top left of the screen and select the one you want to retrieve messages from.

◆ **Delete your email account**

Click **Settings** from application list → **Users & accounts** → Click on the email address → **Remove ACCOUNT** button.

◆ **Create and send email**

1.Open the application list and select **Camera**.

With the Camera feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

2.Tap to start recording. The length of the video recording is restricted by the available space on your storage.

3.Tap to stop recording. The video is saved automatically to the folder DCIM.

4.After recording videos, select the image viewer icon at the lower right to view the recorded videos.

Tools

Calendar

With the Calendar feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

2.To create an event, tap the option button at the upper right and then select **New event**.

3.In **TO field**, enter the recipient's email addresses manually and separate them with a comma. Add more recipients by tapping **Cc/Bcc**.

4.Click to choose attachments that you want to insert.

5.Enter the subject and the text.

6.Click **SEND** button to send the email.

Web

Browser

Tap **Browser** from application list to access to the web.

◆ **Browser webpages**

1.Select **Browser** to launch a specified homepage.

2.To access a specific webpage, select the URL input field, enter the web address of the webpage, and select **Go**.

◆ **Set homepage**

1.Tap the **option button** at the upper right.

2.Select **Settings** → **General** → **Set homepage**.

3.Tap the **option button** at the upper right to take a photo.

4.Tap the **option button** at the upper right and then select **Transfer files**.

5.Tap the **option button** at the upper right to change the camera mode.

6.Tap the **option button** at the upper right to change the camera mode.

Entertainment

Camera

With the camera function, you can capture photos and take videos.

◆ **Capture a photo**

1.Open the application list and select **Camera**.

2.Before taking a picture, you need to know some settings.

3.Tap the **option button** at the lower right to view the pictures.

◆ **Record a video**

1.Open the application list and select **Camera**. Tap to change to video mode.

Tools

Calendar

With the Calendar feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

2.Tap to start recording. The length of the video recording is restricted by the available space on your storage.

3.Tap to stop recording. The video is saved automatically to the folder DCIM.

4.After recording videos, select the image viewer icon at the lower right to view the recorded videos.

Entertainment

Camera

With the Camera feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

2.Tap to start recording. The length of the video recording is restricted by the available space on your storage.

3.Tap to stop recording. The video is saved automatically to the folder DCIM.

4.After recording videos, select the image viewer icon at the lower right to view the recorded videos.

File Manager

Many features of the device, such as images, videos, documents, received attachments and downloaded files or applications, use memory to store data. With **File manager**, you can store and browse files and folders in your device, or edit, move, copy files; you can send files to compatible devices as well.

Activate the Wi-Fi feature

1.From application list, tap **Settings** → **Network & Internet**, turn on the Wi-Fi feature.

◆ **Find and connect to Wi-Fi**

1.Once the Wi-Fi feature is activated, the device automatically search for available Wi-Fi connection.

2.Select a network.

3.Enter a password for the network (if necessary).

4.Select **Connect**.

Bluetooth

With Bluetooth, you can share music, pictures, video, contacts with another phone. You can use Bluetooth headset phone or listening to music.

◆ **Activate the Bluetooth feature**

1.From application list, tap **Settings** → **Connected devices** → **Pair new device**.

2.To stop the recording, tap .

3.To listen to a voice recording that you just recorded, tap .

Calculator

With this feature, you can use the device as a calculator. The calculator provides the basic arithmetic functions. Tap the virtual numeric and calculation keys to perform a calculation.

Connectivity

USB Connection

You can connect your device to a PC and use it as a removable disk, which allows you access the file directory.

1.If you want to transfer files from or to device, insert a memory card into the device.

2.Tap the numeric pad to set alarm time, and then select **AM or PM**, when you are finished, tap **OK**.

◆ **Record a video**

1.Tap the **option button** at the upper right and click to Delete this alarm.

2.Tap the **option button** at the upper right to change to video mode.

Entertainment

Camera

With the Camera feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

2.Tap to start recording. The length of the video recording is restricted by the available space on your storage.

3.Tap to stop recording. The video is saved automatically to the folder DCIM.

4.After recording videos, select the image viewer icon at the lower right to view the recorded videos.

File Manager

Many features of the device, such as images, videos, documents, received attachments and downloaded files or applications, use memory to store data. With **File manager**, you can store and browse files and folders in your device, or edit, move, copy files; you can send files to compatible devices as well.

Activate the Wi-Fi feature

1.From application list, tap **Settings** → **Network & Internet**, turn on the Wi-Fi feature.

◆ **Find and connect to Wi-Fi**

1.Once the Wi-Fi feature is activated, the device automatically search for available Wi-Fi connection.

2.Select a network.

3.Enter a password for the network (if necessary).

4.Select **Connect**.

Bluetooth

With Bluetooth, you can share music, pictures, video, contacts with another phone. You can use Bluetooth headset phone or listening to music.

◆ **Activate the Bluetooth feature**

1.From application list, tap **Settings** → **Connected devices** → **Pair new device**.

2.To stop the recording, tap .

3.To listen to a voice recording that you just recorded, tap .

Calculator

With this feature, you can use the device as a calculator. The calculator provides the basic arithmetic functions. Tap the virtual numeric and calculation keys to perform a calculation.

Connectivity

USB Connection

You can connect your device to a PC and use it as a removable disk, which allows you access the file directory.

1.If you want to transfer files from or to device, insert a memory card into the device.

2.Tap the numeric pad to set alarm time, and then select **AM or PM**, when you are finished, tap **OK**.

◆ **Record a video**

1.Tap the **option button** at the upper right and click to Delete this alarm.

2.Tap the **option button** at the upper right to change to video mode.

Entertainment

Camera

With the Camera feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

2.Tap to start recording. The length of the video recording is restricted by the available space on your storage.

3.Tap <img alt="Stop icon

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement

SAR tests are conducted using standard operating positions according standards with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value.

This model product has been tested and meets the RF exposure guidelines with the test distance 0mm for head and 5mm for body worn. The highest SAR_{1g} value is 0.612 W/Kg for head and 0.647 W/Kg for body worn. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with RF exposure requirements, and should be avoided