


MiniRobot

ROBOTIC VACUUM CLEANER

X5

USER MANUAL

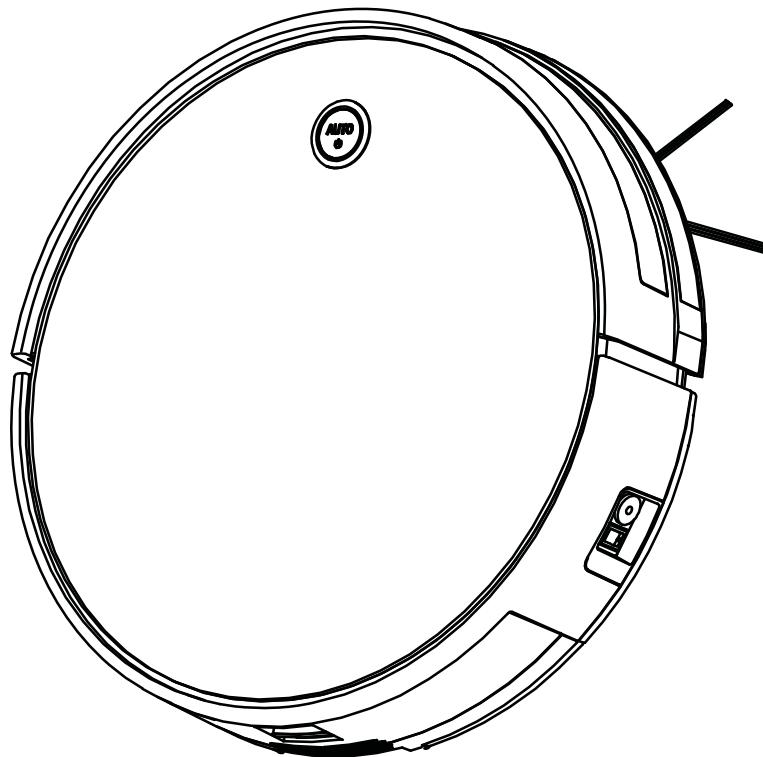

Thanks for purchasing our robot vacuum cleaner.

Please keep this user manual in your sight, read it thoroughly and carefully before using the device.

TABLE OF CONTENTS

1. Safety Instructions.....	1
2. Getting to Know Your Robot Cleaner.....	3
2.1 Main Body.....	3
2.2 Product Components.....	4
2.3 Charging Dock.....	5
2.4 Remote Control.....	6
3. Product Operation.....	6
3.1 Cleaning/Standby/Sleeping.....	6
3.2 Scheduling.....	7
3.3 Cleaning Modes.....	7
3.4 Battery Charging.....	8
3.5 Exchanging dustbin and water tank (Apply to Specific Models)	10
3.6 Remote Control Use.....	10
4. Production Maintenance.....	11
4.1 Cleaning Side Brushes, Main Brushes, and Cloth.....	11
4.2 Cleaning Dust Box and Filter.....	12
4.3 Cleaning Sensors and Charging Poles.....	13
5. Troubleshooting.....	14
5.1 Error Codes and Solutions.....	14
6. Parameters.....	15

1. Safety Instructions

1. Before use, clear the object on the floor (remove all the fragile objects and cords, clothing, papers, loose cables, as well as make sure to lift curtains and drapes off the floor to avoid any possible accidents.) Make sure the carpet corner edges are down-warp, hanging tablecloth or curtain should not touch the ground.
2. When your Mamibot robot is to be used by a child, the child must be of 8 years old and above. For persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, proper supervision or instruction should be given concerning use of the appliance in a safe way to help them understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.
3. If there are steps in the working area of the robot, the enclosed Virtual Wall can be applied to the top stair. The minimum distance to the edge of the step should be approximately 6in (15cm) on hardwood or thin carpet. On thick carpet the minimum distance to the edge of the step should be approximately 6in (15cm). This is an extra safety measure to prevent the robot from falling off an edge or stairs.
4. Only use recommended original spare parts.
5. This appliance should only be used for domestic cleaning, as described in this user guide.
6. Use only the original charger supplied with the appliance. Check that your supply voltage is the same as that stated on the charger. Never charge the batteries in temperature above 40 degrees centigrade or below 0 degrees centigrade. Plug the charger delivered with this appliance into a suitable socket.
8. Make sure the dust box and filtering cloth are installed properly before use.
9. Don't spray with or pick up flammable liquids, cleaning fluids, aerosols or their vapours.
10. Use this product in temperature from 0°C to 40°C.
11. Don't put your hair, clothes, fingers or other part of body close to the main brush or side brushes.
12. Don't use this device in a baby room.
13. Don't use this product on ground of moisture or with ponding area.
14. Make sure this product is not used to vacuum cigarette ends, lighters, matches or any other flammables that may cause a fire.
15. Clean the dust bin and vacuuming port before use, clear out dust, hair or cotton fibre at the suction port frequently. Don't block the inlet of the dust box.
16. Do not over-bend or press the flexible cord with heavy or sharp objects. Don't let the robot walk over the cord or tangle the cord when it is cleaning. Keep the cord from heat sources.
17. Only authorized technicians can disassemble the product. Users are not allowed to disassemble or repair the product.
18. Don't use damaged charging dock.
19. Don't use damaged cord or adapter. Don't use the robot if it is broken. Search for after-sales services or repair to avoid being hurt.
20. Turn off the switch before you clean or maintain the device.
21. Do not place this product where it is easy to drop off (tables, chairs, etc).
22. Before charging, check the adapter and outlet whether these are properly connected.
23. Leaks from battery cells can occur under extreme usage or temperature conditions. If the liquid

1. Safety Instructions

gets on skin, wash quickly with water. If the liquid gets into eyes, flush them immediately with clean water for a minimum 10 minutes. See medical attention.


24. End of life battery removal. If the appliance is to be disposed, the batteries must firstly be removed. The appliance must be disconnected from the supply mains when removing the battery.
25. Turn off the power switch during product transportation or when you don't need to use this product for a long time.
26. It is normal for the charger to become warm to touch when charging.
27. Please strictly follow up instructions of this USER MANUAL when using the device. We take no responsibility to any loss or damages caused by improper use.

DO	DO NOT
CHARGING. Charge it when you aren't using it to ensure that every time you need it, the Mamibot PreVac650 will be ready to roll.	WATER, CHEMICALS, or OTHER MOLD PRODUCING FLUIDS. Do not clean wet messes with your robot. Do not bathe or otherwise submerge your robot in water. It also doesn't like harsh chemicals, or anything that can permanently stain it. It doesn't mind being cleaned and groomed with a damp cloth, however.
VIRTUAL WALL. The robot likes to clean everywhere it can reach. If you want to keep the robot from a certain area, just put out the boundary markers. The robot will clean up to the boundary markers but will not cross over them.	HANGING CABLES AND LOW TO THE GROUND TABLECLOTHS. To keep your robot and your home safe, make sure that your vacuum cannot get caught on hanging electric cords, tablecloths, or other cord-like items.
GROOMING. Because it's down in the dirt all day long, your robot can get a little grungy. After a while, give it a once over to ensure wheels and brushes are free of hair and debris and to keep it running smoothly.	COLD. Exposing your robot to freezing temperatures may cause permanent damage, and possibly hurt its feelings. OUTDOORS. Your robot is a domestic device and not intended for outdoor use. Keep it in the house where it will be happy.


2. Getting to Know your Robot Cleaner

2.1 Main Body

No.	Item
1	Bumper
2	Display Panel
3	Touch Buttons

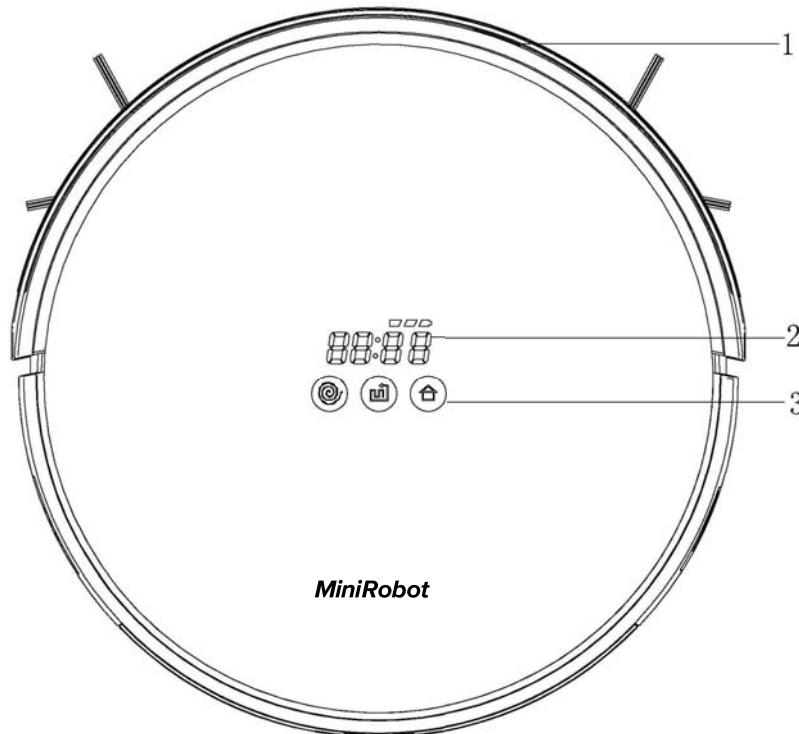

Display Panel

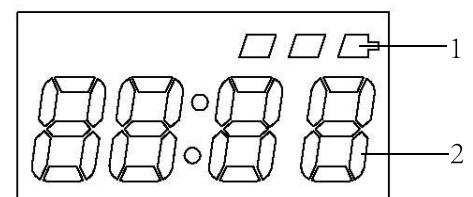


S.N.	Function
1	Battery Status/Charging Status
2	Indication of scheduling, timing, error codes, cleaning modes, etc.


Main body and accessories




Main Body

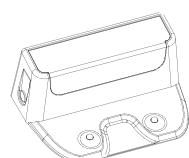


Dock Station

 


Adapter

 


Mop

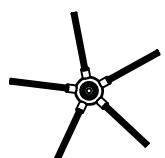

Side Brush

 

Remote Control

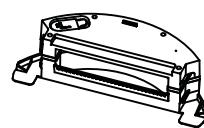

Water Tank
(Purchase additional)




Cleaning Brush



Manual


2. Getting to Know your Robot Cleaner

2.2 Product Components

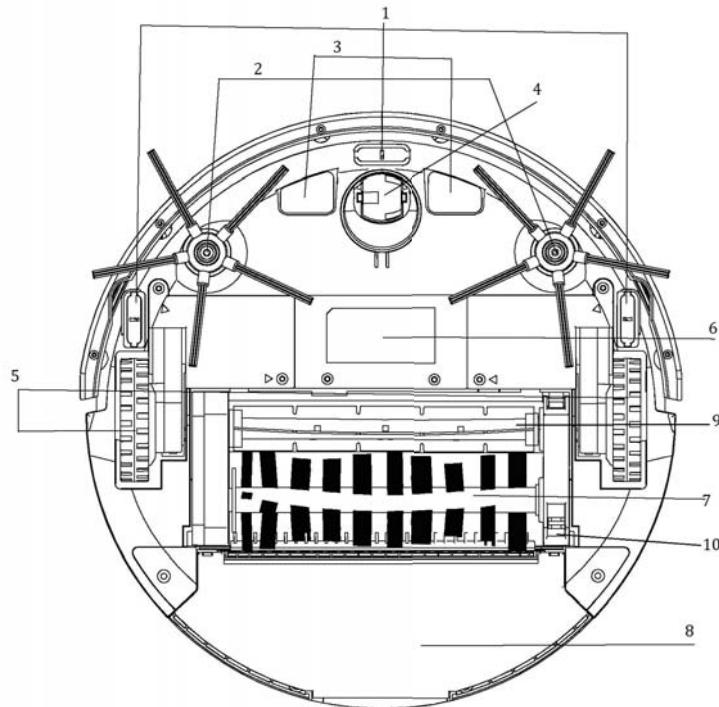


Bottom View

NO.	Description
1	Anti-falling Sensors
2	Side Brush
3	Charging Pole
4	Universal Wheel
5	Drive Wheel
6	Battery Box Cover
7	Fur Brush
8	Dust Bin/Water Tank
9	Roller Brush
10	Brush Guard Release

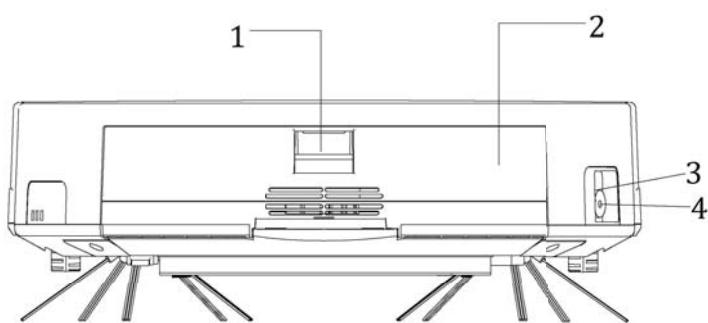

Back View


No.	Description	No.	Description
1	Dust Box/Water Tank Release Button	3	Switch On/Off
2	Dust Bin/Water Tank	4	Charging plug

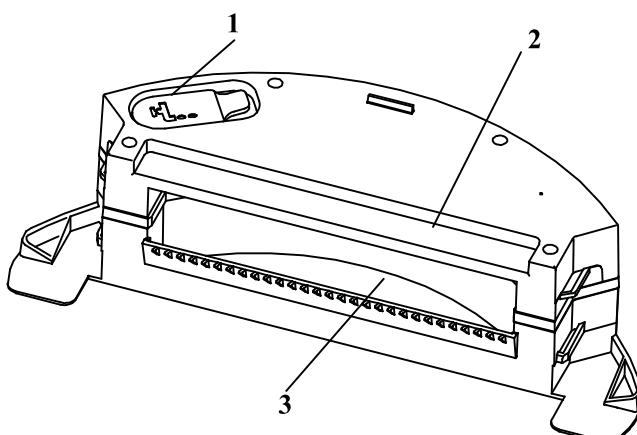

Water Tank (Purchase additional)


No.	Description
1	Water Filling Hole
2	Water Tank
3	Dust box Inlet

2. Getting to Know your Robot Cleaner

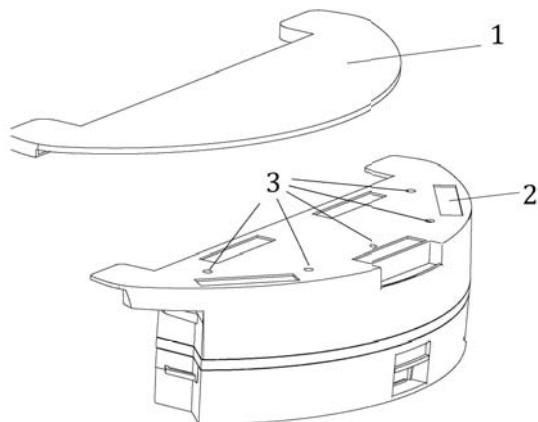

Bottom of Water Tank (Purchase additional)

No.	Description
1	Mopping Cloth
2	Velcro
3.	Water Leaking Hole

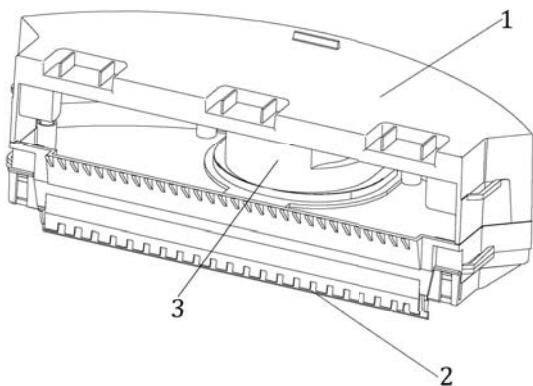

Dust Box without Water Tank

No	Description
1	Dust Box
2	Vacuuming inlet
3	Dust Vacuuming Motor

2.3 Charging dock

	Description
1	DC Charging Socket
2	Signal Receiving Window
3	Charging Poles

