
User Manual

43-Inch Battery Operated Retail Signage

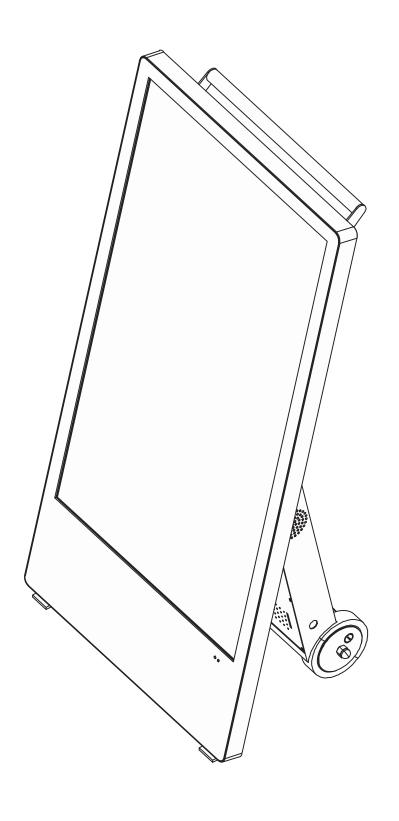

CONTENTS


1. Product Information	page
1.1 Product Feature	1
1.2 Product Composition	1
1.3 Product Technical Data	4
1.4 Safety Warnings and Precautions	6
2. Product Installation	
2.1 Terminology of the product	7
2.2 Set up the product and the way to access	7
2.3 Two ways to configure the device	9
2.4 Certain settings required before playback	11
3. Content Edit and Playback	
3.1 Cloud CDMS server platform	13
3.2 Content edit and produce program	13
3.3 Program upload and playback	13
4. Product Warranty and Maintenance	
4.1 Warranty Policy	14
4.2 Product Maintenance	14

1. Product Information

1.1 Product feature

43-Inch Battery Operated Retail Signage is a Floor Standing LCD charging station with elegant frame design, 32" high quality LCD screen, Signway control board and UL/CE power supply embedded inside, which is capable to have wireless, Ethernet, cloud platform and USB program edit, playback for advertising, education, commercial and every kind of communication use at everywhere in the place you want.

1.2 Product Composition

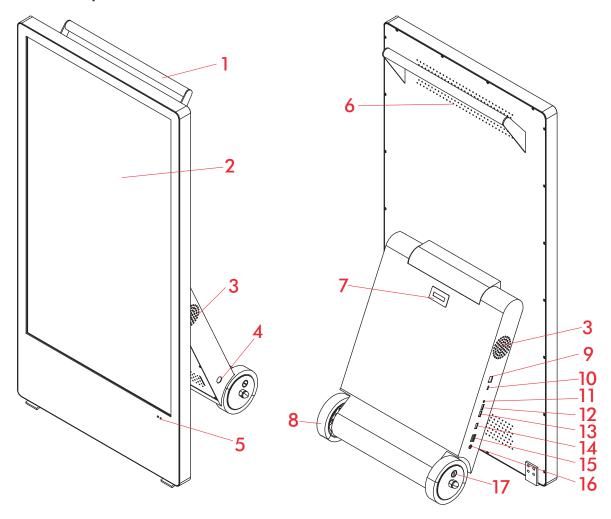


#	Description	
1	Handle	
2	LCD screen	
3	Speaker	
4	Key	
5	IR indicator	
6	Heat sink	

#	Description	
7	Battery indicator	
8	Wheels	
9	RJ45 port	
10	Type-C port	
11	Audio output port	
12	USB port 2.0	


#	Description	
13	USB port 2.0	
14	USB port 3.0	
15	On/off switch	
16	AC power socket	
17	Key	

How to open the product

- a. One person holds the handle with both hands to make the product stand upright on the ground. At the same time, the two wheels need to be locked so that it is not easy to slip.
- b. Another person please unlock the key in the position shown in the picture, and the rear bracket will open, then the product will stand upright.

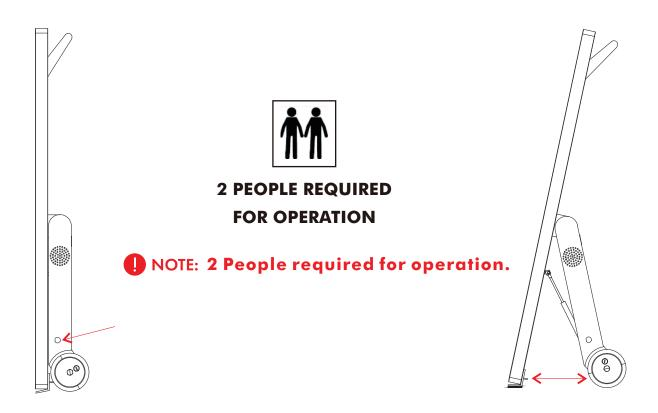

How to move the product

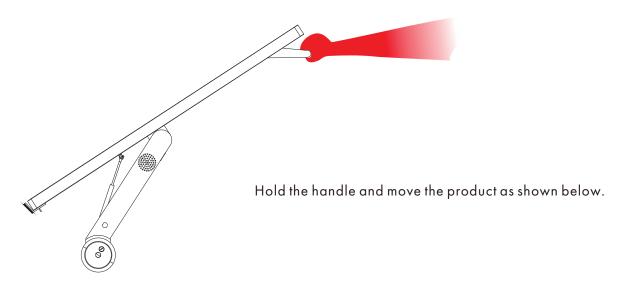

* Standard Accessories Quantity Table

Name	Quantity
Remote control	1
Key for wheels	4
Key for lock on the stand	2
User manual	1
AC Power cord	1
Charging adapter	1



Please be sure to charge with the 25.2V, 5A charger we provide!

1.3 Product Technical Data

	LCD Size	43"
	Light Source	Backlight (LED)
	Resolution	1920 x 1080 (pixels)
	Brightness	400 nits (Typ)
	Contrast	1200:1
DANIEL	Response	8ms
PANEL	Pixel Pitch	163.4x490.1 um
	Refresh Rate	50/60Hz
	Viewing Angle	89°/89°
	Color Saturation	72%
	Viewable Area	941x529mm
	Chromaticness	16.7M
POWER SUPPLY	Voltage	AC 100-240V
POWER SUPPLI	Power Consumption	About 64W
ENVIRONMENT	Operating Temperature	0 ~ 40°C
	Storage Temperature	-20~60°C
	Operating Humidity	10~80% RH Non-condensing
	Storage Humidity	0~90% RH Non-condensing
	Max. Operating time	18 hours per day
	Operating System	Android 11
	Processor	Rockchip RK3568, Quad-core CPU
	RAM	4 GB
	ROM	32 GB
	Decoding Resolution	1080P UHD compatible
	Touch Support	No
FUNCTIONS	Supported Video Files	AVI, MPEG4, WMV, MKV, FLV, MP4, MOV
	Supported Image Files	JPG, JPEG, BMP, PNG, GIF
	Supported Audio Files	MP3
	RTC (Real-time clock)	Yes
	Schedule Power On/Off	Yes
	System Update	USB Compatible
	App Installation	Support Download and Installation

	Ethernet (RJ45)	1
	HDMI IN	N/A
1/0	VGA	N/A
INTERFACES	Headset	N/A
	USB	2x USB 2.0, 1x USB 3.0
	Wi-Fi	1
	Audio	Left and right audio channel
	Net Weight	41.3 kgs
STRUCTURE	Gross Weight	51.8 kgs
	Unit Dimensions	597mm(W) x 1 1 90mm(H)
	Packing Dimension	1350X750X340mm
	Shell Material	Steel
	Shell Color	White
LANGUAGE	OSD	English

1.4 Safety Warnings and Precautions

Based on the product design and LCD property, the following security works must be complied with in the device handling and use.

- Avoid high temperature and high moisture circumstance use: operating temperature 0~50°C; operating humidity 10%~90%
- Suitable operating time: 20 hours a day or less
- Suitable voltage input: 100~240v, excess voltage will cause damage to the device
- Keep away from strong electromagnetic circumstance : strong electromagnetic wave will cause damage to the device
- Be used in ventilated circumstance : well- ventilated environment would be better for the device use
- Avoid excessive vibration, heavy drop and sever impact: any heavy vibration, drop and impact will cause damage to the device
- Do not replace or modify product parts by yourself: we will not be responsible for any product problems of the device caused by self-adjustment.
- This is a non-water-proof product, so please be sure to avoid water leaking into the product.
- To have regular cleaning work: regular cleaning work is good for the device operation

2.Product installation

2.1 Terminology of the product:

- The product: The whole product, including hardware and software of front-end display device and back-end content software platform.
- The device: front-end display device which drawing showed on the 1cover page page of this manual.
- GTV: the display software applied on the front-end device management. Please refer to "Signway DS Player Software_Android_Manual_V1.0_140609" PDF for the detail.
- CDMS: the content management software applied on the back-end content edit, program produce, program publish.. etc. management. Please refer to "Digital Signage CDMS Manual V4.6.20" PDF for the detail.
- Android: Android is an operating system based on a modified version of the Linux kernel and other open source software, designed primarily for digital devices. The product was developed based on Android system.

2.2 Set up the product and the way to access

- Open the device back bracket, place it on a flat floor, and connect AC power
- Turn on power switch, make sure LCD is on and IR indicator, blue light on the surface, is on as well.
- Make sure the mouse or the remote control works well
 (we recommend to use mouse which is a more efficient tool)
 - mouse: connect wire or wireless mouse by using USB port on the back of the device

remote control

Illustration	Button	Function
	O	power switch
	SETUP	Call out OSD setup function (active at GTV home page home page only)
		Function Key, active in GTV home page and Android home page only, act as moving key
	F1 F2 F3 F4	sequentially press F1-F2-F3-F4 to exit GTV and enter Android home page
ROWER SOURCE MENU SETUP		return
F1 F2 F3 F4	 	play and pause
		stop playback. press this button, the GTV home page will be presented right after
	4	up/down/left/right
		mute/volume up/volume down
	1 2 _{ABC} 3 _{DEF} 4 _{GHI} 5 _{JKL} 6 _{MNO} 7 _{PQRS} 8 _{TUV} 9 _{WXYZ}	Number input keys
	HDMI	For extension out only, not available for content upland
	MENU Q INFO DISP VGA Ypbpr AV	No function

2.3 Two ways to configure the device


2.3.1 Through GTV Home page (also called OSD menu)

When the device being turned on, the system will enter into GTV home page at once and playback mode being active automatically, then if there is program ready for playback, either source from ROM or USB storage, the program will playback immediately. But if there is no program ready, GTV home page shown as below will stand still for further action.



GTV home page

At this moment, you can press setup button on remote control or click on the upper left corner of GTV home page and enter into system setting page as below, then you can go on for language, work mode, network, time...configuration.

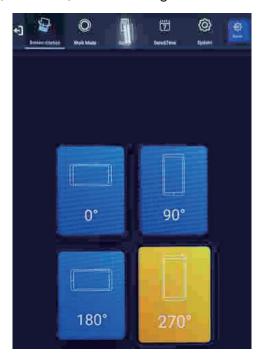

System setting page on GTV

2.3.2 Through Android home page:

When the device is playing, press to return to the GTV home page. In that moment, press [F1] [F3] [F4] sequentially to perform the action of exiting GTV and entering the Androd home page. Afterward, you can click on the page or click Android menu first and then click on the Android menu page to enter into Android setup page for device configuration. After configuration, click to come back GTV and have playback again.



Android home page



Android menu page



Android setup page

2.4 Certain settings required before playback

2.4.1 Language:



Language page

2.4.2 Work mode:

there are two major categories of work mode: network and stand-alone

- Network: It means to upload programs to the device by the network, which is divided into wired(LAN), wireless(wifi) and 3G according to the upload path used.
- Stand alone: It means to upload programs to device by USB manually. You should click Work Mode and select "Single" and you have to activate USB on System Setting page at the same time, then the device will recognized USB storage and upload the program inside when USB inserted into USB port.




Work mode page



System setting page-USB

2.4.3 Network setting:

When you select one of the network paths as your Work Mode, you must ensure that the network environment is properly set and available. If you have correct setting, you will see server address (web IP) showed on the page below.

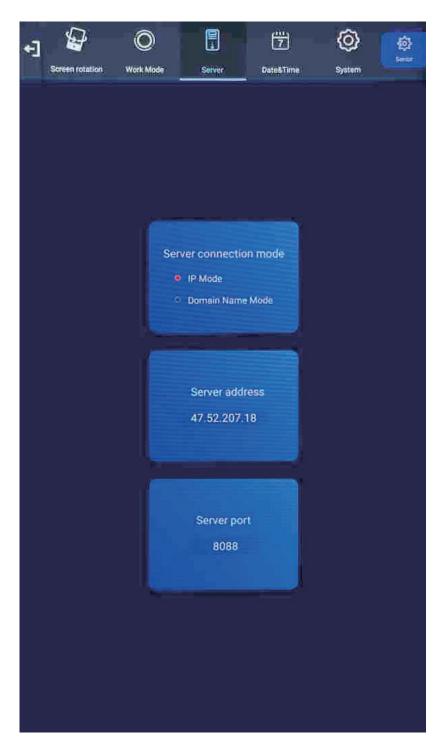


Network setting page

3. Content Edit and Playback

3.1 Cloud CDMS server platform

We have set up a cloud CDMS server platform on web to serve our customers. Please have you account and password and enter the website by using computer.

http://47.52.207.18:8088/cdmsA/index.jsp

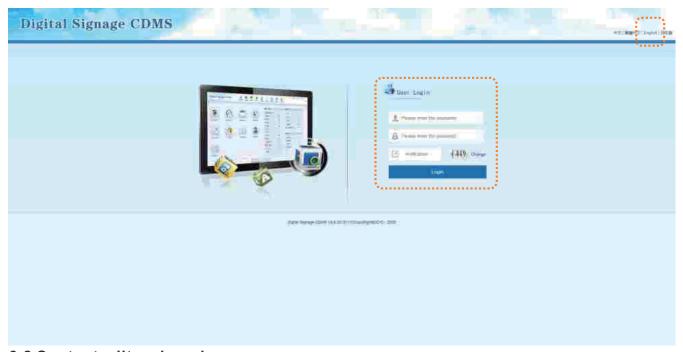

3.2 Content edit and produce program

After log-in the cloud CDMS platform, you can edit content, produce program, creat display plan and publish program to the devices on the platform. CDMS is a powerful platform for your displays, including images, text, video, audio or a complex, please refer to "Digital Signage CDMS_Manual_V4.6.20" PDF for the detail of operation.

3.3 Content upload and playback

As mentioned on 2.4.2 Work mode, there is two ways of uploading programs to the devices,

- Newwork : Be sure your device network is fully configured and functioned well, then you can publish programs to the devices easily.
- USB: In stand-alone (single) scenario, you need to configure to activate USB first, as shown in >>"System Setting page-USB" on 2.4.2, down load programs from CDMS platform to your USB storage and insert the USB into USB port of the device, then the device will recongize the USB, upload program and playback atuomatically.

4. Product Warranty and Maintenance

4.1 Warranty Policy

- The product provides one-year warranty starting from the ex-work delivery date under the premise of normal and reasonable use of the product.
- Any unauthorized replacement of parts and components and wiring changes are deemed to be a violation of normal and reasonable use, and we will not perform the warranty responsibility

4.2 Product Maintenance

- Regular cleaning on the product including dedusting of the surface and frame is required
- Follow through the use precautions mentioned on "1.4 Safety Warnings and Precautions" above is the most basic maintenance work.
- In case of a failure, please Inform the manufacturer and have maintenance operations by qualified person under the manufacturer's guidance.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed a nd operated with minimum 20cm distance between the radiator and your body: Use only the supplie d antenna.