


6.4 Setup Photographs:



9 kHz-30 MHz, antenna unfolded [X Axis]

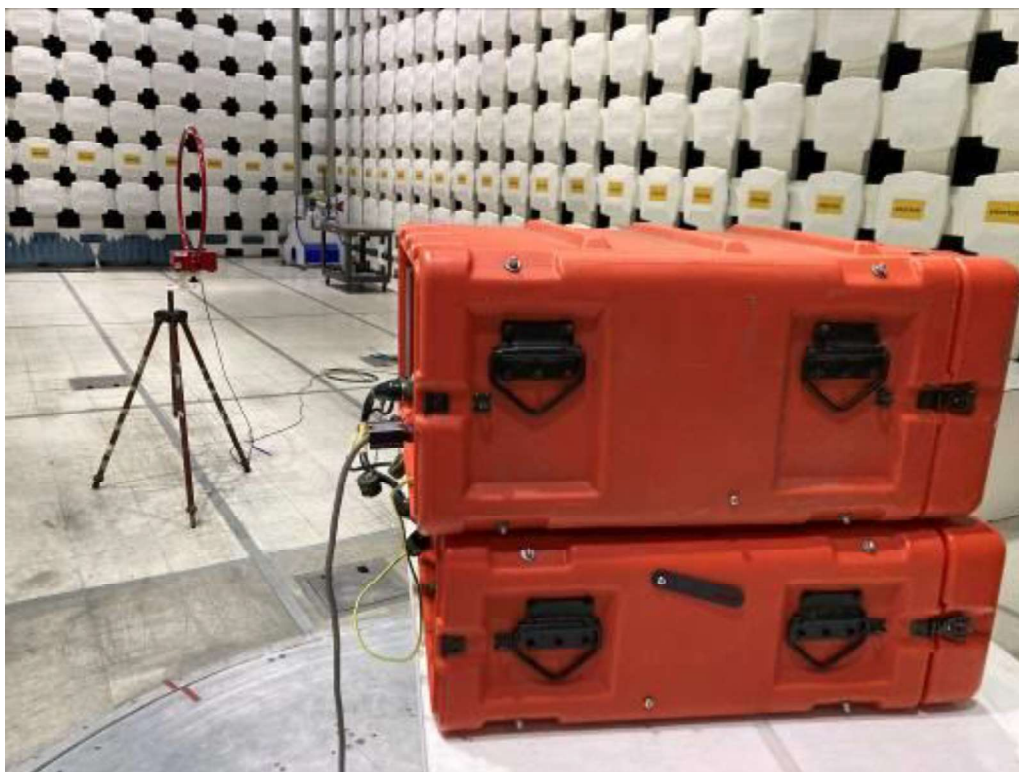

9 kHz-30 MHz, antenna unfolded [Y Axis]




9kHz-30 MHz, antenna unfolded [Z Axis]

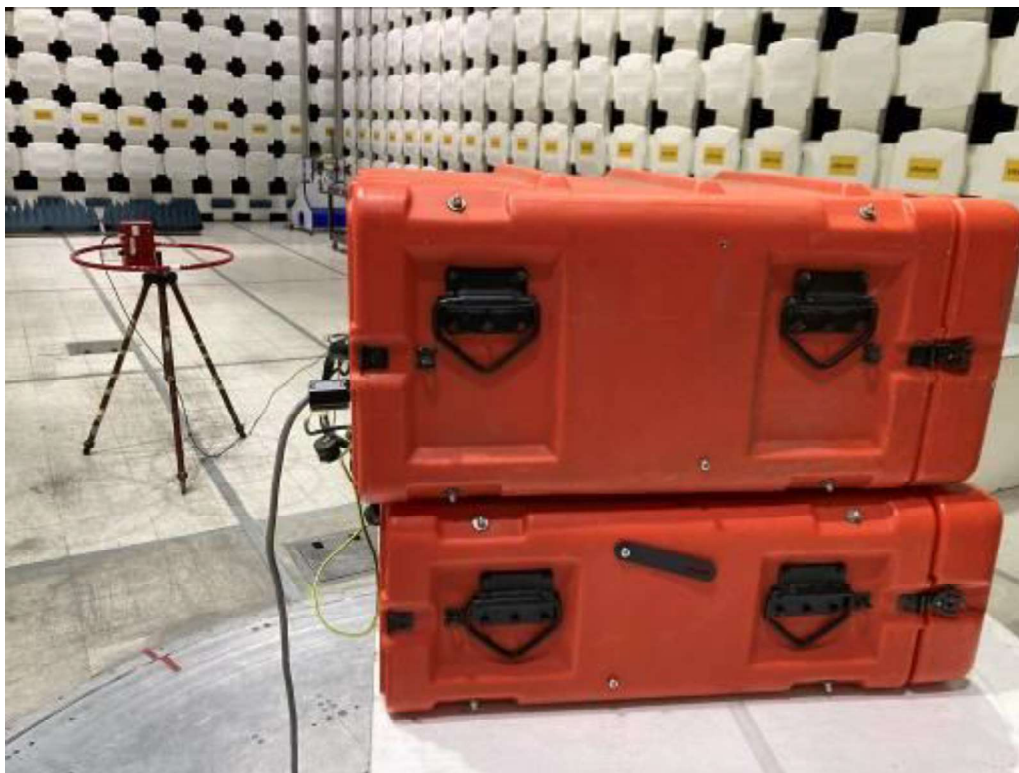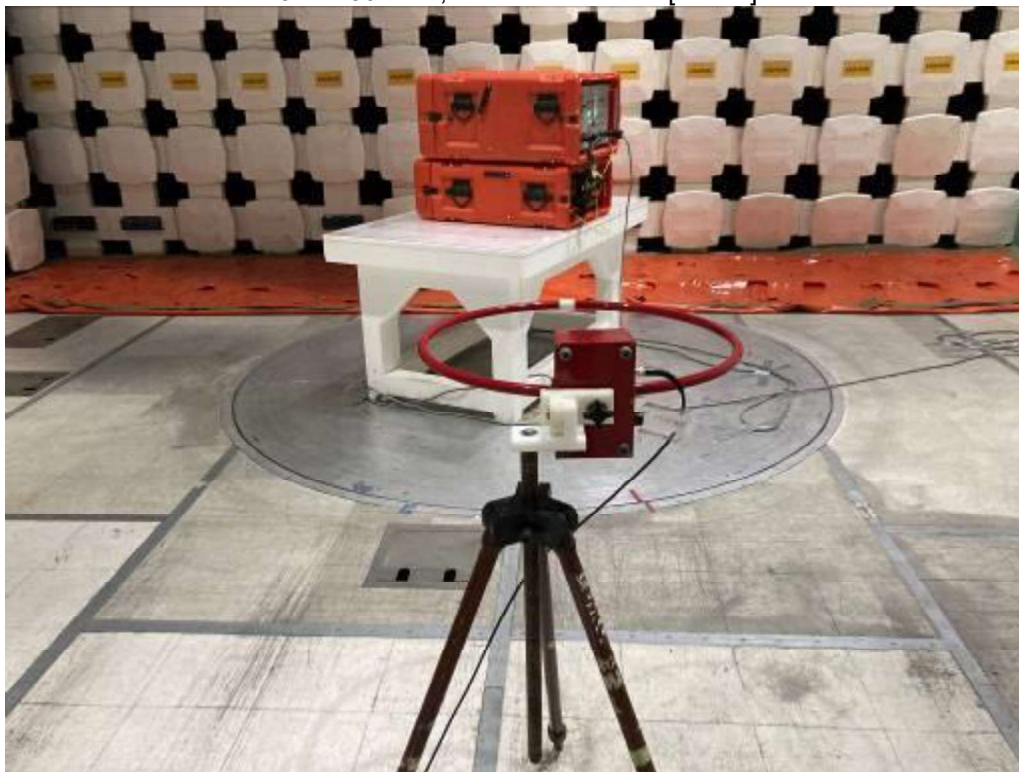


9 kHz-30 MHz, antenna folded [X Axis]





9 kHz-30 MHz, antenna folded [Y Axis]

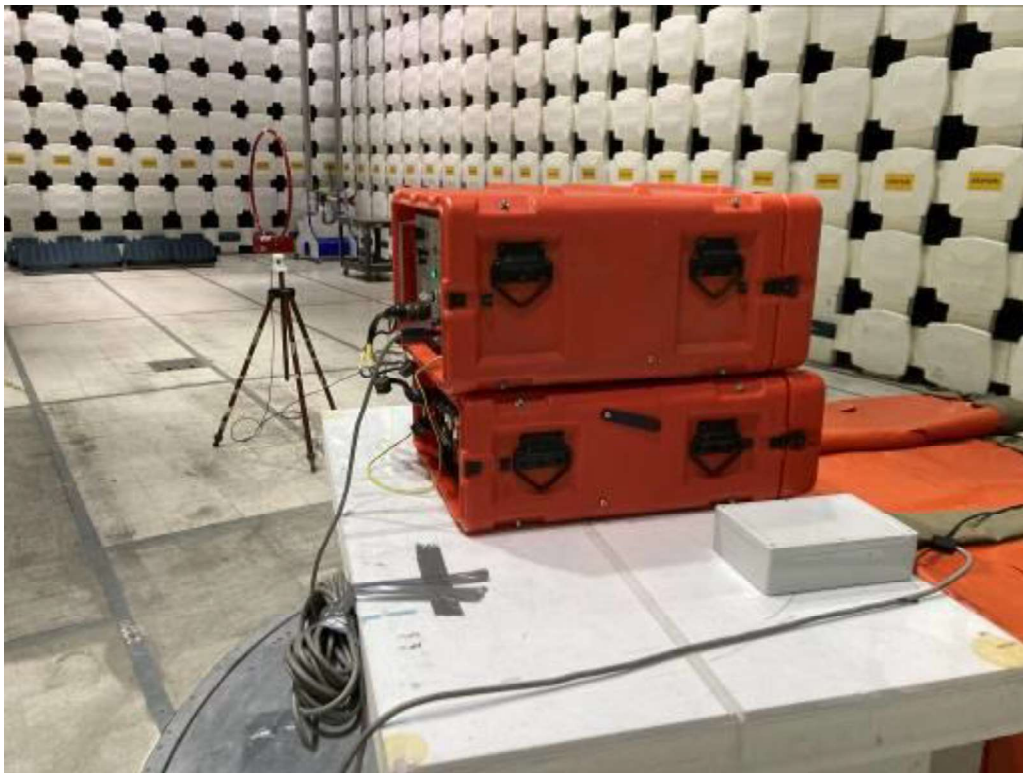

9 kHz-30 MHz, antenna folded [Z Axis]

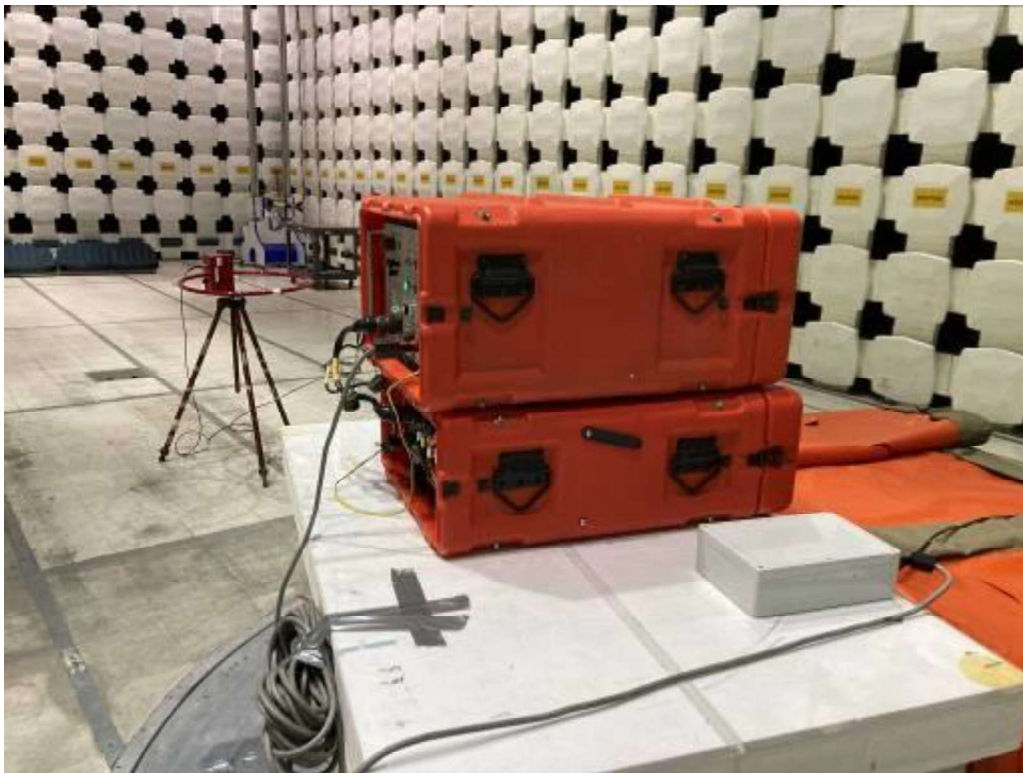

30-1000 MHz, antenna folded

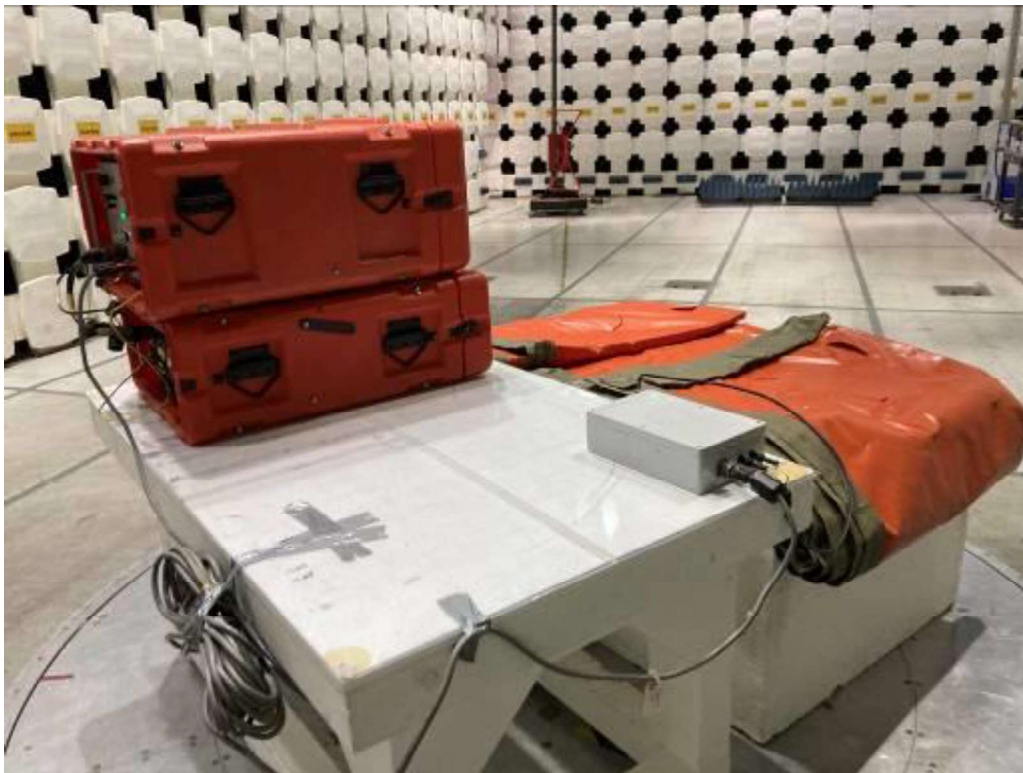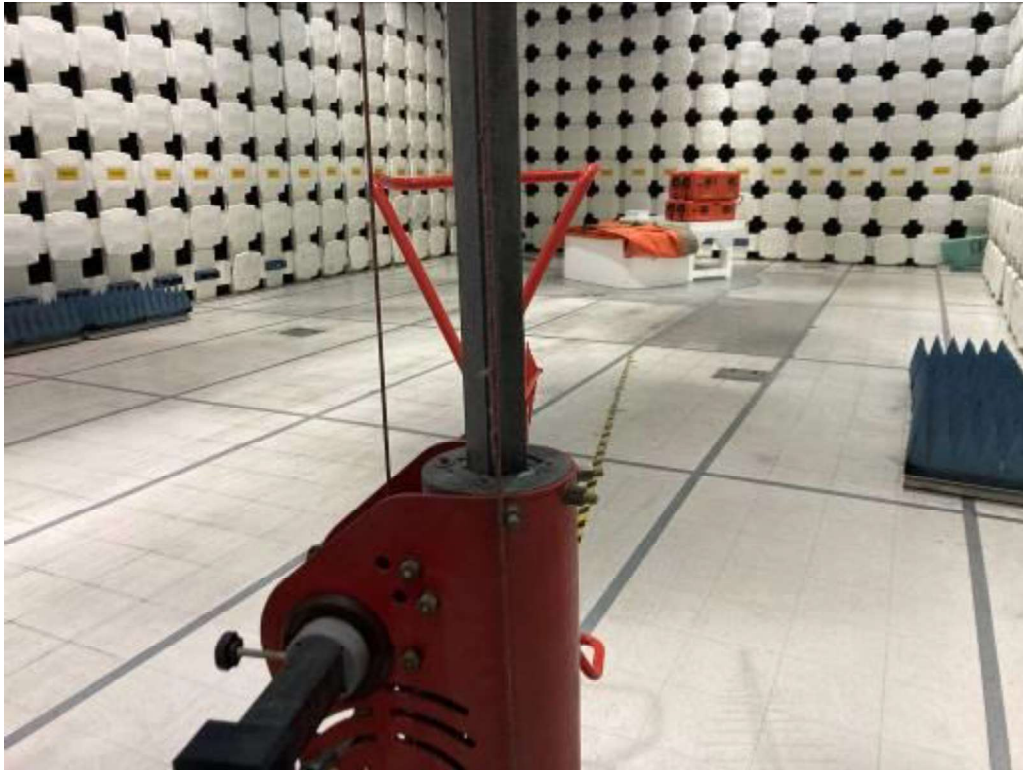

30-1000 MHz, antenna unfolded

