
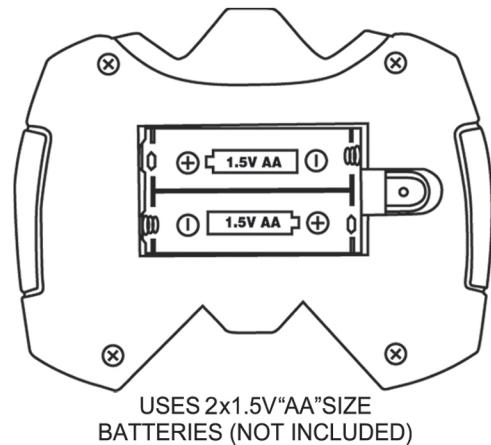


# Instruction manual

## 1. Product Features

Forward,backward,left turn,turn right,Automatic presentation

## 2. Battery Note:

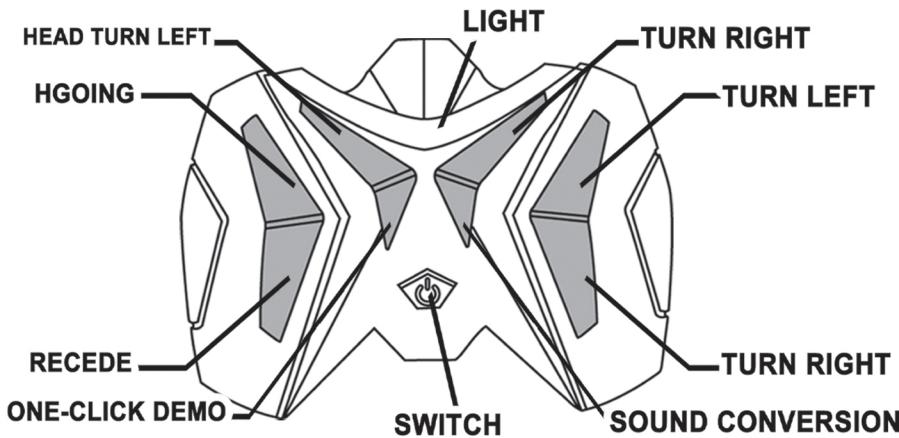

1. The body uses 1X400MV rechargeable battery (including electricity), and the remote control uses 2X1.5V "AA" battery (cannot be charged, no battery included).
2. Remove the rechargeable battery from the toy before charging.
3. the body rechargeable battery must be charged under the supervision of adults
4. Do not mix different types of batteries or old and new batteries.
5. Only use batteries of the same or equivalent type as recommended.
6. The battery should be inserted with the correct polarity.
7. Remove the exhausted battery from the toy



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are advised to try to correct the interference by one or more of the following measures:

- Readjust or place the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.