



Bluetooth Stereo Speaker
BV-B003
USER GUIDE



PLEASE READ OPERATING INSTRUCTIONS CAREFULLY
BEFORE USE AND KEEP FOR FUTURE REFERENCE.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED SERVICE PERSONNEL.


WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

ACCESSORIES INCLUDED

1. User Guide
2. 3.5mm AUX Cable

PARTS / BUTTONS

MAIN UNIT

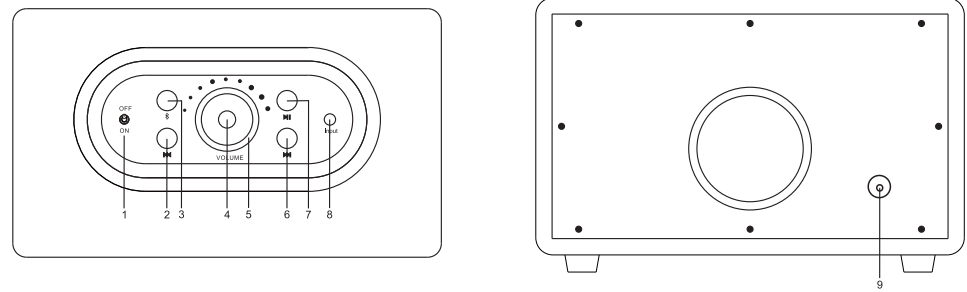

1	Power ON/OFF Switch	6	Next Track Button
2	Previous Track Button	7	Play / Pause Button
3	Bluetooth Pairing Button	8	Input
4	Volume Control Knob	9	DC-IN Power Port
5	LED Light Indicator		

USING YOUR APPLIANCE

USING AUX

- Put the ON/OFF switch to the ON position.
- Insert the supplied Aux cable into the Aux jack on the top of the speaker.
- Insert the other end of the cable into the line-out jack or headphone jack on your external audio device.
- Use the Volume control knob to adjust volume and other media controls on the control panel to control playback. Note: You can also control playback on your auxiliary device.

Note: If the line-out of your external device is connected, you only need to adjust system's volume control. If the headphone jack is connected, the volume may need to be adjusted on both the speaker and your external device to achieve the desired volume.

USING YOUR APPLIANCE

BEFORE FIRST USE

- Remove the product from the box.
- Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.
- Your appliance is now ready for normal use.

POWERING ON AND CHARGING THE BATTERY

Your Retro Speaker can be powered by a rechargeable battery.

- Insert one end of the USB Cable into the USB jack and plug the other into the USB jack of a computer or external USB power source.
- Flip the ON/OFF switch into the ON position to turn the speaker on.
- While charging, the LED Light on the Volume knob will illuminate red. Once the battery is fully charged the light will turn off. Note: It's recommended to fully charge the battery before first use. It should take 6 hours to charge the battery.
- When finished charging, unplug the USB Cable from the power jack and your computer.

Note: The speaker can still be used while charging the battery, but will take more time to fully charge.

USING THE CONTROLS

- ON/OFF – Turns the speaker on and off.
- Skip Backwards – Skip to previous track.
- Bluetooth – Pairs your speaker with your external device.
- Volume – Controls the volume level.
- LED Light – Indicates when the speaker is charging, ready for pairing via Bluetooth and when successfully paired with an external device.
- Skip Forward – Skip to the next track.
- Play/Pause – Plays or Pauses audio.
- AUX – Connects to an external device via an AUX cable.

USING BLUETOOTH

- Flip the ON/OFF switch to the ON position. The LED light on the Volume knob will flash blue.
- Turn on Bluetooth on in your external device and look for "Byron Statics".
- Select the speaker name and pair it with your device. If a password is required, press "0000".
- Once you're connected the LED light will stop flashing indicating your device has successfully paired.
- If pairing is unsuccessful, restart both devices and repeat the steps above.
- Use the media controls on the Control Panel to control playback.

TROUBLESHOOTING

Problem	Possible cause	Solution
The unit does not respond (no power)	The unit is disconnected from the AC outlet. The AC outlet has no power.	Connect to the AC outlet. Try the unit on another outlet.
No sound	Volume not adjusted. Wrong source selected. Device not turned ON. Volume set too low	Adjust the volume level. Select the correct source. Turn ON the device. Press the Volume + button to turn the sound level up.
Sound is distorted	Volume level is set too high	Decrease the volume.
Unit becomes warm after extended play at high volume.	This is normal.	Turn the unit off for some time or lower the volume.

Specifications

AMPLIFIER
Output power.....2W*2
Frequency response.....60 TO 20KHZ

SPEAKER SYSTEM
Impedance.....4 ohm
Input power.....Max. 5 W*2

GENERAL
Power requirements.....AC 100/240 V ~ 50/60 Hz
Power consumption.....5W
Li-ion.....3.7V/1200mAh
Dimensions (LxDxH)160 x 145 x 255mm

IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

SAFETY INFORMATION

Important safety instructions – read carefully before use.
It is important that this instruction manual should be retained with the Portable Record Player for future reference. These warnings have been provided in the interest of safety. You **MUST** read them carefully before installation or use.

WARNING

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- Do not immerse cords or any part of the appliance in water or any other liquid.
- Do not leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- Do not use this product for anything other than its intended use.
- This appliance is for household use only.
- Do not carry the appliance by the USB Cable.
- Do not use the appliance outdoors.

IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- Do not block any ventilation openings & install in accordance with the manufacturer's instructions.
- Do not install near any strong magnets or heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- Unplug the appliance from the USB Cable during lightning storms or when it has been unused for long periods of time.
- If the appliance is not going to be used for a period of time please ensure that it is fully disconnected from its power source.
- If the appliance is brought directly from a cold place to a warm one, moisture may condense inside the appliance which will cause malfunction. Should this occur, leave the appliance off for a few hours until the moisture evaporates.
- Do not place anything heavy on to the appliance.
- Never attempt to disassemble the appliance. There probably would be a risk of electric shock and/or harm by exposure.
- CAUTION! To reduce the risk of electric shock, DO NOT cover the back of the speaker. There are NO user-serviceable parts inside. Refer all servicing to the manufacturer or qualified service personnel.
- WARNING! DO NOT expose the appliance to rain or moisture to reduce the risk of electric shock or fire.
- WARNING! DO NOT immerse the product in water or any other liquid.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team.

DISPOSAL

DISPOSAL INSTRUCTIONS FOR AKAI ITEMS IN ACCORDANCE WITH THE WEEE DIRECTIVE: APPLIANCES BEARING THE SYMBOL SHOWN MAY NOT BE DISPOSED OF IN DOMESTIC RUBBISH.

YOU ARE REQUIRED TO DISPOSE OF THE OLD ELECTRICAL AND ELECTRONIC APPLIANCES LIKE THIS SEPARATELY. PLEASE VISIT :
WWW.RECYCLE-MORE.CO.UK OR WWW.RECYCLENOW.CO.UK

FOR ACCESS TO INFORMATION ABOUT THE RECYCLING OF ITEMS. THE WEEE DIRECTIVE, INTRODUCED IN AUGUST 2006 STATES THAT ALL ELECTRICAL

ITEMS MUST BE RECYCLED RATHER THAN TAKEN TO LANDFILL.

PLEASE ARRANGE TO TAKE THIS APPLIANCE TO YOUR LOCAL REFUSE CENTRE.



CAUTION

Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

尺寸：148*210MM

材质：80G书纸单黑印刷