



USER MANUAL



FOR MORE INFORMATION

Visit us online at usatoyz.com for product information, replacement parts and contact info.

BOX CONTENTS



SKID KID DRIFT KART



CONTROLLER



600mAh 7.2V BATTERY



USB CHARGER



SCREWDRIVER

CONTROL OVERVIEW



1. Unscrew battery cover.


2. Place batteries as pictured.

3. Screw battery cover back on.

BATTERY CHARGING

Follow the steps below to charge your battery (failure to follow instructions precisely may result in damage to your battery charger):

1. Connect the USB cable to the battery.
2. Choose one of the methods as pictured below to connect the USB plug, then connect the battery.

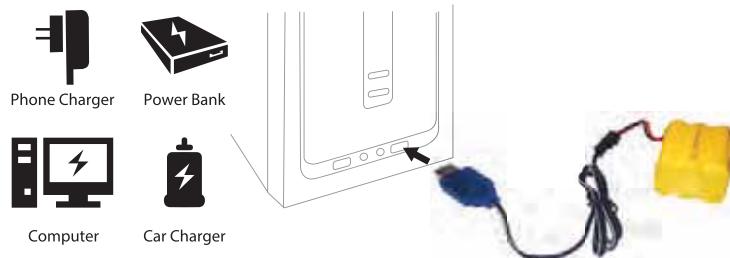

3. **Carefully connect the battery cable to the charger as shown below.**



NOTE

DO NOT plug the battery cable into the battery charger upside down. This will render the charger inoperable.

4. Hold the charging socket tab down to release the battery after charging.



BATTERY INSTALLATION

1. Unscrew the battery cover.




2. Remove battery cover.



3. Plug in battery. **Please note:** Battery should be installed as illustrated below.



4. Screw battery cover back on. Now the Drift Kart is ready to drive. Turn the On/Off switch on and get ready to drift!

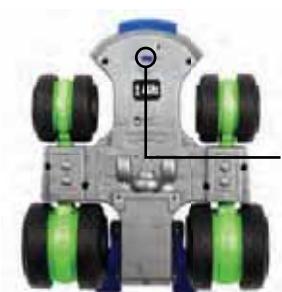

On/Off Switch

DRIFT MODE

DRIFT MODE



DRIVE MODE



Use the bumper buttons to activate Drift Mode and Drive Mode.

Use the joysticks to drive n' drift once Drift Mode is activated!



NOTE: Skid Kid drives on all kinds of floors (and is better suited for indoor use), but drifts best on hard, smooth surfaces like linoleum and hardwood.

WHEELIES



Drive Skid Kid backward, then push forward quickly on the joystick to pop a wheelie!

Once your Kart is on two wheels, keep driving forward to maintain the wheelie.

360° SPIN



Push the Left/Right joystick in either direction without moving forward or backward to spin in place!



USA Toyz

usatoyz.com

**Please include your order number
when you contact us at support@usatoyz.com
for fast, friendly service.**

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



WARNING

CHOKING HAZARD: Contains small parts.
Not for children under 3 years old.

Product Name: Skid Kid RC Drift Kart
Model No.: 0110218
Ages: 4+
Material: Plastic
Location: Bellevue, WA 98005

BATTERY PRECAUTIONS

- This RC toy uses a 7.2v USB rechargeable battery pack; the remote control uses 2 (standard or rechargeable) AA batteries
- Please follow instructions when removing or inserting batteries
- Always charge batteries under adult supervision
- Always remove batteries before charging
- Only use recommended batteries
- Remove and discard exhausted batteries in an approved manner
- Do not short circuit power terminals
- Never use a damaged RC toy or remote