


# playzoom™ WALKIE TALKIES

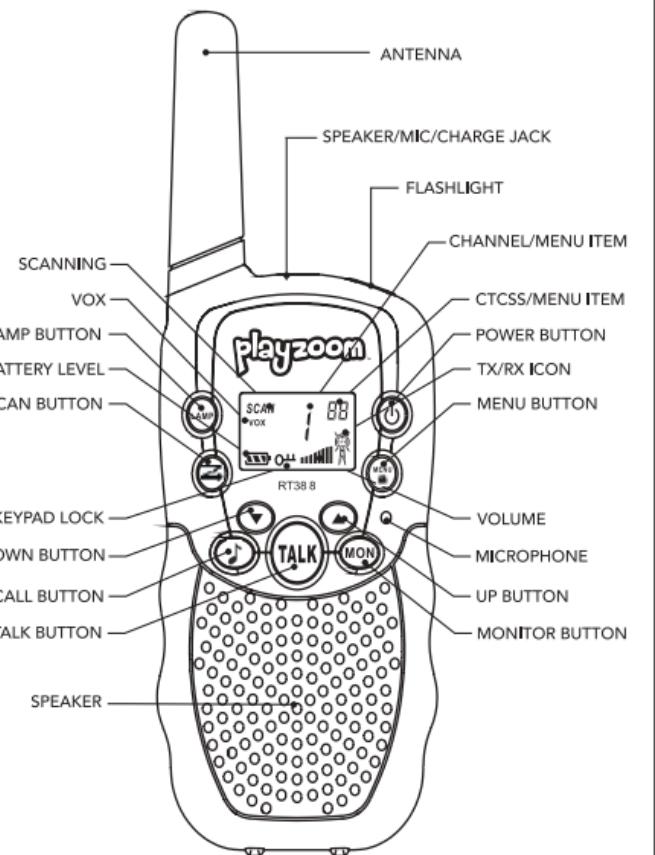


## Quick Start Guide



## BELT CLIP ATTACHMENT


1. To remove the belt clip, press the tab at the top of the clip and slide upward.

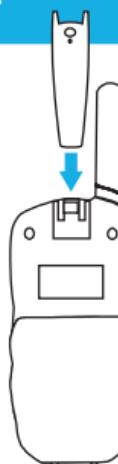

2. To reattach, slide clip piece down with the clip facing inward until you hear a click.

## BATTERY INSTALLATION

1. Press down on the back panel of the unit and slide the battery cover off (you may need to remove the belt clip for easier access).

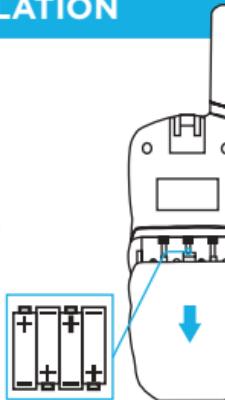

2. Insert 4AAA Batteries (not included).

3. Replace the cover.

## ON / OFF BUTTON

Press and hold down the power button (right of LCD screen) for 3 seconds to power the device on or off, a beep will indicate operation.

## RECEIVE / TRANSMIT

To transmit, press and hold the TALK button while talking into the device at a close range. Release the button to finish talking - when the button is released your walkie-talkie can receive transmissions.

**Note:** Walkie-talkies must be set to the same channel and CTCSS code.

Release the TALK button when you're finished talking to receive a response.

## HOW TO CHANGE CHANNELS

- Press the MENU button once; the current channel number will flash on the LCD screen.
- Press up & down buttons to change channel.
- Press the TALK button to confirm and return to Standby mode.

**Note:** If no button is pressed, the device will return to Standby Mode.

## CTCSS (Continuous Tone-Coded)

These devices have an "22" channel system, meaning you can always find a free channel if someone in your vicinity is using one and you don't want interference.

Your devices also have sub-channels called the CTCSS. Using this transmits one of 99 low-frequency tones (67-250 Hz) along with your voice signal.

**Note:** This feature does not impact operation or quality; to disable, select code "OF" in the menu; press the TALK button to confirm.

### Change the CTCSS Code

- Press the MENU button twice; the current CTCSS code will flash on the LCD screen.
- Press up & down buttons to change the code.
- Press the TALK button to confirm.

## VOX SELECTION

These devices are capable of voice-activated (VOX) control. This means the walkie-talkie will transmit any sound it picks up without pressing the TALK button. It is not recommended that VOX mode be used in a noisy or windy environment.

## VOX SELECTION

**Note:** Walkie-talkies must be set to the same channel and CTCSS code.

- VOX Mode is overridden when you press the TALK button.
- Press the Menu button 3 times and the current VOX setting will flash on the screen with an icon.
- Press the up button to set VOX intensity between 1 and 3, the higher the number, the more sensitive.
- Press the down button until you see "OF" to turn off VOX Mode.
- Press the TALK button to confirm.

*For customer service call **+1 (888) 200-6081** or email us at: [customerservice@playzoom.com](mailto:customerservice@playzoom.com)*

### Disclaimer and Limitation of Liability

Playzoom and its suppliers assume no responsibility for any damage or loss resulting from the use of this Quick Start Guide. Playzoom and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product. Playzoom and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction dead battery, or repairs.

Company: American Exchange Group

**Important Note:** It is important for you to know that we stand behind our products and encourage you to call our Customer Service Line at +1 (888) 200-6081 with any problems and/or suggestions that you might have. A service representative will be happy to help.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2ARUI-WT388US

**WARNING: All packaging materials such as tape, plastic sheets and tags are not part of this toy, and should be discarded for your child's safety.**



Need help? Visit us at  
[www.playzoom.com/help](http://www.playzoom.com/help)



For full user manuals and detailed features, please visit  
[www.playzoom.com/manuals](http://www.playzoom.com/manuals)

Connect with us!  
[@itouchwearables](https://www.instagram.com/itouchwearables) | [@itouchplayzoom](https://www.instagram.com/itouchplayzoom)



Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference,

and (2) this device must accept any interference

received, including interference that may cause

undesired operation.

#### Safety Information for Radios

Your wireless handheld portable transceiver contains a low power transmitter. When the talk button is pushed, it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless devices.

#### Important

FCC RF Exposure Requirements: For body-worn operation, this radio has been tested and meets the FCC RF exposure guidelines when used with accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. Use only the supplied antenna. Unauthorized antennas, modifications or attachments could damage the transmitter

and may violate FCC regulations.

#### Normal Position

Hold the transmitter approximately 25 mm from your face and speak in a normal voice, with the antenna pointed up and away.