


**STEP  
5**

Remove the three screws and remove the sensor holder cover. Disconnect the connector of the wiring of the module. After removing the two screws and the clamp that secures the wiring, remove the module and antenna. Replace them with new module and antenna, and reassemble them in the reverse order.

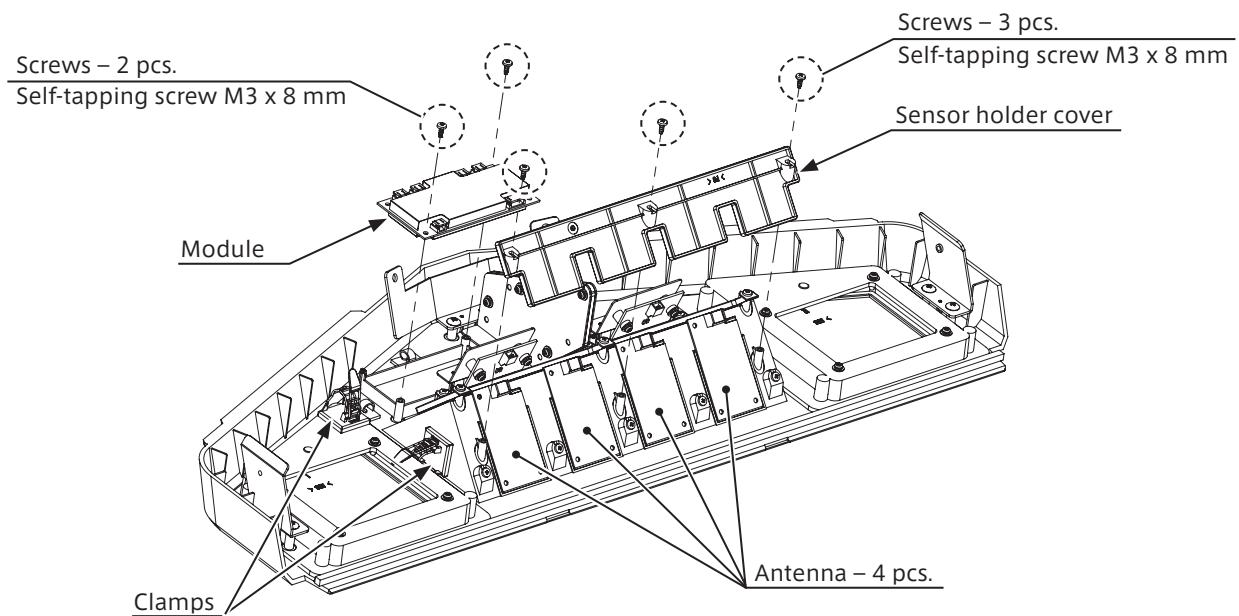

8 - 2 Fig. 04

1

2

3

4

5

6

7

8

9

10

11

12

13

## 8 - 3 Replacing Upper Monitor

1

### STEP 1

Turn "OFF" the power switch and disconnect the power cable and HDMI cable from the upper monitor.

2

3

4

5

6

7

8


9

10

11

12


13

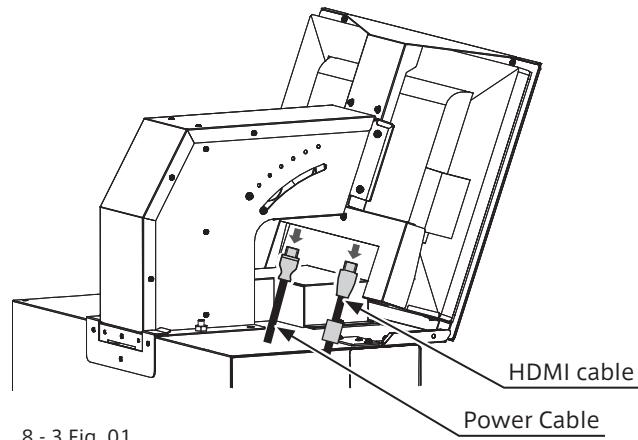

8 - 3 Fig. 01

### STEP 2


Remove the four screws securing the center part of the upper monitor and the stand. Remove the upper monitor upward.

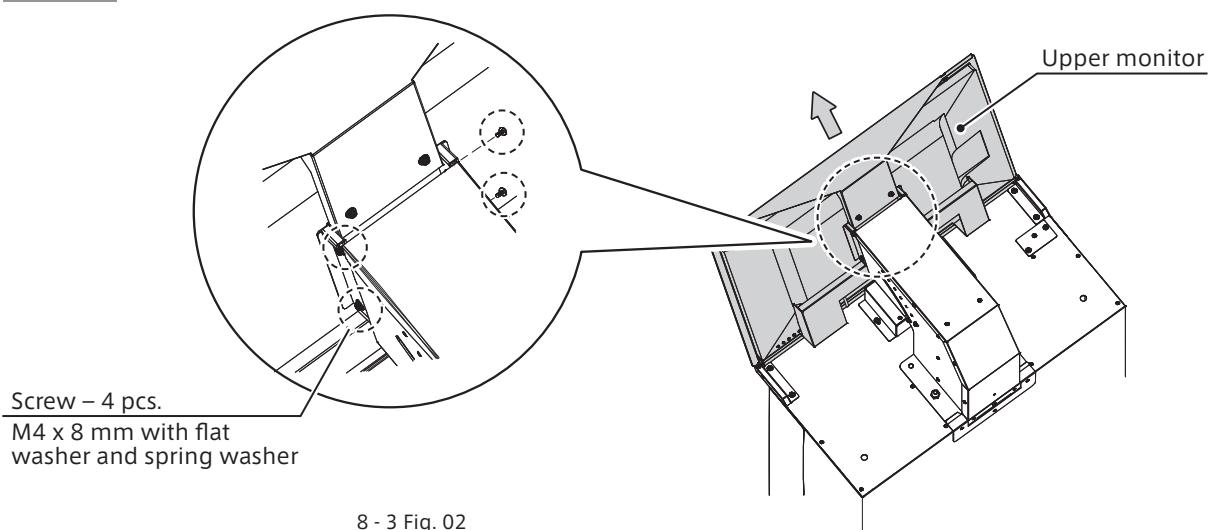

8 - 3 Fig. 02

### STEP 3


Remove the six screws and remove the monitor.

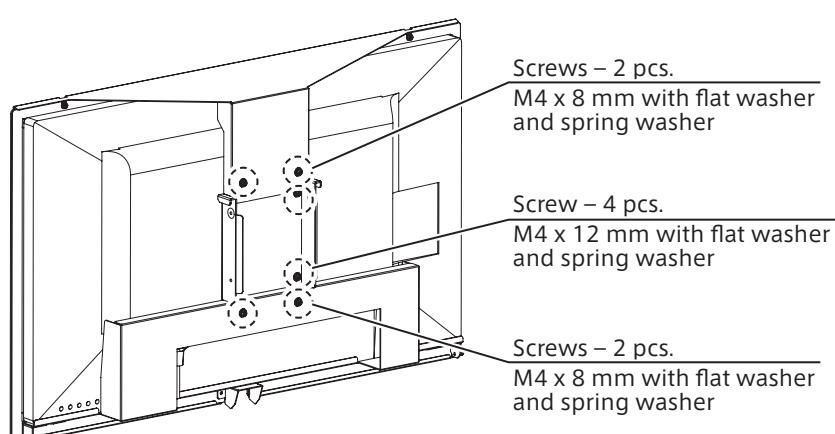

8 - 3 Fig. 03

**STEP****4**

Reassemble the upper monitor in reverse order. As soon as you turn "ON" the power switch on the main unit, press the power switch (the leftmost switch) on the monitor.

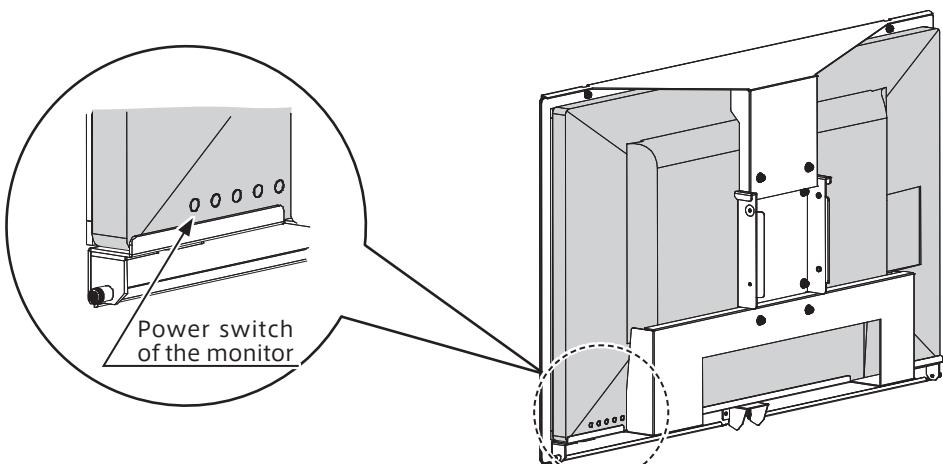

8 - 3 Fig. 04

**IMPORTANT**

- If you are using a different type of monitor than the one described above, please check the work procedure from the "Product Support Page" below.



<http://www.dartslive.jp/info/support/>

1

2

3

4

5

6

7

8

9

10

11

12


13

## 8 - 4 Replacing Lower Touch Screen Monitor

1

### STEP 1

Turn "OFF" the power switch. Unlock with the maintenance key and open the lower door (L). Then disconnect the USB cable (T.PANEL) connected to the PC unit and remove it from the clamp so that it can be lifted up to the upper cabinet.

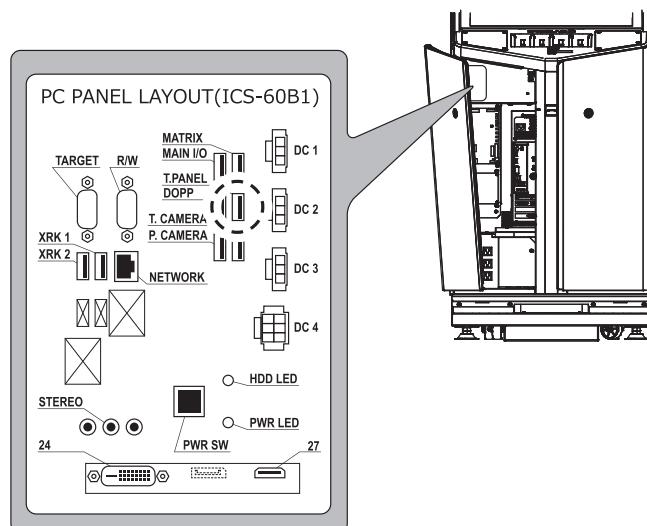

8 - 4 Fig. 01

2

3

4

5

6

7

8

9

10


11

12

13

### STEP 2

Remove the two screws and open the back door. Pull up from the lower cabinet the USB cable (T.PANEL) which you disconnected from the PC unit. Then, disconnect the power cable connected to the AC adapter and remove it from the clamp. Next, disconnect the DVI cable connected to the touch panel monitor.

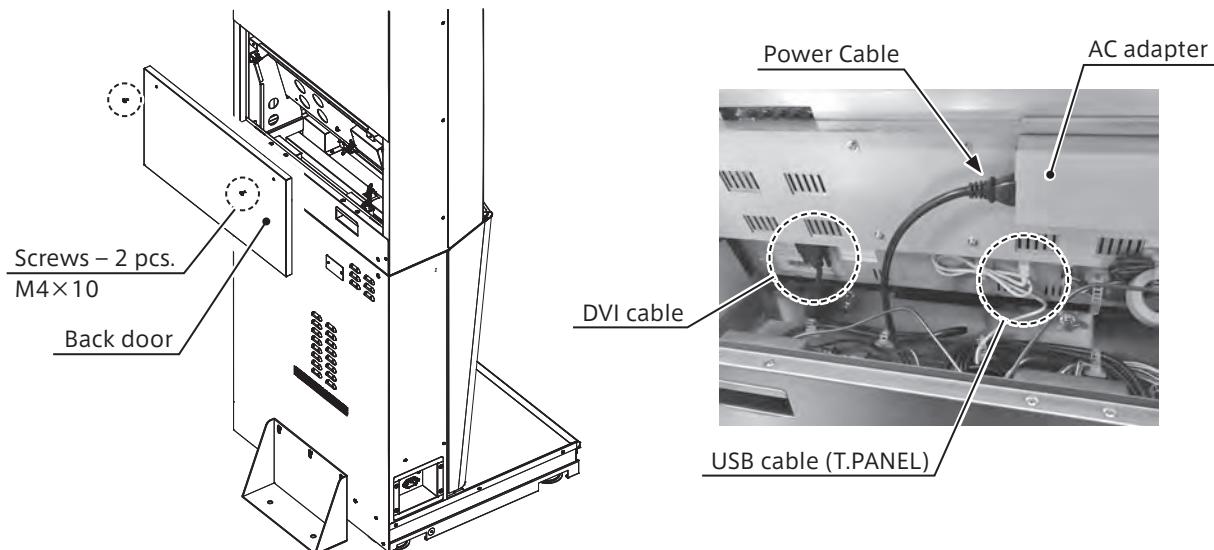


8 - 4 Fig. 02

### STEP 3

Refer to "8-2 Replacing Card Reader Sensor" and dismount the control panel.

**STEP****4**


Remove the two screws at the top of the escutcheon, and slowly lift the escutcheon diagonally upward. Disconnect the connector of the earth wire, and remove the escutcheon.

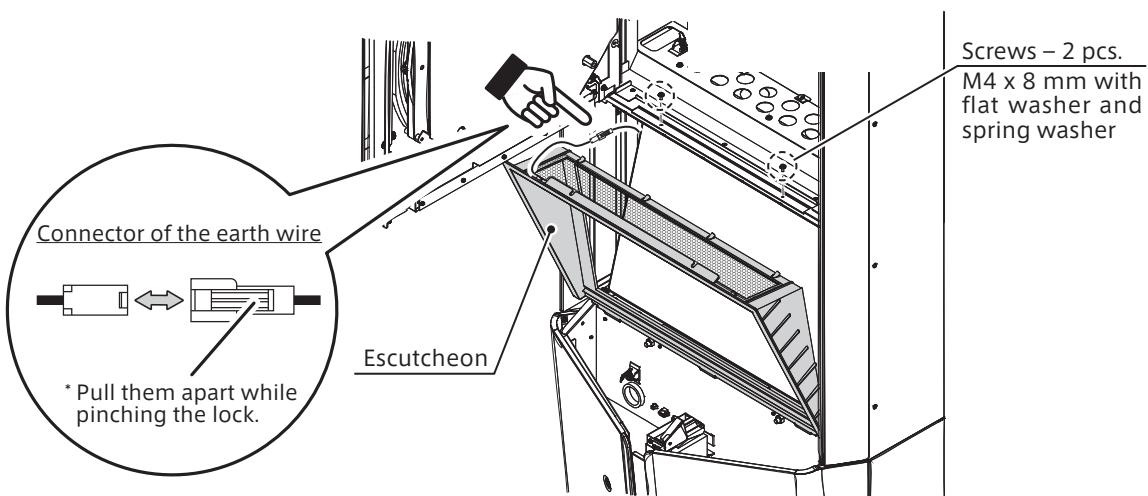

8 - 4 Fig. 03

**STEP****5**

Remove the two screws. Pull out the touch screen monitor, keeping it away from the sheet metal in front. If you have not been able to work from the back to perform STEP2, do that now. In that case, work with two or more persons.

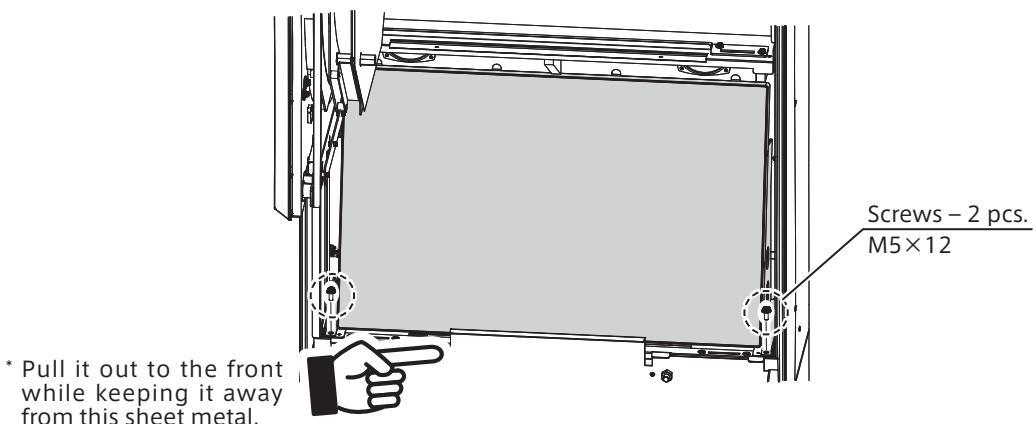

8 - 4 Fig. 04

1

2

3

4

5

6

7

8

9

10


11

12

13

**STEP  
6**

Remove the four screws and remove the touch screen monitor. After replacing it with a new touch panel monitor, reassemble them in the reverse order.

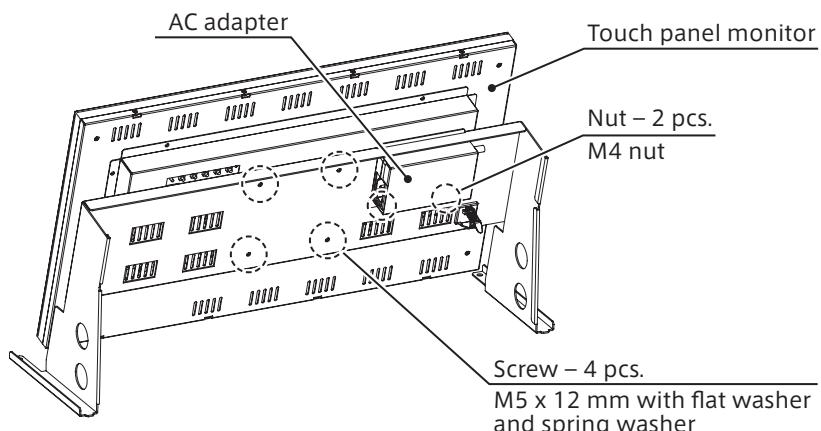

8 - 4 Fig. 05

**STOP** **IMPORTANT**

- If the screens on the upper and lower monitors have been switched after replacing the monitor, switch between the monitor and the operation monitor by referring to "5 Maintenance Menu" in OWNERS MANUAL.
- When replacing the AC adapter, use the ferrite core attached to the cable, replacing it onto the same position and in the same manner as it was.

## 8 - 5 Coin Selector

(There are some units such as those for China, which were manufactured on specification without coin selector.)

### Addressing coin jamming

If a coin did not return by pressing the return button, open the lower door (R) and dismount the coin selector. Remove the coin stuck in the gate. Insert a normal coin and check that the selector works correctly.

### Cleaning coin selector

Clean the coin selector every three months. Follow the procedure below for cleaning.


### STOP **IMPORTANT**

- Dip a soft cloth in water or neutral detergent, and squeeze it tight before the cleaning.
- Never use machine oil or the like on coin selector.
- After maintenance of the coin selector, insert normal coin under normal use condition to check that the selector works correctly.

#### ■ 8 - 5 - 1 Cleaning and replacing the coin selector


**STEP 1** Turn "OFF" the power switch. Unlock and open the lower door (R) with the coin chute key.

**STEP 2** Pull out the coin selector while raising the lever.

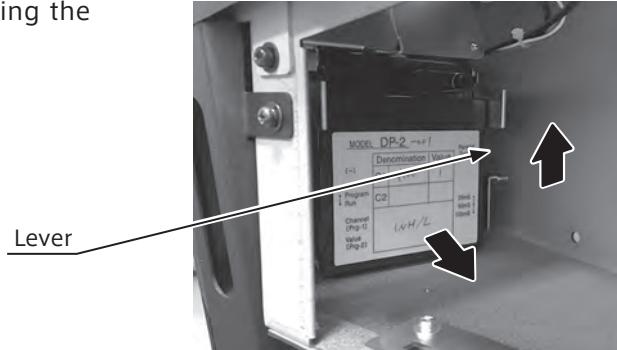

8 - 5 Fig. 01

**STEP 3** Disconnect the connector connected to the back and dismount the coin selector. Then, open the gate and perform cleaning. Replace it if it malfunctions.

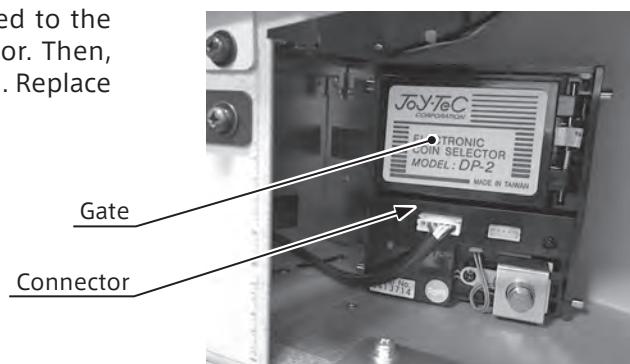

8 - 5 Fig. 02

### Coin insertion test

Once a month, test the coin switch and check the following at the same time.

- Does the coin meter count properly?
- Does the coin fall into the cash box properly?
- Does the coin inserted while pressing the return button return to the return slot?

1

2

3

4

5

6

7

8

9

10

11

12

13


43

## 8 - 6 Adjusting Target Camera

1

### STEP 1

Turn "OFF" the power switch. Refer to "8-3 Replacing Upper Monitor" and disconnect the power cable and HDMI cable from the upper monitor. Remove the two nuts and dismount the camera base cover.

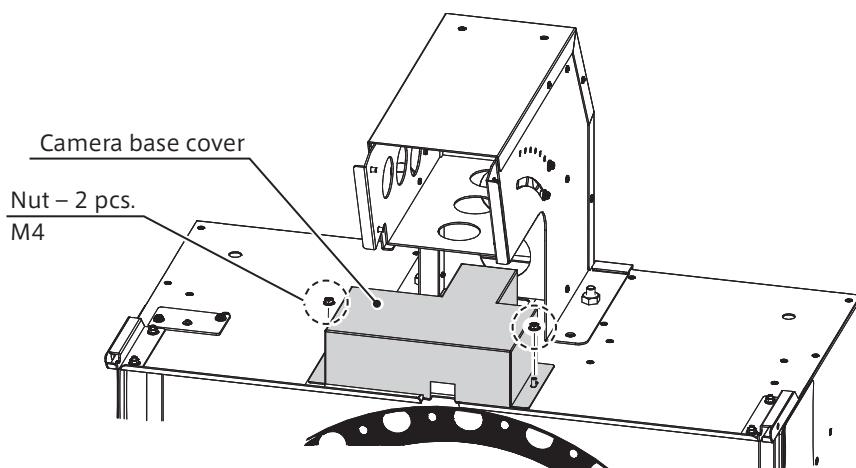

8 - 6 Fig. 01

2

3

4

5

6

7

8

9

10


11

12

13

### STEP 2

Loosen the two adjustment screws and make adjustment. Tighten the screws to fix it. After the adjustment, reassemble them in the reverse order.

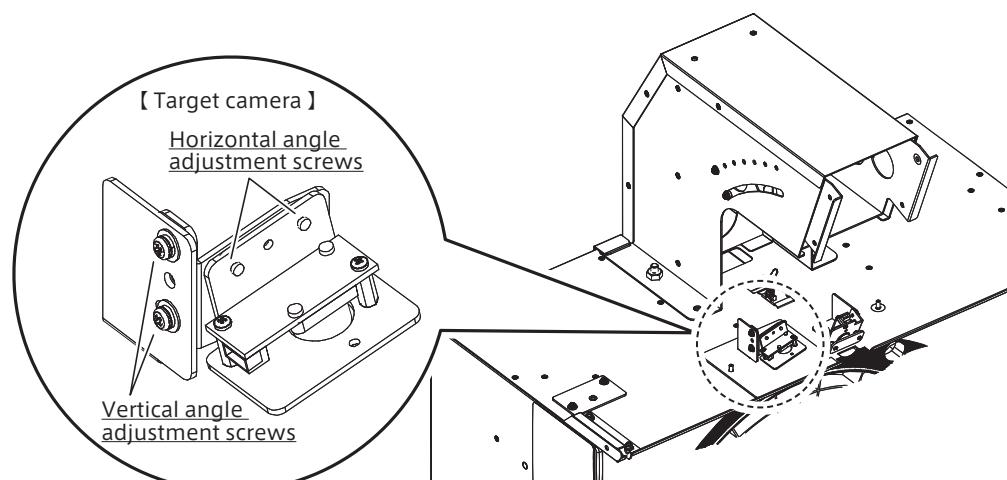

8 - 6 Fig. 02



### IMPORTANT

If the images from the player camera and the target camera have been switched after replacing the camera, refer to "5-1-2 Selecting Camera" in OWNERS MANUAL to switch between their displays.


## 8 - 7 Adjusting Player Camera

### STEP 1

Refer to "8-6 Adjusting Target Camera" and remove the camera base cover.

### STEP 2

Loosen the two adjustment screws and make adjustment. Tighten the screws to fix it. After the adjustment, reassemble them in the reverse order.

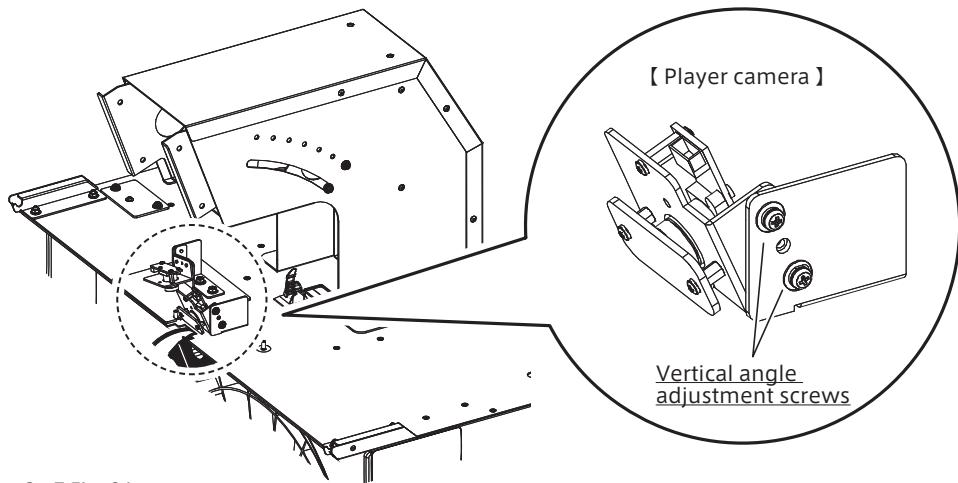

8 - 7 Fig. 01



### IMPORTANT

If the images from the player camera and the target camera have been switched after replacing the camera, refer to "5-1-2 Selecting Camera" in OWNERS MANUAL to switch between their displays.

1

2

3

4

5

6

7

8

9

10

11

12

13


## 8 - 8 Replacing Sensor Cover and Sensor Cover Cylinder

1

### STEP 1

Turn "OFF" the power switch. Open the target door with the maintenance key.

1

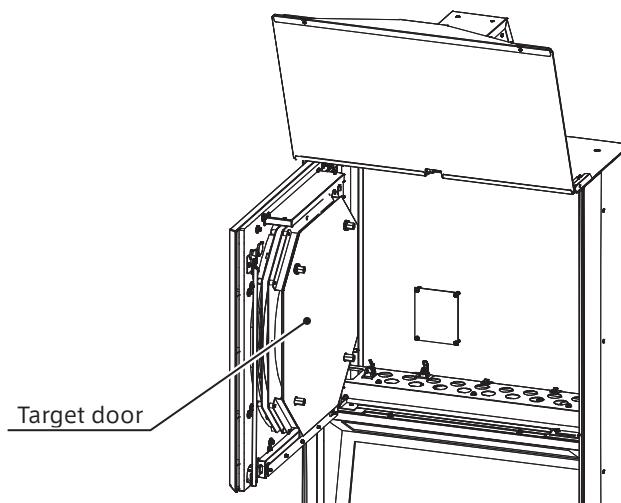

8 - 8 Fig. 01

2

3

4

5

6

7

8

9

10


11

12

13

### STEP 2


Remove the eight screws from the sensor cover from back of the target door. While doing this, hold the sensor cover firmly to avoid dropping it.

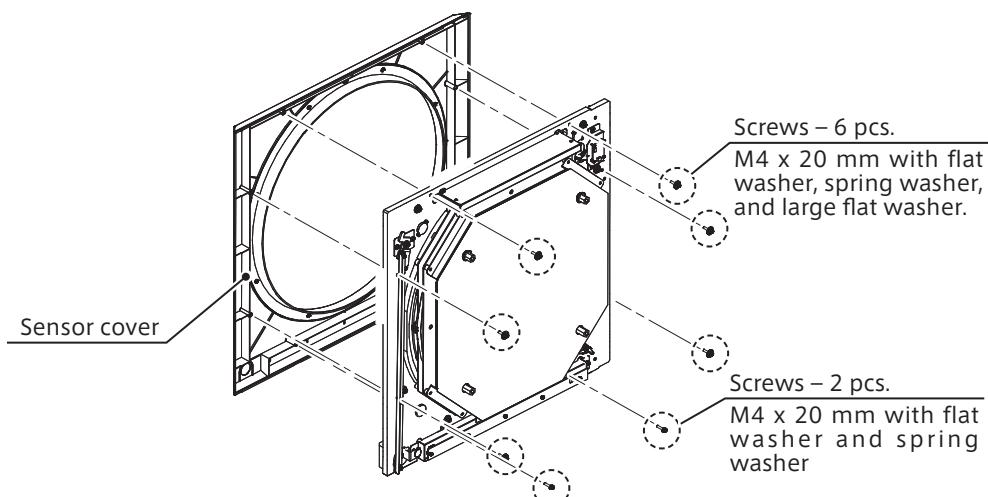

8 - 8 Fig. 02

### STEP 3


The sensor cover cylinder is fixed to the sensor cover with double-sided tape. Peel off and replace it. When replacing, mount the sensor cover cylinder so that the date mark is at the top.

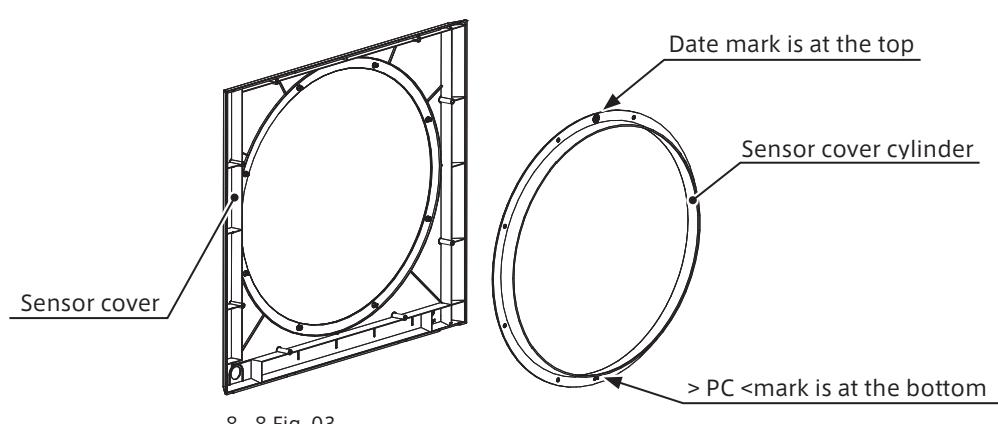

8 - 8 Fig. 03

**STEP****4**

When you have completed the replacement, reassemble them in the reverse order. When reassembling them, make sure that the tip of the cylinder fits securely into the groove on the outer board. The target sensor may not work if it is lifted from the groove or gets on the outer board.

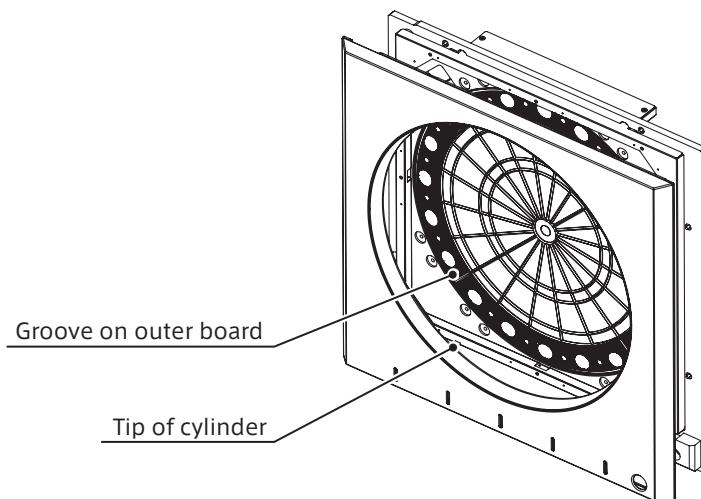

8 - 8 Fig. 04

1

2

3

4

5

6

7

8

9

10

11

12

13

## 8 - 9 Replacing Target Sensor

1

### STEP 1

Turn "OFF" the power switch. Open the lower door (L) with the maintenance key.

2

### STEP 2

Disconnect the two USB cables (XRK1 and XRK2) connected to the PC unit. Remove them from the clamp and pull up to the target sensor.

3

4

5

6

7

8


9

10

11

12

13

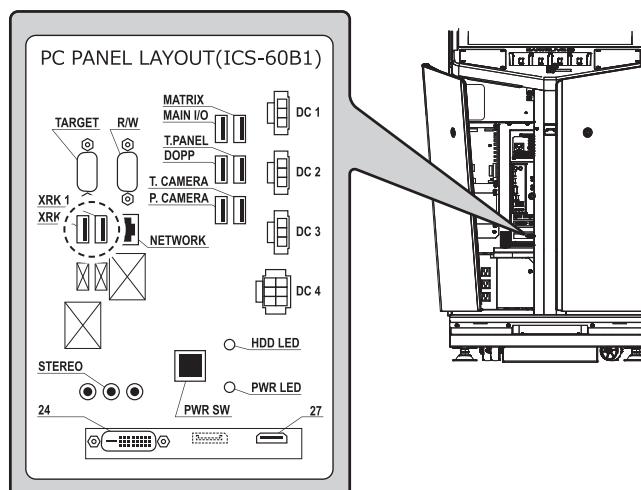


8 - 9 Fig. 01

### STEP 3

Refer to "8-8 Replacing Sensor Cover and Sensor Cover Cylinder" and remove the sensor cover.

### STEP 4

Remove the eight nuts fixing the target sensor from back of the target door. Remove the target sensor to the front, and replace it. When you have completed the replacement, reassemble them in the reverse order. When reassembling them, be careful not to overtighten the nuts.

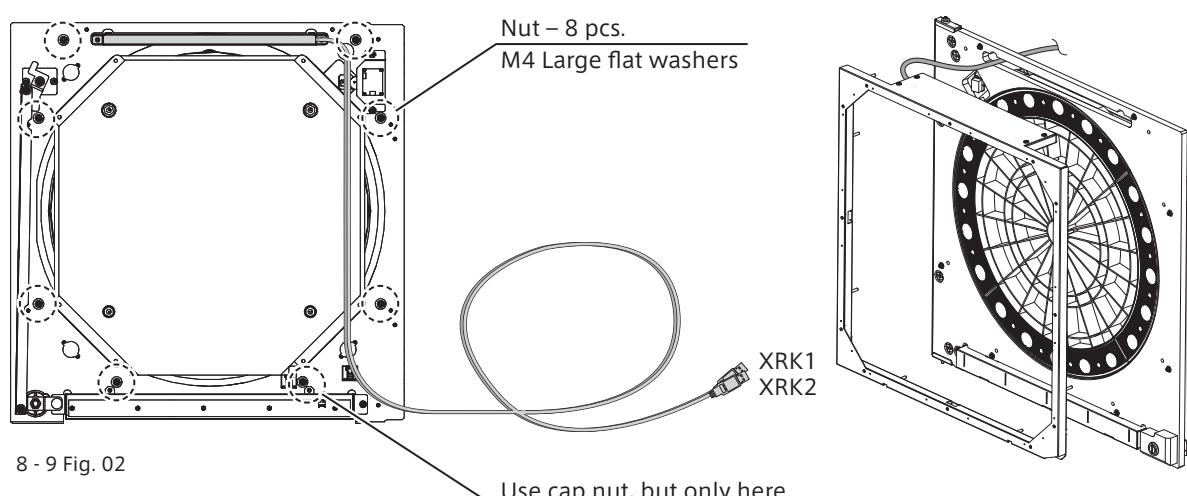

8 - 9 Fig. 02