
User Manual S11

Table of Contents

Product Structure	
Overview	2
1. Precautions	2
2. Product Parameters	3
Introduction to the Functions of Learning System	4
1. Registration of Legal Version	4
2. Parental Control System	5
3Operation about Kids Learning Software	6
4 ARZ00	7
5.Media Contents	8 .
6.Camera	9
7.Phone Calls	11
Device Components	11
Warm Tips	

Product Structure

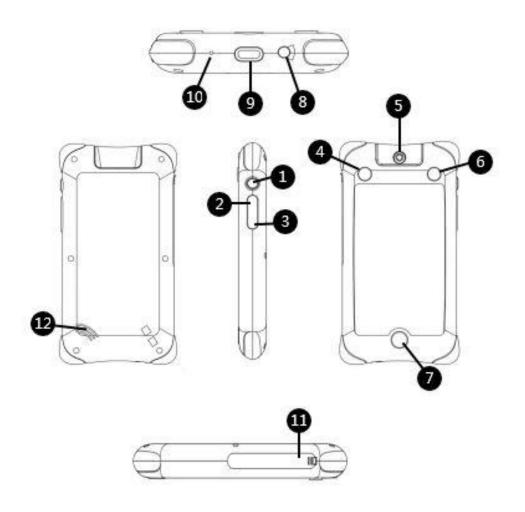

- 1. ON 2. Volume + 3. Volume 4. Call Shortcut 5. Camera
- 6. Photo Shortcut 7. Return 8. Headphone Jack 9. Type-c Port
 - 10. Sound Recording Port 11. TF Card SIM Card Reset
 - 12. SpeakerOverview

1 Before using the device, please read this user manual carefully for

safe and correct use

Do not place heavy objects on the device.

Keep the device away from chemical substances such as benzene and diluent.

Keep the device away from direct light or heating appliances.

Keep the device away from lots of dust.

Please make backups for all important information stored in your device.

Do not make self-disassembling, repair or refit.

The descriptions in this user manual are based on the default settings of iwawa

kids learning phone

As far as the appearance is concerned, the actual product shall prevail.

The relevant contents in this user manual may be different when compared with

the actual product or the software provided by the service provider. It is mainly

based on the results of software upgrade, and irrelevant with the quality of the

product itself.

The format and information are based on Google Android operating system. With

the continuous update of system, they may vary, depending on the user's operating

system

2Phone Model and Basic Parameters

CPU: MTK-4 core (MT6582V)

RAM (DDR): 1GB

Internal Storage: 8GB

External Storage: TF card extension, supporting 64GB

LCD: 3.97 mipi 480x800

Camera: 200W, front-rear sharing

Battery: Rechargeable polymer lithium battery

Charging Power: 5V/2A

Android System: Android4.4.2

1 Iwawa Kids Learning System


- 1. After startup, the device will automatically enter the mode of connecting wifi. It requires to connect wifi in order to carry out operation.
- ②..Enter the mode of connecting wifi first, then open wifi, and at last enter wifi password to activate iwawa software,
- ③.Select iwawa as the home application.



- 4. Select "Always" to enter iwawa software mode.
 - 2. Parental Control system has the original password "0000". When you enter the password, it willgo to the application filter interface. After that, you can select the appropriate applications for kids with inappropriate contents blocked, such as bloody and violent contents. Only the selected applications will be displayed for the kids.




3. Click "Kid" on the interface to access to the synchronous learning function, and select the required subject. Montessori is the learning subject forkid's intellectual enlightenment. Click to download the required materials for learning.

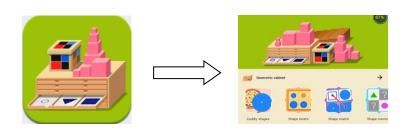

4. ARZoo function

Before you useARZoo function, the camera must return to the right place, and be kept under the state of front-facing camera. When you open ARZoo, turn the camera towards the animal pictures on the AR card. After that, the camera software will automatically identify the corresponding animal in the picture. When you tap, the animal on the display will jump and shout. When you use two fingers to move up and down, the animal will be automatically enlarged. When you use one finger to move left and right, the animal will turn its body left and right.




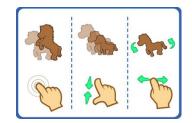

5 AR Fun Function:



AR Fun is a kind of game experience regarding 3D shooting in vision field. Before you launch the game, the camera is front-facing by default. The camera will be rear-facing only after you enter the game. According to the game play tips, you can find, shoot and destroy enemies through 360 degrees rotation.

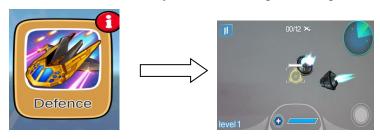



The kids can open the "Video" application on the desktop and watch all the films already selected by their parents; Similarly, the kids can also open the "Gallery" and "Music" applications toview pictures and listen to songs (those pictures and songs are selected in advance).

7、.Camera

- 1 Press the Photo Shortcut (front-facing camera by default), andthen touch to take photos. After that, the photos will be saved automatically.
- 2 Turn the camera manually in order to switch to the rear-facing camera mode, and then touch to take photos. After that, the photos will be saved automatically.

Note: when it is not in use, please switch to the front-facing camera mode which is the default choice by the software.

8. Phone Calls



UnderOFF state, insert the phone card, then turn the device on and wait a moment for reading the card. After that, you can access to Parental Control System, open the application filter to select "Phone" and press the Call Shortcut to make calls and have talking over the phone.

Note: The frequency band of this device is GSM&WCDWA which does not support networks above 4G.

Accessories

Phone, user manual, Type-c USB wire, AR card, color box.

Warm Tips:

When the batterylevel indicated is lower than 15%, please charge the devicetimely in order to better protect the battery and prolong its service life.

When your device cannot start up normally, please charge it for 15 minutes first. After that, reset and restart the device.

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device,

Pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This Device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Device has also been tested against this SAR limit. This device was tested for 0 mm for body-worn and 10mm for face up position respectively between the unit and the body of the user. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10 mm for body-worn and 10mm for face up position respectively between the user's body and the back of the Device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.