 


FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user’ s authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

FL-E009product operating instructions

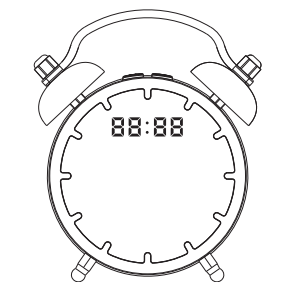

FL-E009 Bluetooth speakers

• Back function introduction

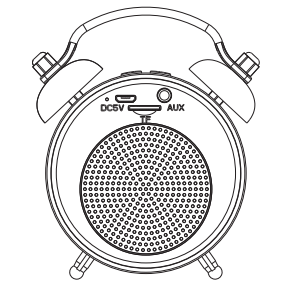

• Bluetooth pairing

(pairing peripheral needs A2DP function to transmit stereo music). Encrypted wireless connections between two Bluetooth functional devices (e.g. Bluetooth speakers and Bluetooth phones, Bluetooth speakers and PC, Bluetooth speakers and IPAD).

• Note

 
if the Bluetooth speaker is in a low power state, it may not be connected to devices such as the PC pad. Or if these devices can't find Bluetooth speakers, they have to charge them immediately before using the computer. If they don't have a Bluetooth receiver, they need to buy an additional Bluetooth receiver and a FL-E009 speaker to match.

When the phone is Bluetooth connected, if the phone exceeds the connection distance (more than 10m), it will issue a disconnect Bluetooth prompt, and will automatically connect when the phone is close to the product. Recharge this speaker has a built-in rechargeable battery, which must be charged 1. 1 before the first use of the speaker. The speaker must be turned off before charging, do not charge in the state of booting, to avoid the sound box work abnormal.

• Description of application

FL-E009 Bluetoothspeakers are suitable for mobile phones with Bluetooth capabilities, laptop computers (with Bluetooth A2DP functionality) or external Bluetooth receivers, and are compatible with Windows xp/Vista/Win7/Win8/Win10 operating system platforms.

• Key function introduction

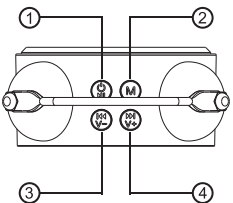

1. Turn the speaker off.
2. Press the switch button long, hear the prompt sound, that is to say, the machine has been turned on.
3. Set the Bluetooth device to search the Bluetooth device status, when the device display Bluetooth symbol will flicker, the mobile phone usually set the steps to enter the "setup" connection "Bluetooth", select to add a new Bluetooth device in the device list.
4. Find the FL-E009 speaker, select the match, and press OK.
5. After matching successfully, the Bluetooth feature device prompt (Bluetooth speaker device has been added) and asked whether to connect, select "Yes". If the connection is successful, "the Bluetooth symbol will flash. When the Bluetooth speaker connection is successful, the Bluetooth symbol will always be bright before using the Bluetooth speaker."
6. Shutdown: long press switch machine key, hear the prompt sound, that is, shut down successfully.

2. Plug the charging slot into DC 5 V power supply. It can be recharged with USB port such as portable battery or PC.
3. The red light on the back during audio charging. When the battery is full, the red light goes out, and the charger is pulled out of the speaker.

• Store the speaker

1. Turn off the speaker power during storage and be sure to be properly protected.
2. Avoid high temperatures (above 40 degrees Celsius), such as hot compartments or direct sunlight (heat can damage the surface and reduce battery life).
3. Do not post speakers to other parts exposed to Rain Water or liquid.

1. Pause key-short press: pause / play, long press: switch machine.
2. Mode key-short press: mode switch (Bluetooth / AUX / TF card / clock), long press: enter clock alarm clock setting.
3. Volume reduction key-short press: last song, long press: volume down.
4. Volume keystroke-short: next, long: volume.

• Clock alarm clock setup

alarm setting: clock mode press "pause play key" to enter alarm, click enter alarm 1 setting, digital tube alarm clock 1 symbol began to flicker, then long press M key into the clockwise design, clockwise flicker byV-/V+ adjustment, Press the pause play button into the minute set, minute flashing by V-/V+ adjustment, setting up, long press M key 3 seconds to confirm.

• Function is introduced

 TF card play	 Electric quantity display	 LED high-definition mirror
 3W horn	 High fidelity sound effect	 Double alarm clock prompt
 Bluetooth chip	 AUX playback	 Built-in battery

Audio source input indicates that the device has Bluetooth TF and AUX 3.5mm two kinds of audio source input, (TF card support format: MP3 / WAV,) if there is AUX/TF card input, it will take AUX 3.5mm audio source or TF card as priority. For example, when the device is plugged in, AUX will be the priority. If you need to play with Bluetooth, you must unplug the AUX 3.5mm to connect to the Bluetooth device. If you need to change the input mode, you can switch short by pressing M key.