 
 
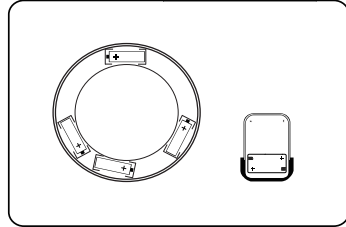 
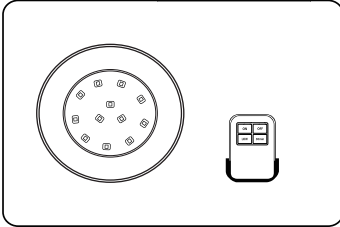 


# CEILING/WALL LIGHT WITH REMOTE(YS002)

 
## INSTRUCTION

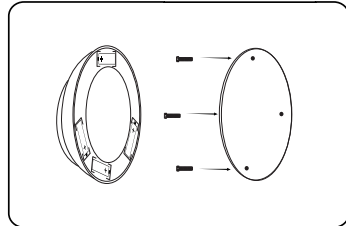

- 01 Insert batteries in the back of the light and remote as shown. Insert 4x"AA" batteries.

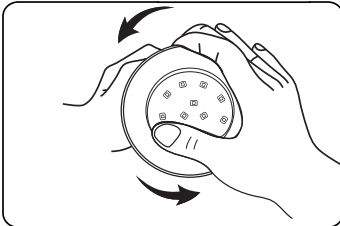


- 02 Twist the back cover of the light counter clockwise open. Mount the back plate to a wall or ceiling(screws included).

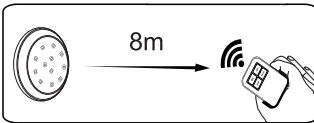

• Press the 'On' button on the remote control to activate LEDs at full brightness.

 • Press the 'Low' button on the remote control to dim the LEDs

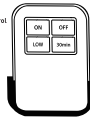

• Press the 'Off' button on the remote control to turn off the LEDs

• Press the '30 min' button on the remote control to activate the 30 minute timer

- 03 The remote distance approximately 8 meters.

## FUNCTIONS OF PRODUCT

Size:L=17cm,W=17cm,TH=2.5cm(Lamp)  
L=9.5cm,W=7.0cm,TH=2.5cm(Remote)  
Material: ABS, 12 White LEDs.  
AA batteries **NOT** included. 4 pcs for each lamp.  
2pcs for remote.

### ⚠ CAUTION

Only use batteries of the same type. Do not mix alkaline, standard(carbon-zinc), or rechargeable(nickel-cadmium)batteries. Do not mix old and new batteries

## **FCC Warning Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.