


100 mm



User Manual

1. Speaker Button Instruction

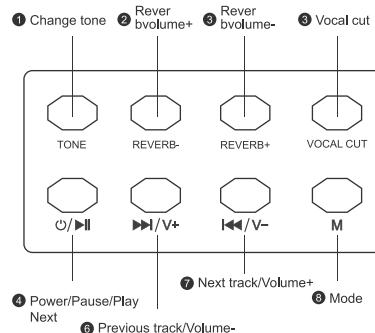

2. Speaker Operation Instruction

- ① Change tone: Short press to switch between original, male
- ② Reverb volume-: Short press to turn down the reverb volume
- ③ Reverb volume+: Short press to turn up the reverb volume
- ④ Vocal cut: Remove vocals and leave only background sounds.
- ⑤ Power/Pause/Play: Long press to turn on/off. Short press to pause or play the music.
- ⑥ Previous track/Volume-: Long press to the previous track; short press to turn down the music volume.
- ⑦ Next track/Volume+: Long press to the next track; short press to turn up the music volume.
- ⑧ Mode button: Press to switch between Wireless mode, USB/flash drive mode, TF card mode and AUX mode.

3..Microphone Button Instruction

- ① Power button: Long press to turn on/off speaker
- ② Volume up: Long press to turn up the volume
- ③ Volume down: Long press to turn down the volume
- ④ Switch mode to adjust the volume: Short press to switch between echo(accompaniment),reverb and microphone, then press the +/- button to adjust corresponding volume.
- ⑤ Short press: switch between original, male,female, children and magical sound effect.Long press: turn on/off the vocals

4..Microphone Operating Instruction

*Turn on the speaker: Press and hold the power button to turn on the speaker.

*Wireless connection: Turn on wireless on your smart phone. Find the device name and pair. The speaker will make a tone if the pairing is completed.

*Turn on the microphone: Press and hold the power button on the microphone. The microphone will be connected to the speaker automatically.

*Adjust microphone volume, echo volume and reverb volume, and choose a tone effect you want.

*Open music application on your smartphone and play a song. The volume of the song can also be adjusted via your smartphone. Short press the vocal cut button to remove vocals of the song.

*Note: Once you pair the speaker with your smart phone via wireless, they will automatically connect with each other as you turn on the speaker the next time. The wireless connection can be disconnected in the wireless setting on your phone.)

*If the speaker crashes, please press and hold the power button for 8 seconds to reset the speaker.



FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.