

Wireless Panic Button

User Manual

1. Configuration List

Wireless Panic Button	1pcs
Installation Holder	1pcs (includes the installation screws)
Manual	1pcs

2. Components and Usage



Indicator Light: flash once once the button be activated.

Panic Button: press to activate the button

Battery Compartment: please insert a 12V23A battery(not included)

3. Operation Instruction

Step 1: insert a 12V23A battery

Step 2: press the button to activate

4. Technical Parameters

Working Voltage: 12V

Battery Type: 12V23A

Wireless Transmission Range: 1KM

Working Current: Static: 0mA; Alarming: 100mA

Wireless Frequency: 434.6Mhz

Dimension: 92x40x16mm

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.