

193.00mm

96.50mm

96.50mm

386.00mm

### Do Not Return Card

**IMPORTANT**

**PLEASE DO NOT RETURN TO STORE**

If You're Having Trouble, We're Here to Help!



Call us 24/7 at 1-855-292-4087  
E-mail us at [alsupport@sakar.com](mailto:alsupport@sakar.com) or visit us at [alteclansing.com](http://alteclansing.com)



## WELCOME

Thank you for purchasing an Altec Lansing product. Download our App to unlock all the features our products have to offer!





## JUST LISTEN.



View 360 ANC TWS Earphones with Screen Charging Case

**MZX1040**

QUICK START GUIDE



**In the Box**



View 360 Active Noise Canceling True Wireless Earphones with Touch Screen



Charging Cable

Large Large  
Small Small

Small, Large Ear Cushions

**A Closer Look**



Indicator Light  
Touch Area  
Charging Contacts



Charging Case  
Touch Screen Power Button  
Touch Screen  
Charging Port

**A Closer Look (Continued)**



**Touch Screen**



Right Earbuds Power  
Left Earbuds Power  
Bluetooth Icon  
Sound Modes  
Current Menu  
Menu Selection  
Charging Case Power

**Charging**



While charging, the touch screen will show the case's current charge. When fully charged, the charging case power will display 100%.



**Note:**  
Make sure that both the earbuds and charging case are fully charged before first use.

1-2 Hours Full Charge

Charging  
Charging Complete

**Battery Warning**  
-This device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.  
-Do not dispose of in fire or expose to excessive heat.  
-Do not crush, puncture, incinerate, or short circuit external contacts.  
-Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

**CAUTION**

**Powering On**



For the first use, please place the earbuds into the case and close the case, next, charge the case. This will activate the earbuds and activate the charging case.



To turn off the earbuds, place them into the case. To turn on the earbuds, remove them from the case.

**NOTE:** You can also manually turn ON/OFF the earbuds. Press and hold either earbud's touch area for approximately 10 seconds.

If the LEDs do not turn on when the earbuds are removed from the case, charge the case then try again. In the event that the earbuds do not pair together, perform the Manual Reset function.

### REGISTER YOUR PRODUCT

To receive news, exclusive deals, OTA or firmware updates, warranty information and more please register your product at

**[alteclansingsupport.com](http://alteclansingsupport.com)**





follow us  
[@alteclansingofficial](https://www.facebook.com/alteclansingofficial)



follow us  
[#alteclansing](https://www.tiktok.com/@alteclansing)



follow us  
[@alteclansingofficial](https://www.instagram.com/alteclansingofficial)

### 12 Month Limited Warranty

All Altec Lansing products come with 12 month limited warranty from the date of its original purchase

### 24 Hour Customer Support

We love our customers, and we care about your experience with Altec Lansing. If you need assistance, please call us at 1.855.292.4087 or e-mail [alsupport@sakar.com](mailto:alsupport@sakar.com) [www.alteclansing.com](http://www.alteclansing.com) Altec Lansing Edison, NJ 08817

**Bluetooth Pairing**



1. Take the earbuds out of the charging case and they will turn On.

2. Go to the Bluetooth settings menu on your phone. Make sure Bluetooth is turned on. Connect to the device listed as "AL View360"



**Touch Button Functions**



**Press:**  
- Decrease Volume (Left Earbud)  
+ Increase Volume (Right Earbud)  
- Answer Call (Left or Right Earbud)

**Press and Hold (2 Seconds):**  
- Decline/End Call (Left or Right Earbud)  
- Voice Assistant (Left Earbud)  
- Play and Pause (Right Earbud)

**Press Twice:**  
- Next Track (Left Earbud)  
- Previous Track (Right Earbud)

**Press Three Times:**  
- Turn ON/OFF ANC (Right Earbud)  
- Turn ON/OFF Low Latency Mode (Left Earbud)

\*To use a phone's voice assistant, you must have a phone that is compatible.  
\*Your wireless earbuds will not work with your phone's voice assistant if the assistant is not first enabled within the settings on the phone. For more information, see your phone's user manual.  
\*You must be within Bluetooth® range to use your phone's voice assistant via your wireless earbuds.

**Touch Screen**



To turn the touch screen on or off, press the touch screen power button located on the bottom of the case.

**NOTE:** The touch screen does not have to be on to use the earbud's touch button functions.

Your touch screen may start with a lock screen. Swipe your finger in the direction the lock screen arrow points.

Swipe left or right to access different setting menus.

**Controls:** Use to play and pause music.  
**Volume:** Use to alter the volume.  
**Sound Modes:** Use to set the earphone's sound mode.  
**Equalizer:** Use to set the audio equalizer if available.  
**Brightness:** Use to alter the touch screen's brightness.  
**Language:** Use to select your desired language.  
**Lock Screen:** Use to set your preferred lock screen image.  
**Find my Earphone:** Use to help locate your earphones by playing noise from the selected earphone.  
**Light:** Use to set the display screen to pure white and use the charging case as a weak flashlight. Tap the screen to return the menu.  
**Camera:** While connected to a compatible device accessing a camera app, press the screen to take a picture.

**Manual Reset**



Only do this function when experiencing issues that are not solved by turning the earbuds On and Off or placing them back into the case.



1. Disconnect the earbuds from your phone.  
2. Put both earbuds into the charging case.  
3. Take one earbud out from the charging case. The earbud's indicator light should flash red and blue. Press the touch button four times.  
4. Take out the other earbud and press the touch button four times.

**Reset Screen**  
Only do this function when the touch screen can't control the earbuds.  
1. Put both earbuds into the charging case, close the charging case.  
2. Press the button on the bottom of the case and hold for 10 seconds.

For additional user materials and warranty information, please visit [alteclansing.com](http://alteclansing.com)

**Notes**



*\*To use voice assistant, you must have a phone that is equipped with a voice assistant.*

*\*You must be within Bluetooth range to use voice assistant via your Wireless Earbuds.*

Your Wireless Earbud's voice assistant feature will not work if a voice assistant is not first enabled within the settings on the phone. For more information, see your phone's user manual.

For additional user materials and warranty information, please visit [alteclansing.com](http://alteclansing.com)

**est. FIRST**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
—Reorient or relocate the receiving antenna.  
—Increase the separation between the equipment and receiver.  
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
—Consult the dealer or an experienced radio/TV technician for help.

**Note:** The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

FOLLOW US ON  
  
[#myalteclansing](https://www.instagram.com/myalteclansing)