

1 Specification

PRODUCT : ATEEZ OFFICIAL LIGHT STICK Ver.2
 SIZE : 100 x 100 x 250 (mm)
 WEIGHT : About 200g
 POWER : AAA BATTERY 3EA
 MATERIAL : ABS, PC
 COMPONENTS : Light stick, Strap, User manual
 OPERATING TIME : 4HOURS
 OPERATING TEMPERATURE : -20°C ~ 50°C
 PLANNING & SALES : KQ ENTERTAINMENT / PLAY COMPANY
 MANUFACTURER : BEATRO CO., LTD
 COUNTRY OF MANUFACTURE : KOREA
 CERTIFICATION MODEL : ATEEZ-V2
 KC : R-R-BT-ATEEZ-V2
 FCC ID : 2AS3Z-ATEEZ-V2




This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

2 How to use

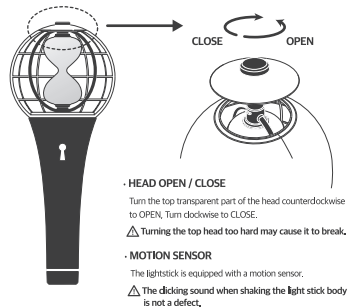

· HEAD OPEN / CLOSE

Turn the top transparent part of the head counterclockwise to OPEN, Turn clockwise to CLOSE.

⚠ Turning the top head too hard may cause it to break.

· MOTION SENSOR

The lightstick is equipped with a motion sensor.

⚠ The clicking sound when shaking the light stick body is not a defect.

MODE

· POWER ON/OFF (Button Long Click)

Press and hold the button for about 3 seconds to turn the power on/off.

· Normal Mode (Button One Click)

When the power is on, press the button briefly to change various color modes.

· Application Mode (Button Double Click)

Application mode connects ATEEZ-only applications and light sticks to enjoy a variety of content. Double-click the button to switch to Application mode (blue blinking), and double click the button again to return to color change mode.


⚠ If there is no connection with the app within 15 seconds of application mode, it automatically switches to normal mode.

⚠ The Application mode does not operate the color change and is not defective.

※ The light stick can be controlled wirelessly only in normal mode.
 Make sure to change to the normal mode before watching at the concert.

3 Replacing Batteries

※ If the battery is low voltage, the power is automatically power off, so please replace it with a new battery.

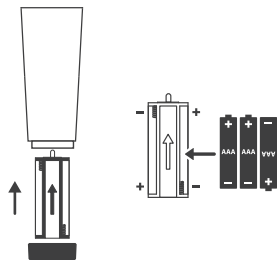

⚠ BATTERY CAUTION

- Add the correct order from (-) to (+) pole.
 There is a risk of ruptures and leaks due to heat in reverse injection.
- Remove the battery part immediately when the battery part suddenly heats up.
 (Don't hold it with your hands as there is a risk of burns.)
- Please use genuine alkaline AAA batteries.
 (If not genuine, there may be damage to the product. Be sure to use a genuine battery.)
- Do not charge, disassemble, short circuit, heat, Risk of injury due to explosion or leakage.
- Remove the battery from the machine immediately after use as it may cause leakage.
- Please use a new battery for each performance.
- Do not mix new batteries with used batteries and other batteries.
- Do not store batteries in a pocket or bag with the battery unpackaged.

4 Warranty Period and Repair Service

- Any defect, replacement, or refund of the product, please contact your dealer.
- Free warranty period is three months from the date of purchase. Even within the free warranty period, if the defects of the product occurred by the customer's fault, repair cost will be charged.
- The product A/S application fee (round trip shipping fee) shall be paid by the customer if it is subject to paid repair after the manufacturer pays.
- Repair service is only provided after requesting the service through an email.
- Please send the product after application and consultation is completed.
- Replacement Service: If the following phenomenon occurs within the warranty period (3 months), the product exchange service can be provided, but the product A/S application fee (round trip shipping fee) will be paid by the manufacturer. If it's subject to paid repair, it's a customer's burden.

※ Free A/S

- Defects of operation of LED and Wireless.
- Malfunction of the power button.
- Bad battery socket.

- Package damage isn't eligible for a refund or replacement.

- Paid Repair Service: The paid warranty period is up to 1 year after purchase. In case of products that are not covered by free warranty, you can get warranty at a cost, and the product A/S application fee (round trip shipping fee) is borne by the customer.

※ Paid A/S

- After the free warranty, (3 months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

5 Customer Service Center

Product inquiry and customer service

TEL : +82) 2-783-1945 WEB : www.beatro.co.kr / beatroas@beatro.co.kr
 Warranty : 3 months from date of Purchase

How to get customer service

In case of proper use, we will inform how to repair or replace the product after customer consultation via phone call or email. In case of improper use due to customer's fault, we will inform repair cost including logistic cost for customer service.

6 Caution ⚠

- If a strong or exposure to water will cause damage.
- Do not disassemble or assemble on your own.
- Please use a genuine alkaline AAA batteries.
- Please remove the batteries when not in use.
- Keep batteries in a safe place, out of children reach.
- Do segregate your product and used batteries from household waste for recycling, where possible, according to local laws.
- Insert batteries correctly, following the symbols for positioning the positive (+) and negative (-) ends of each battery. If not, it may cause product malfunction and overheating which may result fire or burns.
- There's a possibility of radio frequency interference during wireless operation.

ATEEZ

KQ
ENTERTAINMENT

PLAY
COMPANY CORP.

BEATRO
CORP.

© KQ ENTERTAINMENT. & PLAY COMPANY CORP.
 ALL RIGHTS RESERVED.