

Quick Start Guide | Guide de Démarrage

Wireless Mouse Souris sans fil à profil bas


Model | Modèle

System Requirements | Configuration Requite:

- PC with Windows® 10™/Win8™/
Win7™/Vista™/XP
PC avec Windows^{MD} 10^{MC}/Win8^{MC}/
Win7^{MC}/Vista^{MC}/XP
- Mac OS X v10.0 +
- Available USB Port
Port USB Disponible


Packaging Contents | Contenu:

- Wireless Mouse Souris sans fil à
profil bas
- USB Receiver
Récepteur USB
- 2 AAA Batteries
2 Piles AAA
- Quick Start Guide
Guide de Démarrage

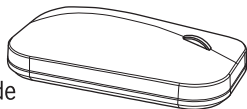


- 1** Open battery door and
install 2 AAA batteries as
shown. Replace battery door.

Ouvrez le compartiment des
piles et installez 2 piles AAA
comme il est indiqué.
Refermez le compartiment
des piles.

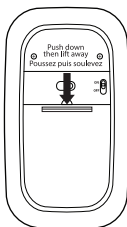


USB Receiver Storage
Récepteur USB se
rangeant dans la
base de la souris

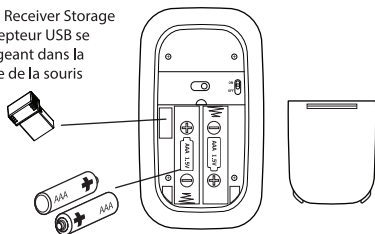


- 2** Plug the USB receiver into an available USB port
on the computer. USB ports are identified as .

Branchez le récepteur USB dans un port USB libre
de l'ordinateur. Les ports USB sont identifiés par le
symbole .

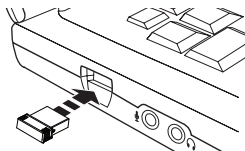

3 Slide the On/Off switch to the “On” position. The mouse will sync to the computer and begin working automatically.

Placez l'interrupteur On/Off à la position « On ». La souris se synchronisera avec l'ordinateur et se mettra à fonctionner automatiquement.

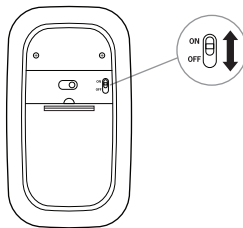

Notes | Remarques:

If the mouse does not automatically connect to the computer, unplug the USB receiver, wait 5 seconds and plug the receiver back in. The mouse should begin to work within 10 seconds.

Once connected, you may use your computer to adjust your mouse settings such as speed of motion, button functions, and scroll wheel actions:



For Windows, open the **Control Panel** and choose **Mouse** (depending on your settings, you might need to select **Hardware and Sound**, then select **Mouse** from the Devices and Printers section)



For Mac, open the **Apple menu** and choose **System Preferences**, then select **Mouse**

Click once to wake up the mouse after inactivity.

Si la souris ne se synchronise pas automatiquement avec l'ordinateur, débranchez le récepteur USB, attendez 5 secondes, puis rebranchez le récepteur. La souris devrait commencer à fonctionner dans les 10 secondes.

Une fois connecté, vous pouvez utiliser votre ordinateur pour régler les paramètres de votre souris, comme la vitesse de déplacement, les fonctions du bouton et l'action de défilement de la molette:



Dans Windows, ouvrez le **Panneau de configuration** et choisissez **Souris** (selon vos paramètres, vous devrez peut-être sélectionner **Matériel et son**, puis **Souris** dans la section **Périphériques et imprimantes**)



Dans Mac, ouvrez le **menu Apple** et choisissez **Préférences du système**, puis sélectionnez **Souris**

Cliquez une fois pour réveiller la souris après une période d'inactivité.

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.