Max Charge





USER GUIDE

1 Touch mode



Left Earhud

HayiPasus Arkonsee/Hang Up (Single-Clck)
Previous Song Reject (Double-Clck)
Previous Song Reject (Double-Clck)
Reduce Volume (Triple-Clck)
Switch in ANK Oxide/Ambiert Mode (Long Press For 2 Seconds)
Turn on the earbuds (Long Press For 3 Seconds)
Turn of the earbuds (Long Press For 5 Seconds)

Right Farbud Right Earbud
Play/Pause/Answer/Haup Up (Single-Click)
Next Song/Reject (Double-Click)
Increase Volume (Trigle-Click)
Increase Volume (Trigle-Click)
Increase Volume (Trigle-Click)
Increase Volume (Trigle-Click)
Activate the Volce Assistant (Long Press For 2 Seconds)
Turn on the earbuds (Long Press For 3 Seconds)
Turn off the earbuds (Long Press For 5 Seconds)

Parameters

Distance	10m	Pairing name	AP120
Frequency response	20HZ-20KHZ	Earphone control	Touch control
Sensitivity	118 +/- 1.5dB	Weight	45g
Support Agreement	a2dp\avctp\avctp\ avcp\hfp\spp\smp\ att\gap\gatt\rfc omm\ sdp\f2cap profile	Size	62*49*27mm
Charging Box Charging	Type-C	Packing List	Wireless headphone set; Charging cable; instructions

Connection method

1. Open the top cover of the charging case to automatically turn on the earbuds, close to the unlocked phone

- 2. Wait fot about 8 seconds to turn on Bluetooth.
- 3. Search for Bluetooth name and click to connect
- 4. Automatic reconnection: If the paired name of the earnhone has not been deleted from the phone, removing the earphone will automatically reconnect

Color screen UI operation



Click on both sides to switch wallpapers



If you can't find your earphones while connecting or in standby mode, you can choose this option. Click the "L" and your left earphone will make a beep sound. Click the "R" and your Right earphone will make a beep sound.



If you want to use touch to wake up the screen, click the button to turn on, click again to turn off



Click the button to turn on/off the prompt when sliding the



After connecting the phone, turn on the camera and click on the camera icon in the middle of the screen to take of



Click on this screen to turn on/off the light.



After connecting the earphones to the phone, dick on the screen for previous/next/pause/play functions.



After connecting the earphones to the phone click on the left side of the screen to decrease the volume, click on the right side to increase the volume.



After connecting the earphones to the phone click the left icon to enter ANC mode, the middle icon to enter ambient mode, the right icon to enter the normal mode



Scroll the sound equalizer for proper EQ setting, CUSTOM-JAZZ-VOCAL-BASS-CLUB-STUDIO



For the Stop Timer, select how many minutes.
Click "SET UP" to start countdown, Click cancel to stop.



Click to switch the screen brightness Low/Middle/High



Click to switch the language, English, Chinese, etc.



Click to enter the video mode/music

Control operation



Precautions for use

1. In daily use, the charging surface of the earbuds will be stained with dirt and other dirty things, and you can use a cotton swab to clean the electrical contact surface of the earbuds charging.

2. The earbhones need to be used correctly and standardly, pay attention to the impact of the use

2. The earphore need to be used correction, need to be used correction to the impact of the use environment of the earphore in order to he was produced to he use environment of the the distance between the collection of the earphore between the mobility of the distance between the mobility of the earth of the ear

Tips

1. If your earbuds are seriously hot or burned out during charging, you can see whether you are

If you are should are seriously hot to burned out during charging you can see whether you are using a charging head with a power generation MCVA.

All the properties of the properties of the properties of the three semptions back into the charging case, the semptions will automatically shut down open the mobile price for high pring many clock to cancel the Blackstorn pairing, open the harging case, take use out the early-ones, wall for about 8 seconds to open the mobile phone Blackstoth to search for the Blackstoth many, and clock to cornect the Student pairing, open the All Students many, and clock to cornect the Student pairing, open the Blackstoth many, and clock to cornect the Students pairing, open the Students many, and clock to cornect.

- 3. The earbuds can't hear the sound
- (1) Confirm that the earbuds are in working condition
- (1) Confirm that the earbuds are in working conclined.

 (2) Confirm whether the volume of the earbuds is appropriate
 (3) Confirm whether the solution of the earbuds is appropriate
 (3) Confirm whether the earbuds are normally connected to the mobile phone
 (4) Confirm that the earbuds are think the normal working range
 4. If you have that the headstate is intermittent in the solution places, the signal interference is large, and
 the Balectoth headstate voll atteries whether the Balectoth headstate have been as the signal interference is large, and
 the Balectoth headstate voll atteries whether the Salectoth headstate voll atteries with the solution places. intermittent situation, and it can be solved by disconnecting and reconnecting it elsewhere. (1) When the distance between the earbuds and the mobile phone is more than 8 meters or (1) When there is an obstacle in the middle, the signal transmission will be affected
 (2) When there is a high-power transmitting device in the vicinity, the signal transmission will be
- (3) Tight space will also affect signal transmission (electronic city, etc.)

WARRANTY AND LIMITATIONS:

Limited 3 Year Warranty. To activate product warranty go to our website www.pomgear.com and register this product. Guarantee will not be applied to the damages caused by faulty usages

Products that have been subjected to abuse, misuse, accident, alteration, modification, tampering, negligence, faulty connection, attachment to any unauthorized accessory, lack of responsible care, repair or service in any way that is not mentioned in this manual for the product. Such as any damage caused by dust, wetness, coldness, overheating, placement near hot objects, near fire storage or use of corrosive elements. No warranty in damage caused by natural disasters such as floods, fires, typhoons, earthquakes and related matters. To the extent permitted by law, POM GEAR Inc. Shall not be liable for damages beyond replacing the defective product. WARNINGS AND NOTES:

- · Do not store unit in a high temperature environment, including intense sunlight or heat. Do not place unit near fire or other excessively hot environments.
- · Be cautious of excessive drops, bumps, abrasions or other types of impact. If there is any damage to the battery such as dents, punctures, tears, deformities of corrosion, due to any cause, discontinue use and contact manufacturer or dispose of in an appropriate manner.
- Do not disassemble or attempt to modify or replace any part of this unit.

- Do not expose unit to moisture, snow or submerge it in liquid.
- Do not use unit in the vicinity of flammable fumes or gases (such as propane tanks or large engines).
- · Do not attempt to operate unit using any other method than directed.

This device complies with Part 15 of the ECC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including
- interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference wi∎ not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is

encouraged to try to correct the interference by one or more of the

- --Reorient or relocate the receiving antenna.
- --Increase the separation between the device and receiver.
- -- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

RF warning for portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ECC ID: 24S7V-4P120

