


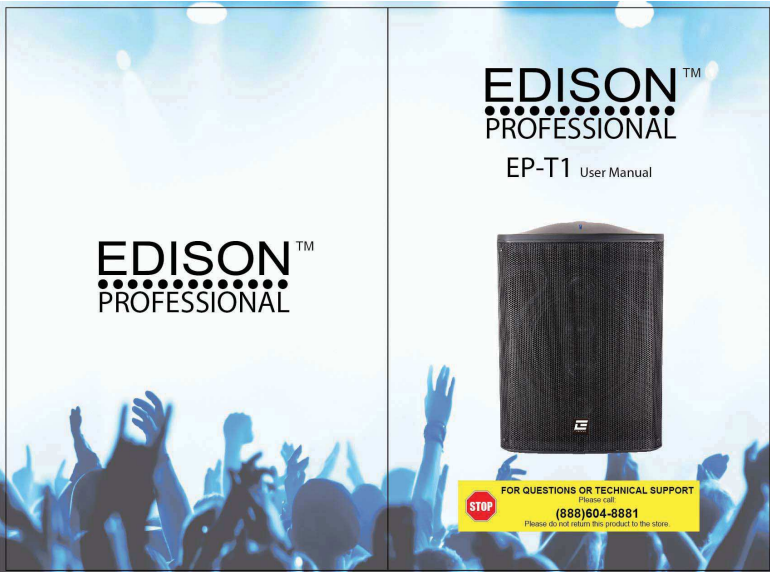

SPECIFICATIONS:	
Input source.....	Bluetooth/USB/Line
Bluetooth range.....	Bluetooth 15m
MIC IN.....	1/4"TRS or XLR
Control Buttons.....	Power,Bluetooth pairing, Volume knob, BASS / HIGH, Mic Level, Mic reverb, Line Level, mp3, Bluetooth control buttons
LED indicator.....	Peak indicator / Power indicator
Battery.....	No
Power Input.....	AC100-240V 50/60Hz
Auto Standby.....	No
Auto Power off.....	No
Speaker Output wattage.....	80+80W
Speaker Driver size.....	10" (woofer) + 3"x4" (Neodymium full range speaker)
Speaker Grill Finishing.....	Metal
Full Range.....	Yes
MAX SPL.....	128dB
THD+Noise.....	<10%
S/N.....	>80dB
Cabinet Material.....	Plastic
Dimension.....	13.5"x14.3"x18.6"
Weight(KG).....	27.55lbs
Operating Temperature	
Operating Temperature Range	32° to 104° F
Operating Humidity Range	40-90%
Storage Temperature Range	-13° to 158° F
Key	
Power On/Off key.....	Power on/Switch "Power" Key to "T"
	Power off: Switch "Power" Key to "O"
Bluetooth	
Bluetooth Version.....	5.0
Bluetooth Profile.....	A2DP,AVRCP
Bluetooth Frequency Band.....	2.402GHz-2.480GHz
Bluetooth Range.....	15m
Connections	
XLR or 1/4" Jack Mic In.....	Yes
USB Port.....	5V 1000mA
AC In.....	Yes
AC Out.....	No

-10-

IMPORTANT SAFETY INSTRUCTIONS:	
TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.	
The lightning bolt with attached symbol, either on separate single or double line, or on the ground line, indicates the presence of "hazardous" voltages. Always use the product in accordance with the instructions and warnings on the label. CAUTION READ ELECTRICAL SAFETY INSTRUCTIONS WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICE TO QUALIFIED SERVICE PERSONNEL. The information does not apply to equipment except as indicated by the text in the manual. For proper operation and maintenance, servicing, replacement, and repair, consult the service manual.	
Important Safety Instructions:	
1) Read these instructions.	
2) Keep these instructions.	
3) Heed all warnings.	
4) Follow all instructions.	
5) Do not expose this appliance to rain or moisture.	
6) Clean only with dry cloth.	
7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.	
8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.	
9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.	
10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.	
11) Only use attachments/accessories specified by the manufacturer.	
12) Use only with the tripod stand with the apparatus.	
13) Unplug this apparatus during lightning storms or when unused for long periods of time.	
14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.	
15. Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.	
16. Do not install this equipment in a confined or building in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should	

-3-

TABLE OF CONTENTS	
IMPORTANT SAFETY INSTRUCTIONS.....	3
PART DESCRIPTION.....	5
GETTING STARTED.....	5
BLUETOOTH CONNECTION (Bluetooth Devices).....	6
CONNECTING SOURCES.....	6
AUX INPUT.....	7
USB CHARGING.....	8
CHARGE THE BATTERY.....	8
TROUBLESHOOTING.....	8
SPECIFICATIONS.....	10
LIMITED WARRANTY.....	11

-2-

Limited Warranty	
This Limited Product Warranty is provided by Britelite Enterprises. Britelite warrants to Customer that the product is free from defects in materials and workmanship under normal use during the Warranty Period of 90 days for parts and 1-year labor. If the product fails to conform to the warranty then Britelite or its authorized service will either repair or replace any nonconforming product, provided that Customer gives notice of noncompliance within the Warranty Period to Britelite by emailing service@britelite.net or calling 310-363-7110 (Mexico customers can call 0155 4624 0251). Please retain the original dated receipt as evidence of proof of purchase.	
Please do not return the product to the dealer or place of purchase.	
Contact Britelite directly for warranty support.	
Telephone: (888)604-8881	

-11-

not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.	
17 The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.	
18. Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.	
19. Minimum distances 10mm around the apparatus for sufficient ventilation.	
20. The ventilation should not be impeded by covering the ventilation openings with items, newspapers, table-cloths, curtains, etc.	
21. No naked flame sources, such as lighted candles, should be placed in the apparatus	
22. The use of apparatus in moderate climates.	
WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture	
FCC Caution	
§ 15.19 Labelling requirements.	
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.	
RF warning for Mobile device:	
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.	
§ 15.21 Information to user.	
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.	
§ 15.105 Information to the user.	
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:	
- Reorient or relocate the receiving antenna.	
- Increase the separation between the equipment and receiver.	
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.	
- Consult the dealer or an experienced radio/TV technician for help.	

-4-

Bad Sound – Noise - Humming	
• If the sound is loud and distorted, verify that the levels are set properly on the speaker and mixing console.	
• Make sure all connectors are secure and they are plugged in to the proper connector (i.e., Mic cable plugged in to MIC input, Line level source plugged in to Line Level Input.	
• It is a good idea to periodically clean all electrical connections with a non-lubricating electrical contact cleaner.	
• Make sure none of the signal cables are routed near AC cables, power transformers or other electrical power cords.	
• If humming occurs, turn the LEVEL control of the speaker all the way down. If the noise disappears, its coming from the signal source. If not, try disconnecting the cable connected to the INPUT jack. If the noise disappears, it could be a ground loop, the following ideas:	
o Use balanced connections throughout your system for best noise rejection. (XLR cables, balanced jacks, RCA cables are not balanced)	
o Whenever possible, plug all the audio equipments power cords into the same outlet.	
o The hum may appear when using an unbalanced source (CD player, iPod, etc.). You can use an RCA to XLR adapter to turn an unbalanced cable to a balanced cable.	
o If the hum persists, try removing components one at a time from the back of the mixer and check each for hum. Reducing the Bass or Treble levels may reduce humming.	
Care and Maintenance	
Your active speakers will provide many years of reliable service if you follow these guidelines:	
• Avoid exposing the loudspeaker to moisture. If they are set up outdoors, be sure they are under cover if you expect rain.	
• Avoid exposure to extreme cold. If you must operate loudspeakers in a cold environment, warm up the voice coils slowly by sending a low-level signal through them for about 15 minutes prior to high-power operation.	
• Use a dry cloth to clean the cabinets. Only do this when the power is turned off.	
• Avoid getting moisture into any of the openings of the cabinet, particularly where the drivers are located.	

-9-

USB CHARGING	
USB Charging mobile device	
The EP-T1 Has a built in USB battery bank. In order to use this feature you must use your mobile device's + USB cable (iPhone or Android) and connect it to the USB port on the EP-T1.	
CHARGING THE BATTERY	
Anytime your EP-T1 is plugged into AC power and the system is not in use, the battery is charging.	
BATTERY LIFE INDICATOR	
The State of the battery life will be indicated via the power LED on the top front of the product.	
When the battery level is sufficient, the power LED indicator will be in blue without flashing.	
When the battery level is insufficient, the power LED indicator will turn red and flashing then you need to plug into an electrical outlet.	
When the EP-T1 is fully charged, the power LED indicator remains red without flashing while plugged into an electrical outlet.	
EQ	
TREBLE: Raise or attenuate highs at 10dB @ 12 KHz frequency.	
BASS: Raise or attenuate lows at 10dB @ 80Hz frequency.	
TROUBLESHOOTING	
No Power	
• First check to make sure the speaker is plugged in to a live AC outlet.	
• Make sure the POWER switch is on.	
No Sound	
• Make sure input LEVEL control turned up.	
• Make sure signal source is working and the connecting cables are in good shape and securely connected at both ends. Make sure the output volume control on the mixing console is turned up.	
• Make sure the preamp or mixer does not have a Mute button engaged.	

-8-

PART DESCRIPTION:	
GETTING STARTED	
Power connection	
•Connect the supplied A/C cable to the speaker	
•Plug the A/C cord into the wall outlet	
Power On/Off Switch	
•Turn Power switch on	
•The power LED will turn on	
•The unit will enter into Bluetooth mode by default.	

-5-

BLUETOOTH/BLUETOOTH STEREO PAIRING INSTRUCTIONS:	
• Turn on the unit, it will default to Bluetooth mode, select EP-T1 on your device to pair with your audio source device.	
• Press and release PAIR button when you want to connect to another device.	
• Turn on second EP-T1 and press LINK button(only need to press the LINK button on either one speaker), then the two EP-T1 will be paired automatically as long as the speakers are no more than 16 feet apart.	
CONNECTING SOURCES	
Before connecting a sound source, adjust the appropriate channel volume control fully counterclockwise.	
Channel 1 & 2 controls	
Channel 1 and 2 are for use with dynamic microphones, guitars, keyboards or other instruments.	
1. Use XLR and a 1/4" jack connector to connect your sound source to the CHANNEL input of either channel 1 or 2.	
2. Apply a tone preset by adjusting the tone preset switch for the appropriate channel to P for microphone or G for other Instruments.	
NOTE:TONE PRESET automatically optimize the sound of your microphone or instrument.	
3. Adjust the volume control clockwise-while speaking into the microphone or playing your instrument until the volume has reached the desired level.	
4. Adjust the HIGH, BASS and REVERB controls-while speaking into the microphone or playing your instrument until the desired effect is achieved.	

-6-

Channel 3 controls	
Channel 3 is for use with Bluetooth capable devices and line-level audio inputs.	
Output connect	
There is also an 1/4"TRS output connector labeled LINT OUT. This allows you to connect more than one EP-T1 to the output of your sound source. Simply plug an 1/4"TRS cable from the line out connector of one speaker to the input connector of another speaker, and so on, daisy-chaining multiple speakers.	
AUX INPUT	
Connect a line-level sound source to the AUX input via a 3.5mm(1/8") cable.	
Note: Anything connected via the Aux input will automatically override any paired Bluetooth device.	

-7-