

A905

User Manual

1 Introduction

1.1 Phone Display



1 Torch	2 Receiver	3 LCD screen
4 Left softkey	5 Send/Dial key	6 Navigation key
7 Right softkey	8 End/power key	9 OK key
10 USB port	11 MIC	12 Power bank port
13 Earphone	14 Speaker	15 Camera
16 Flash light	17 Battery cover	

1.2 Key

Key	Function
Dial key	Answer all calls. Make calls from SIM1/SIM2/SIM3 card. View call logs in standby mode.
End/ Power key	Press and hold to turn the phone on/off. End a call or reject an incoming call. Close background playing of music player or FM radio.
Ok key	Press to access the main menu or shortcut menu in standby mode. Press to confirm a selection.
Navigation Key	Left/right key to select shortcut menu, Up/down key to select music player or FM radio in standby mode
Left/Right softkey	Press to perform the function currently displayed in the bottom left/right corner of the screen.
Numeric key	Enter numbers, letters or characters. Select a submenu item labeled with the corresponding number.
* Key	Press to popup the symbols screen when entering text. Press * Key to toggle between *, +, (pause character) P, and (wait character) W in standby mode. Press Left Soft Key and * Key to lock/Unlock keypad.
# Key	In standby mode, press and hold to switch among silent mode, general mode and Meeting mode. Press to switch the input methods when entering text.
0 Key	Long Press to Turn on/off Torch.



Note: "Press" in this manual, means to press and release the key; "press and hold" or "long press" means to press and hold the key for at least 2 seconds

2 How to do

Please read the safety instructions in the "Safety Information and Notices" section before use.

2.1 Change default password

Default Phone Password is 0000,please change it and remember it by:

Setting->Security->Modify password

2.2 Lock and Unlock keypad

Enter into Menu > Settings > Security settings >Auto keypad lock to make the function on. In standby mode, if the time expires, the keypad will be locked automatically. Press the Left Soft Key then * key to lock or unlock the keypad.

2.3 Transfer files to the T-Flash (External Memory) card

Insert your T-Flash card into card slot on phone, and then connect the phone to the USB port of a PC. The PC will auto detect the T-flash card as a removable disk.

- You can access the T-Flash card memory now.
- Download or upload the files to T-Flash card.
- When the transfer is finished, please make sure that you Safely remove the phone by clicking  or other uninstall icon according to your system.

2.4 Operate between modes

This phone includes these mode:

- Sleep mode

LCD display will off. Press leftsoft key to wakeup phone.

- Lock mode

Date and time is displayed but cannot make call. Press leftsoft key plus * key to unlock phone.

- Standby mode

Idle screen is displayed, can enter shortcut and main menu, make call, send SMS,etc.

- Application mode

Entering any application menu through main menu or short cut menu will switch to application mode.

2.5 Open MFU application

Enter first shortcut menu in idle screen or from main menu of second page. Support Mobile tracker, Privacy protection, Blacklist, Magic sound , etc.

2.6 Make call

This phone supports 3 SIM cards with GSM network system. Input telephone number by keypad or through phonebook list, then press Dial key to select one SIM card to make call.

2.7 Send message

Enter Message application through second shortcut icon or main menu of second page. Support short message (SMS) or multimedia message (MMS).

Notice: MMS is very expansive then SMS in most of time.

2.8 Take a picture or video

Enter camera application through third shortcut icon or main menu camera icon. Enter option to find more settings. Change to DC mode or camera mode to take a picture, change to DV mode or video mode to take a video.

2.9 Open music player

Press up navigation key or open music or audio icon through main menu to play music. Press End key to close background playing.

2.10 Open FM radio

Press down navigation key or open FM icon through main menu to play FM, Press End key to close background playing.

2.11 Open power bank

Open power bank icon through main menu to operate as an power bank which can charge other phone through USB cable.

2.12 Open Torch

Open or close Torch by long pressing 0 key or open torch icon through main menu.

2.13 Save phonebook

Input digit in keypad and save to phonebook through option menu.

2.14 Open setting menu and change language

Press the forth shortcut menu in idle screen or open Settings icon in main menu to open setting menu. You can change language in phone settings menu. Others, such as display setting, security setting, call settings, can be found here.

2.15 Open all applications

In standby mode, press leftsoft key to enter main menu. You can find every applications such as games, settings, profiles, calendar, calculator, alarm, Bluetooth, etc. Just enjoy them.

Safety Information and Notices

Before using the phone, please read the safety precautions carefully and let your children know these, so that you can use your phone correctly and safely.

Do not switch on your phone when phone use is prohibited or when phone use may cause interference or danger.
Do not use your phone while driving.
Follow the rules or regulations in hospitals and health care facilities. Switch off your phone near medical equipment's.
Switch off your phone in an aircraft. The phone may cause interference to control signals of the aircraft.
Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.
Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.
Do not place your phone or its accessories in containers with strong electromagnetic field.
Do not place magnetic storage media near your phone. Radiation from the phone may delete the information stored on them.
Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.
Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.
Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
Use approved batteries and chargers only to avoid explosion.
Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.
Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.
Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
Use approved batteries and chargers only to avoid explosion.

E-Waste (Management & Handling)



According to waste of Electrical & Electronics Equipments (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product, please DO NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

The following marking/symbol on the product or carton indicates that the product and its accessories/parts (e.g. battery travel charger, hands free etc.) should not be disposed of with other house hold waste at the end of working life. Please separate these items from others type of waste and recycle them responsibly for conservation of the environment and collective well being.

Disclaimer

- The colors, specifications, functions and graphics shown/mentioned in the user manual may differ from the actual product. In such a case, the latter shall govern. Images shown are for representation purpose only. Specifications are subject to change without prior notice. Fullin keeps the right to modify the content in this user guide without prior notice.
- Talk and standby times are affected by network preferences, type of SIM cards, connected accessories and individual usage patterns. Services and some features may be dependent on the network, service/content providers, SIM cards, compatibility of the devices used and the content formats supported.
- Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

*** Operator tariff shall be applicable for SMS**

Copyright

- All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Fullin is strictly prohibited.
- All Trademark, Logos, Mark Symbol and offer details mentioned are trademark or service mark of their perspective owners, Fullin holds no responsibility of their partner logos & contents. All Images are for representation purpose only.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Outer FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back/front of the phone kept 1cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1cm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories

that cannot maintain 1cm separation distance between the user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio

MFU A905

transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP> (1999)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: 2AS95-A905 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

MFU A905

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.