



Quick Start Guide & User's Manual

Model:MINOTAUR
FCC ID:2ASDT-MINOTAUR

Portable Mobile Phone Karaoke Speaker

Safety Precautions & Warnings

1. Do not disassemble any part of the device.
2. Do not expose the device to any amount of water or rain.
3. Do not operate in high temperature environments.
4. Do not operate the unit around machines or appliances.
5. When not charging or using the device, turn off and unplug the unit.
6. Use only the included accessories with the device.

What's In The Box




1

2

Quick Start Guide

1. To charge the unit before use, plug the power cable into the back of the unit. Plug the other end of the power adapter into a power outlet.

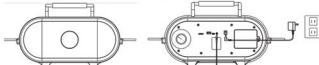

2. Press the power button located on the top of the unit.

3. When the device starts up, it will automatically be in "Bluetooth" mode. If it's your first time connecting a device, the small Bluetooth icon on the screen will flash until you've connected a device. On your phone or other Bluetooth device, scan for Bluetooth devices and connect to the "K666" device. Once connected, just start playing music!

Skip to step 8 to learn how to use the included wireless microphones.

3

Battery charge and discharge management

1. The battery should be kept in a dry place at room temperature.
2. Recommended to shutdown the device when charging.
3. To charge the speaker battery: Use the 15V 4A power adapter, the red light indicator will be turned off after fully charged. The indicator light will flash when the device is at low battery.
4. The device battery takes about 3-4 hours to be fully charged. Play time is around 5 hours.
5. To charge the wireless microphones: the microphones have charging ports located underneath. Use the USB charging cable to connect the microphone to any USB Adapter. The light will flash and show the power when the device is charging. The device battery takes about 1.5 hour to be fully charged. Play time is around 6 hours.

Product Uses & Features

- ✓ All-In-One, Versatile Sound System With Multiple Uses
- ✓ Use It As A Bluetooth Music Speaker, Karaoke System, or Portable PA System
- ✓ 2 Wireless Microphones With Remote Volume Control & Optional Reverb
- ✓ Listen To Music By Bluetooth, 3.5mm Aux In, USB Drive, or MicroSD Card
- ✓ Built-In Rechargeable Batteries Inside Speaker & Microphones
- ✓ Convenient Carrying Handle Doubles As A Phone Holder
- ✓ Powerful, Crisp Audio From 2 Speakers + 1 Dedicated Bass Speaker Inside

Quick Start Guide (continued)

5. Alternatively, to listen to music using a USB flash drive:

Make sure your music is in MP3 format and saved on your USB flash drive. Then, plug the USB flash drive into the slot marked "USB" on the back of the K666.

If your music does not automatically start playing, press the "M" (Mode) button on the top of the K666 until "USB" appears on the screen, as shown below.



To skip between audio tracks, simply press the >> and << buttons on the top of the K666.

5

Quick Start Guide (continued)

6. Alternatively, to listen to music using a MicroSD (TF) memory card:

Make sure your music is in MP3 format and saved on your MicroSD card. Then, plug in the MicroSD card into the slot marked "TF" on the back of the K666.

If your music does not automatically start playing, press the "M" (Mode) button on the top of the K666 until "sd" appears on the screen, as shown below.



To skip between audio tracks, simply press the >> and << buttons on the top of the K666.

6

Quick Start Guide (continued)

4. Alternatively, to listen to music using an aux-in (3.5mm audio) cable:

Connect your aux-in cable to your audio source (such as an MP3 player, smartphone, tablet, or computer) with the included 3.5mm audio cable. Connect the other end to the back of the K666 speaker.

Press the "M" (Mode) button on the top of the K666 until "LINE" appears on the screen, as shown below.



Then, simply start playing music from your audio source.

Technical Specifications

1. Main Speaker Unit
 - Bluetooth range: up to 10 Meters
 - 2.4GHz + 2.4GHz with A2DP support
 - Automatically connects to last connected Bluetooth device
 - Built-in two 3-inch treble speakers + one 4-inch bass speaker
 - Speaker impedance: 4Ω
 - Speaker output power: treble 15Wx2 + bass 25W
 - Audio frequency response: 35Hz ~ 20kHz
 - Power supply: 15V, 4A DC power adapter (110 ~ 240V, 50Hz / 60Hz)
 - Built-in lithium battery: 2200mAh

Quick Start Guide (continued)

8. To use the wireless microphones, simply hold down the Δ/Fn buttons on the microphones. The microphones will turn on and automatically connect to the K666 speaker.

Plug the large end of the included USB cable into your computer. Plug the small end into the port marked "PC" on the back of the K666.

Press the "M" (Mode) button on the top of the K666 until "PC" appears on the screen, as shown below.



The K666 will then be automatically installed on your computer as a speaker.

NOTE: You will need to adjust your computer's sound settings to set the "USB Audio Device" as the default playback device. Then simply start playing music on your computer.

7

TO CHARGE YOUR WIRELESS MICROPHONES: the microphones have charging ports underneath them. Use the USB charging cable (included) to connect the microphone to any USB charger (not included).

8

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.