



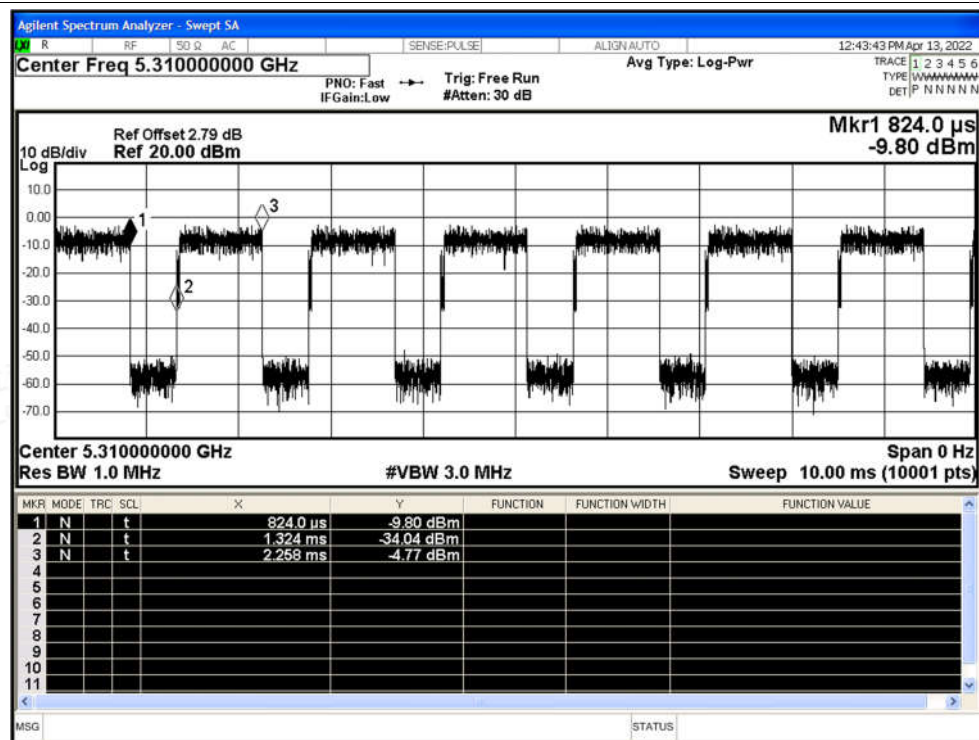

Duty Cycle NVNT ac40 5310MHz Ant0

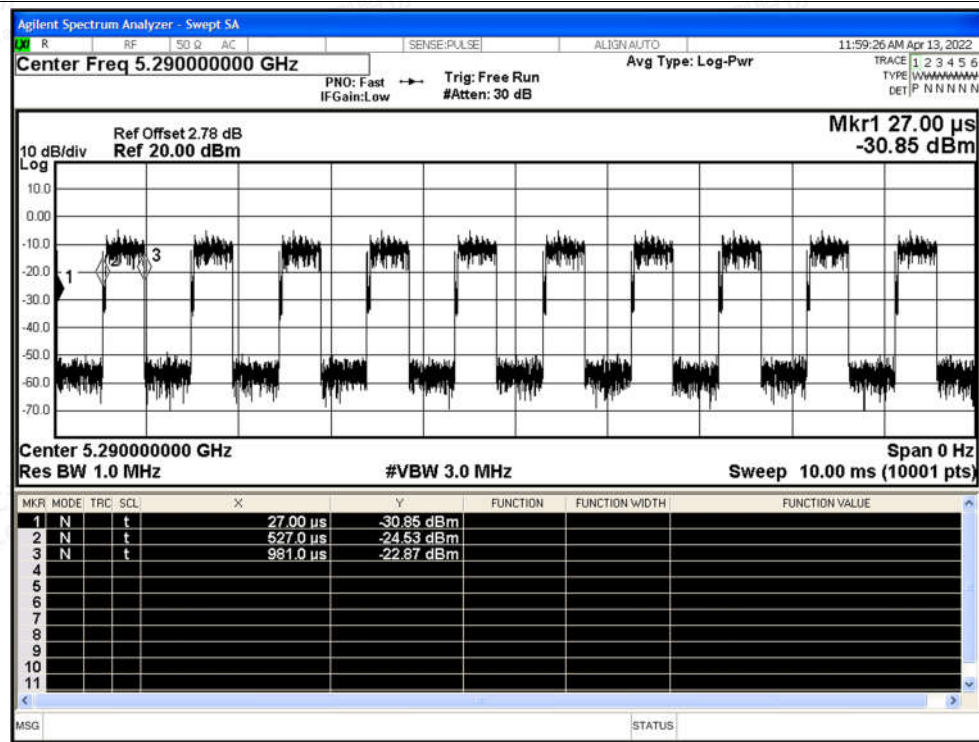

Duty Cycle NVNT ac80 5290MHz Ant0






Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5260	Ant1	80.17	0.96	0.49
NVNT	a	5300	Ant1	80.17	0.96	0.49
NVNT	a	5320	Ant1	80.17	0.96	0.49
NVNT	n20	5260	Ant1	79.04	1.02	0.53
NVNT	n20	5300	Ant1	79.08	1.02	0.53
NVNT	n20	5320	Ant1	79.04	1.02	0.53
NVNT	n40	5270	Ant1	64.97	1.87	1.08
NVNT	n40	5310	Ant1	64.61	1.9	1.1
NVNT	ac20	5260	Ant1	79.07	1.02	0.53
NVNT	ac20	5300	Ant1	79.11	1.02	0.53
NVNT	ac20	5320	Ant1	79.11	1.02	0.53
NVNT	ac40	5270	Ant1	65.13	1.86	1.07
NVNT	ac40	5310	Ant1	65.13	1.86	1.07
NVNT	ac80	5290	Ant1	47.59	3.22	2.2






Test Graphs

Duty Cycle NVNT a 5260MHz Ant1

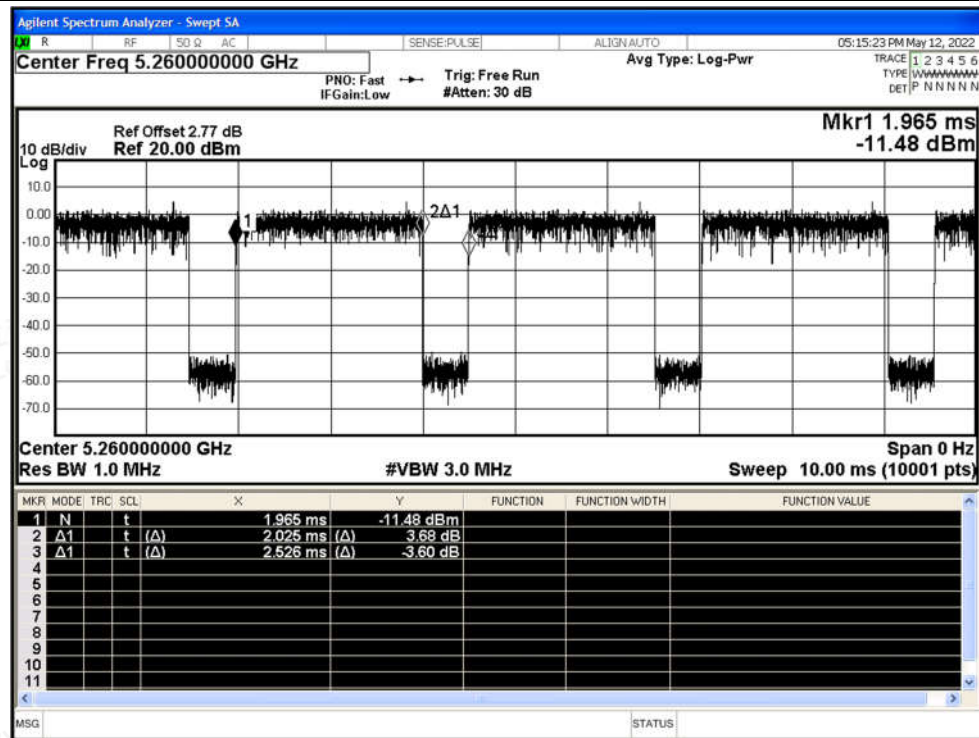


Duty Cycle NVNT a 5300MHz Ant1

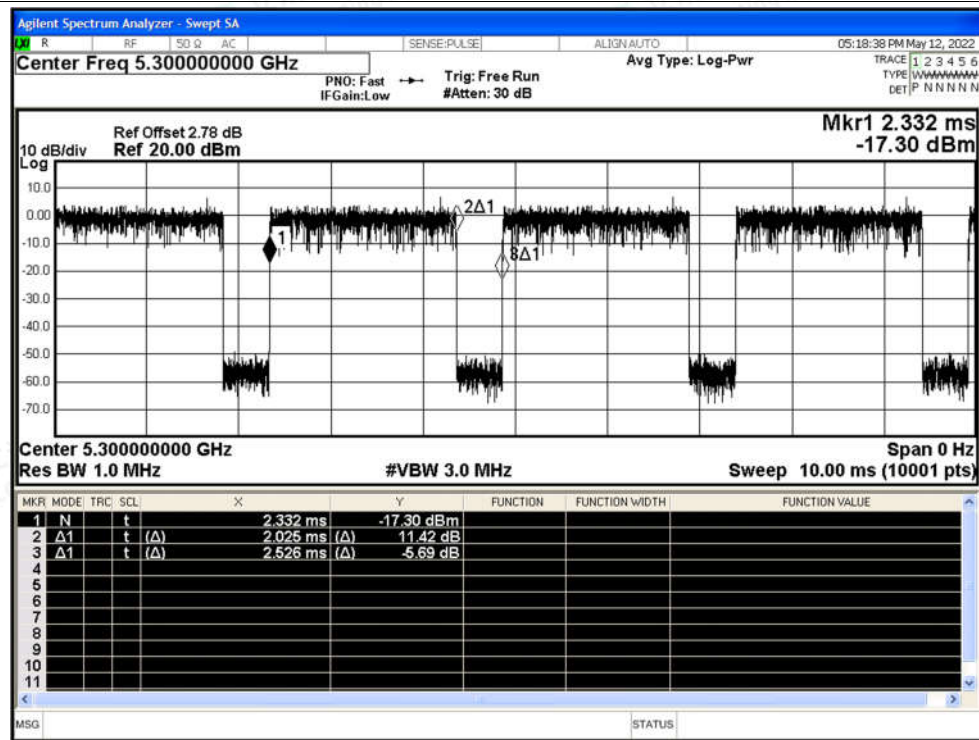




Duty Cycle NVNT a 5320MHz Ant1

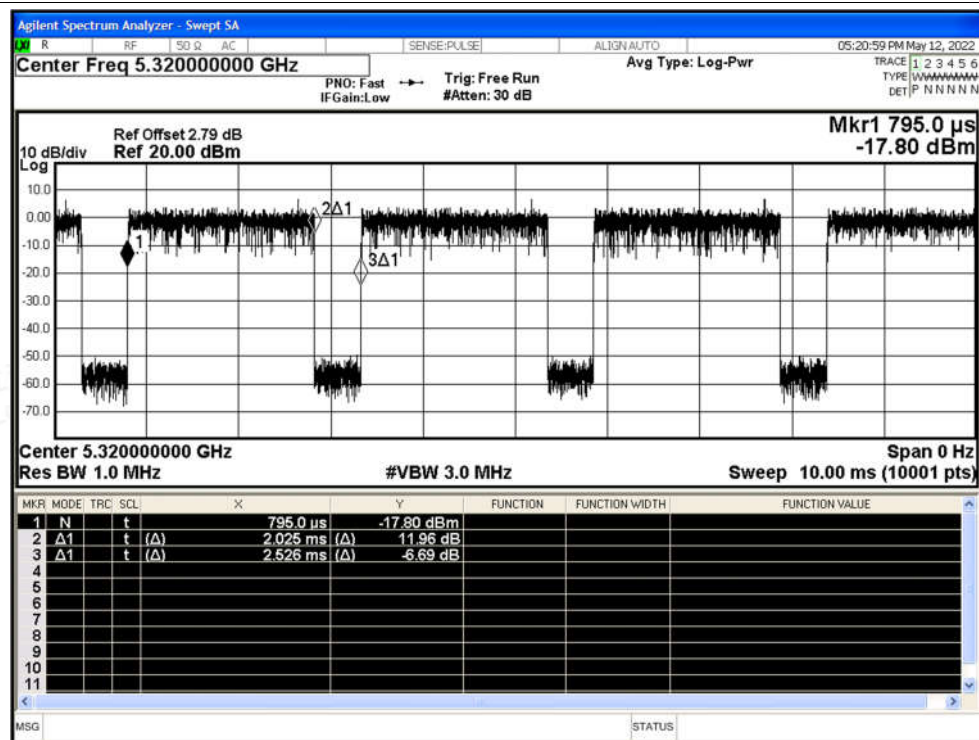


Duty Cycle NVNT n20 5260MHz Ant1

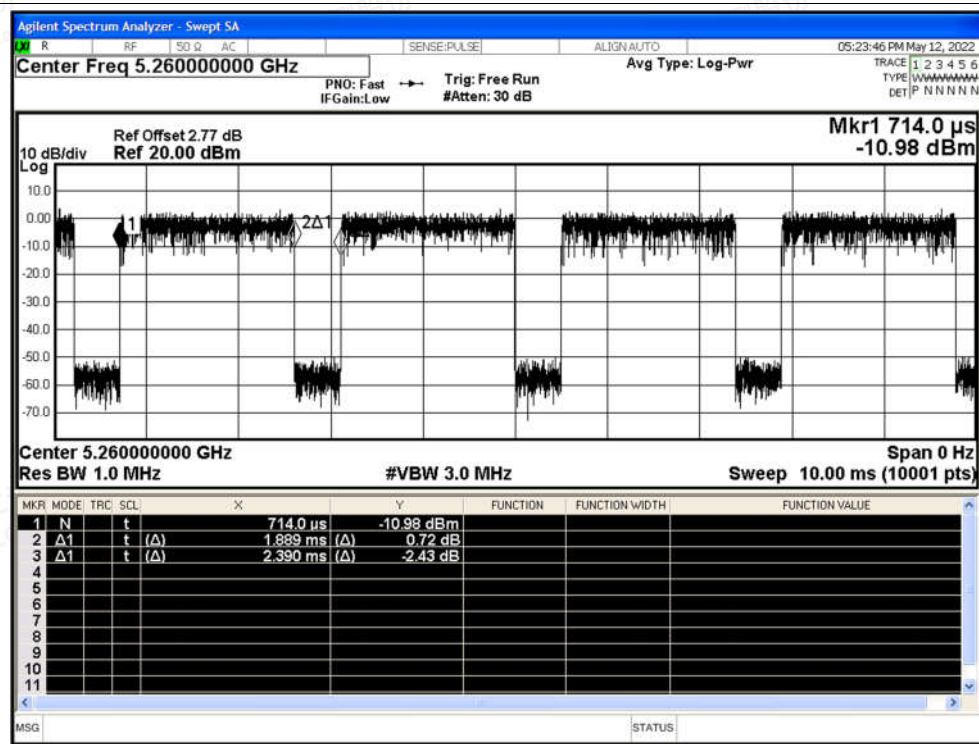




Duty Cycle NVNT n20 5300MHz Ant1

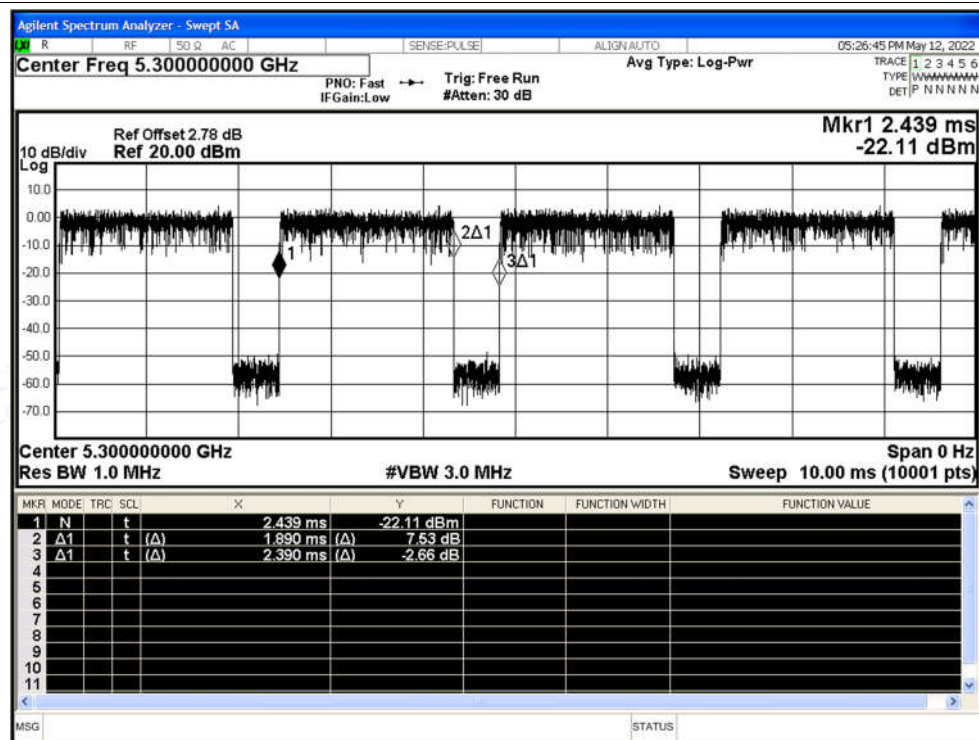


Duty Cycle NVNT n20 5320MHz Ant1

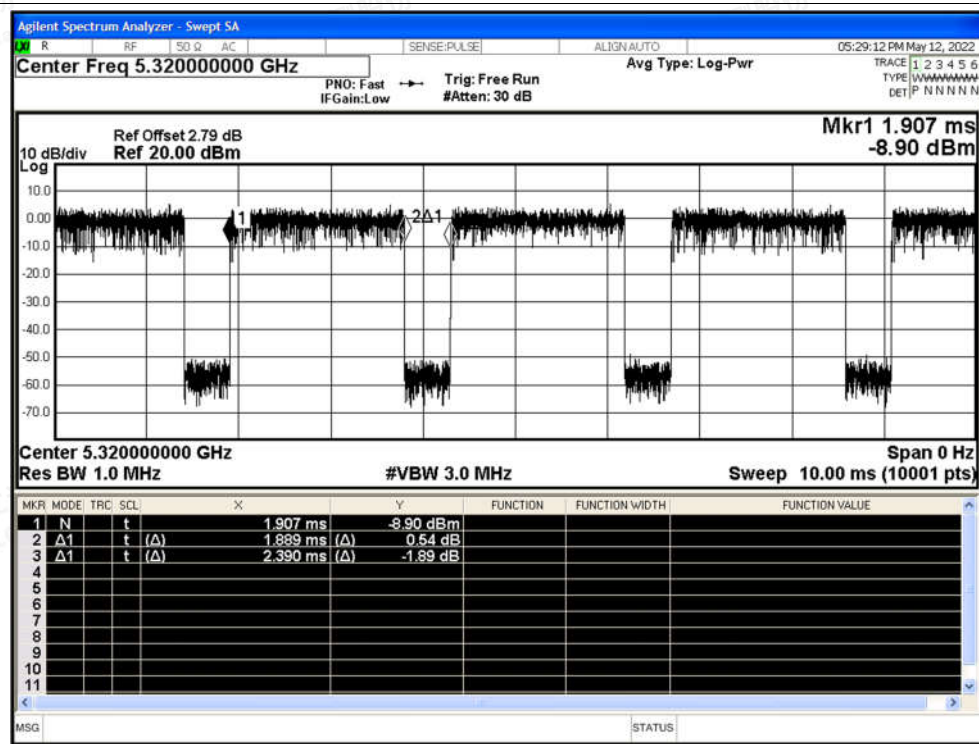




Duty Cycle NVNT n40 5270MHz Ant1

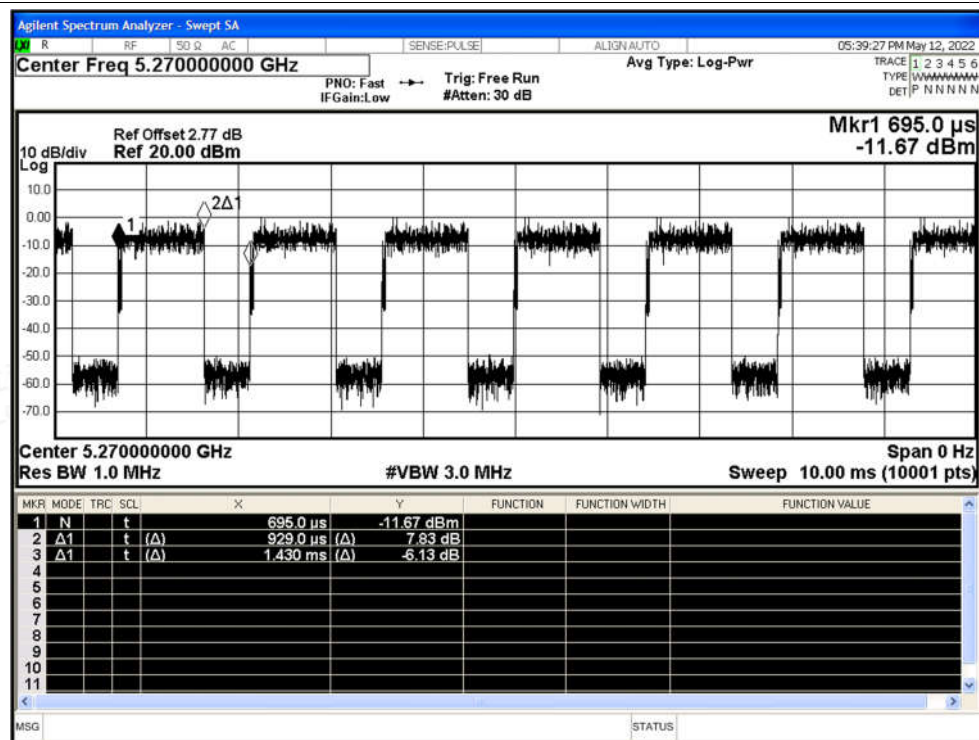


Duty Cycle NVNT n40 5310MHz Ant1

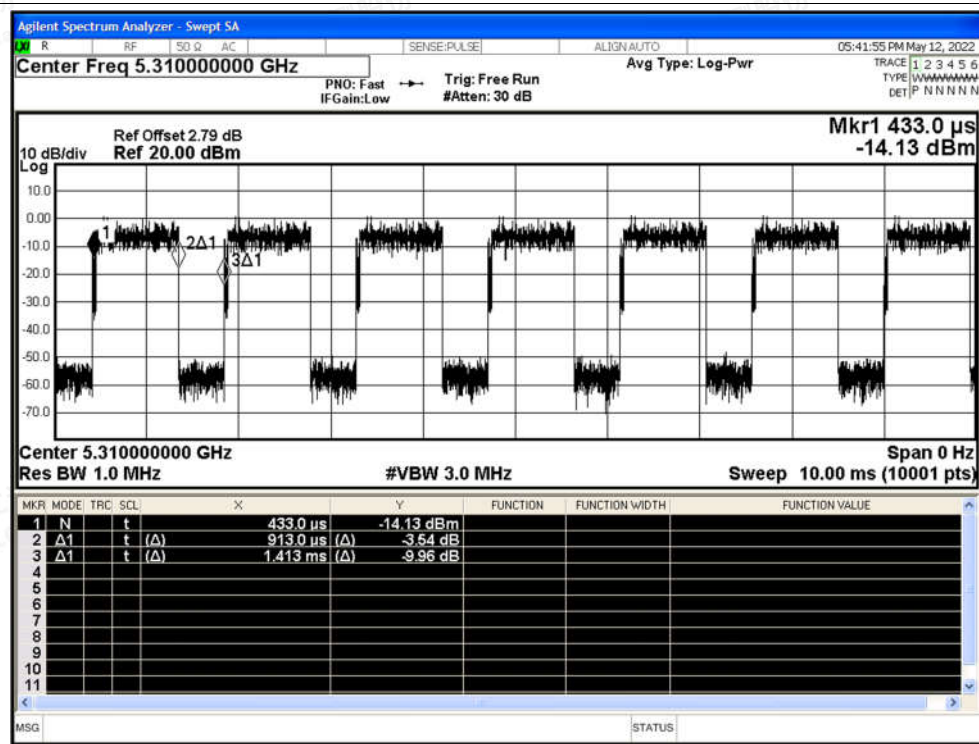




Duty Cycle NVNT ac20 5260MHz Ant1

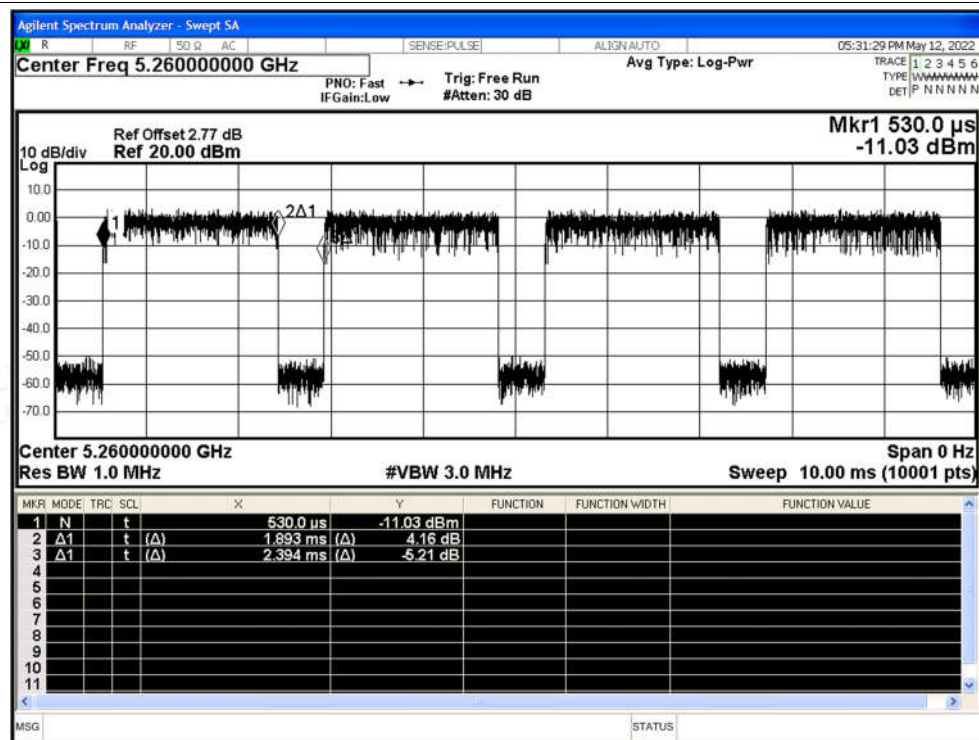


Duty Cycle NVNT ac20 5300MHz Ant1

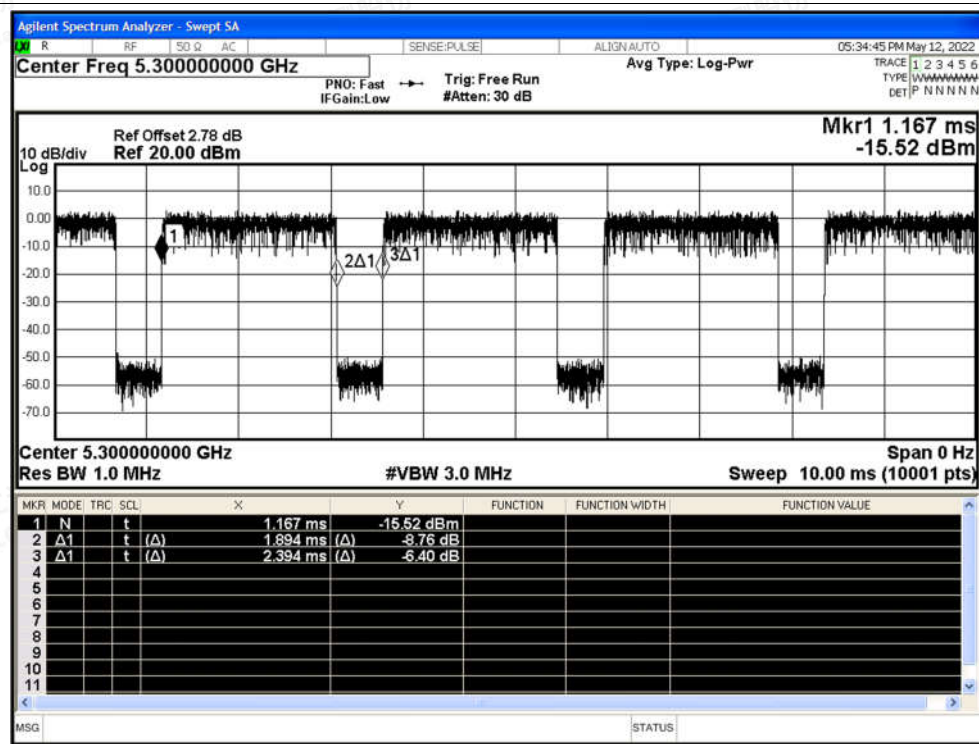




Duty Cycle NVNT ac20 5320MHz Ant1

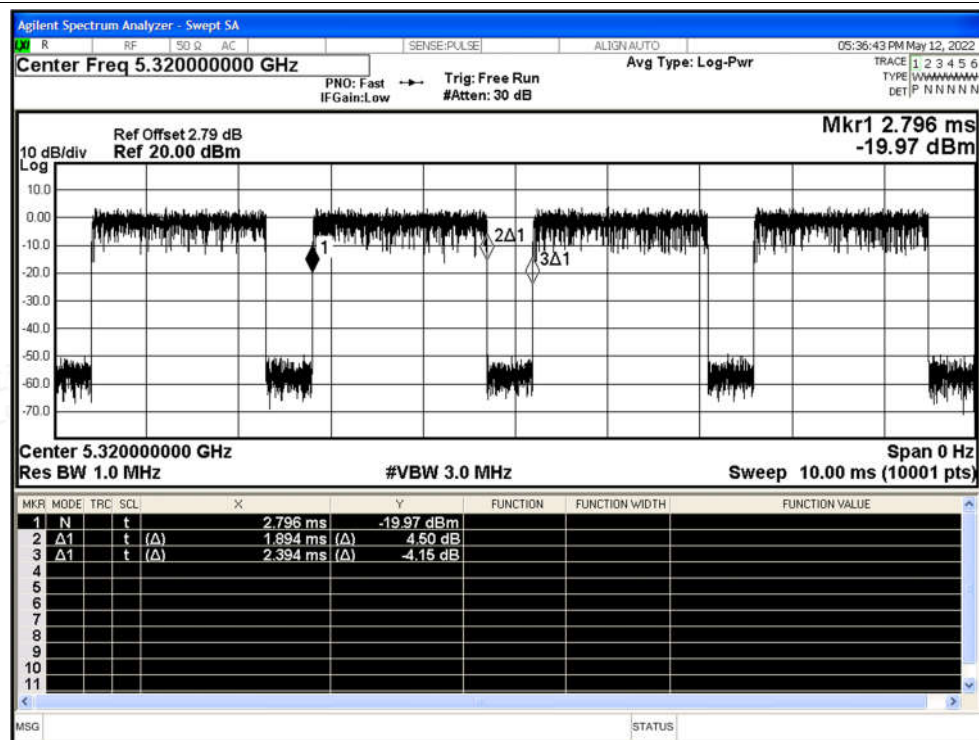


Duty Cycle NVNT ac40 5270MHz Ant1

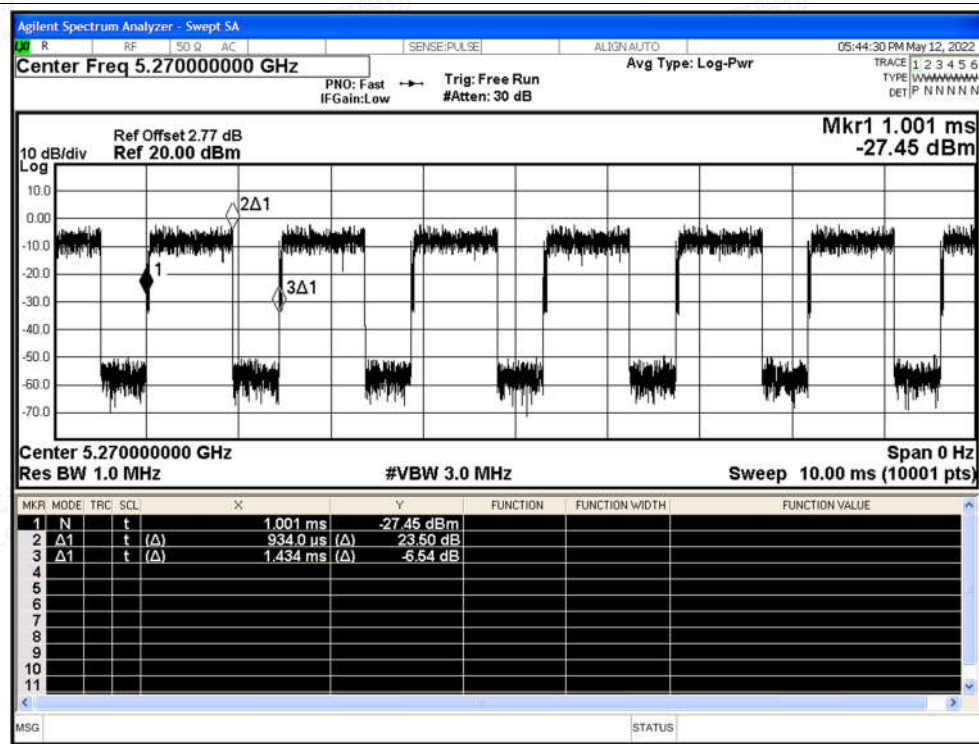



Duty Cycle NVNT ac40 5310MHz Ant1

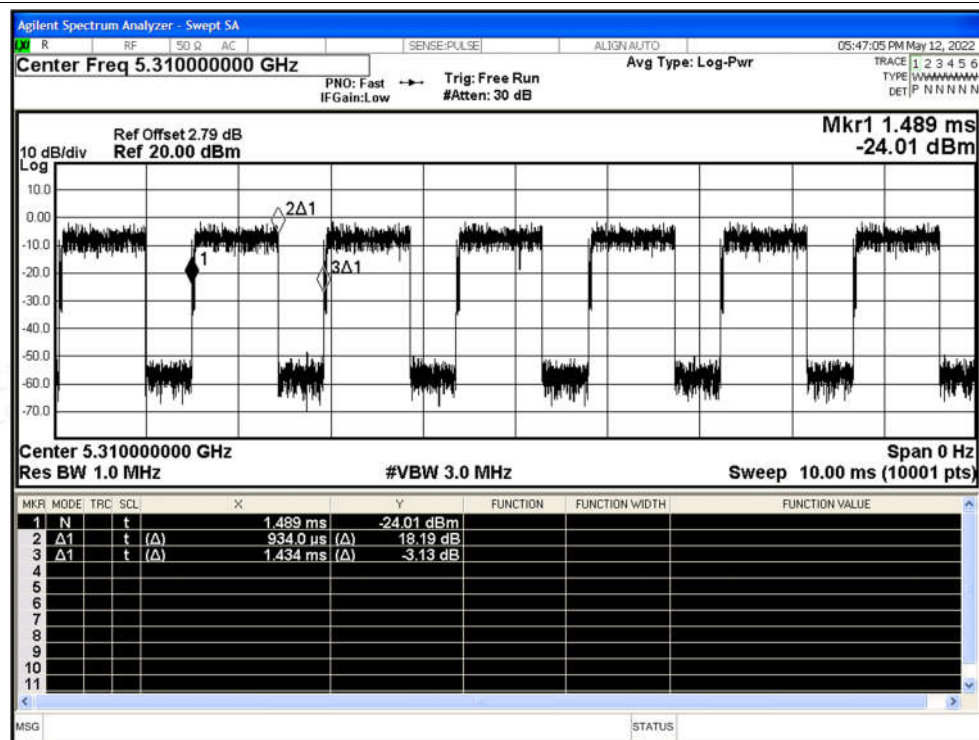

Duty Cycle NVNT ac80 5290MHz Ant1

