

ERP机型: SD3702Q-GL-SMT00030A-V1

ERP P/N:

描述: 未配对安装操作说明: SD3702Q/PGA383, STM000, REV.B, 240x92mm, 80G书纸, 双面单黑印刷, 四折页, ROHS2.0, REACH, POPs, PAHS, PROP65,

K

Die Line

Designed : Dly

Date : 2025-06-20

正面

a风琴折2折页

正面

b对折

正面

c成型尺寸 : 80x46mm


LOCKLY

WIRELESS DOOR SENSOR (PGA383)

Installation & User Manual

The Lockly Door Sensor, compatible with PGH260, PGH230 and PGH222 gateways for full functionality. It uses bidirectional RF433.92MHz and Lockly 2.0 proprietary encryption to ensure stable, encrypted communication. With simple installation anywhere and powered by a single AAA battery for extended use, it effectively monitors whether the door is fully closed to avoid risks from an ajar door. Additionally, it sends instant push notifications to your phone when the door is unlocked or locked, keeping you constantly aware of your security status.

The Door Sensor comes in two parts. Depending on your door orientation, the door sensor will be mounted in different ways.

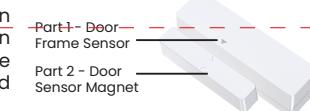

Part 1 - Door Frame Sensor
Part 2 - Door Sensor Magnet


Preparation

Before installation, ensure the indoor surface where you plan to place the Door Sensor is clean and dry. Wipe the surfaces of the door and door frame gently, and confirm they are dry. Do not install the sensor immediately.


Keep the Door Sensor away from direct sunlight, high-temperature areas, and large metal objects, as these may disrupt wireless signals. For the best performance and safety, install the sensor at the upper corners of the door, out of reach of children and pets.

When you are installing the Door Sensor, make sure the arrows on the Door Sensor Magnet is placed next to the arrow from the Door Frame Sensor.


WHEN FACING YOUR DOOR FROM THE INSIDE, DOOR HINGES ARE ON THE RIGHT SIDE

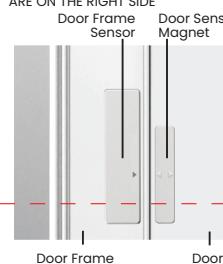

WHEN FACING YOUR DOOR FROM THE INSIDE, DOOR HINGES ARE ON THE LEFT SIDE

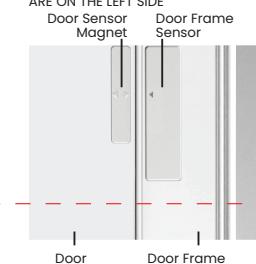


When installed on your door, the distance between the Door Sensor and the Door Frame Sensor must be less than 3/4" in order for the sensor to work.

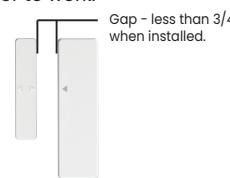

Install the battery

Open the door sensor as shown, put in 1 AAA battery, please pay attention to the positive and negative poles of the battery.

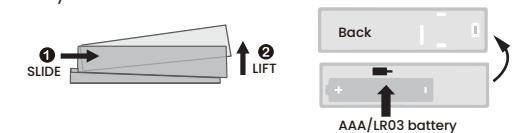


Pair the Door Sensor

1. Open the Lockly Home app and navigate to: Settings > Wi-Fi Settings > Add New Sensor > Wireless Door Sensor.

Note: Please follow the actual app menu layout for operations.

2. Install the Door Sensor battery. The blue indicator light will flash continuously for 3 minutes. Tap Continue in the app to proceed.
3. Press the sensor's setup button 3 times within 2 seconds to start pairing.
4. Success: The blue light will stay ON for 2 seconds, then turn off. Failure: The blue light will continue flashing. Retry: Press the setup button 3 times again immediately to re-pair.
5. If no action is taken within 3 minutes, pairing mode will exit automatically. Please return to the previous app step. Remove and reinstall the sensor battery, then repeat the pairing process from Step 2.

Setup Button

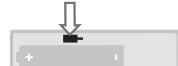

If the pairing is unsuccessful, reinstall the Door Sensor's battery and re-enter the pairing mode as described above. Mount the Door Sensor and Sensor Magnet once pairing is successful. Note: After pairing the wireless door sensor with the device, you will need to delete the door status sensor stored in the Settings before pairing the wireless door sensor with other devices again.

IMPORTANT

- Do not allow the battery to corrode or leak as this may cause permanent damage to the product.
- Make sure to insert battery on correct polarity as shown inside the battery compartments.
- Do not use rechargeable batteries.
- When battery is drained, do not dispose with normal household waste. Dispose via suitable recycling center. DO NOT BURN.

FCC Warning :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

Lockly Wireless Door Sensor complies with FCC radiation exposure limits set forth for an uncontrolled environment. It should be installed and operated with minimum distance 20cm between the radiator & your body.

IC WARNING

This device contains licence-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device. L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC Radiation Exposure Statement
This equipment meets the exemption from the routine evaluation limits in section 2.5 of RSS-102. It should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

Cet équipement est conforme à l'exemption des limites d'évaluation habituelle de la section 2.5 de la norme RSS-102. Il doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et toute partie de votre corps.

⚠ WARNING: Cancer risk from exposure to Lead. See www.P65Warnings.ca.gov.