 


Basic Operation



① Power switch/Volume ② TYPE-C interface ③ Headphone interface

1. On/Off:

Power on: To connect with power adapter, then clockwise the power switch knob, The system will be on.

Power off: To anticlockwise the power switch knob, The system will be off.

2. Volume:

Adjust the volume knob from min. to max. to set the volume of the system.

3. Headphone:

There are two headphone jacks to support the connection with 2 headphones at the same time.

4. TYPE-C Connection:

Connect with tablet or PC via Type-C jack on the panel for MIDI function production.

5. Bluetooth:

After turned on the piano system, the Bluetooth function is activated. Use a smart phone or Tablet to search the system Bluetooth device named “PIANO AUDIO *****” for pairing.

Sound list:


001	Acoustic Grand Piano	033	Acoustic Bass	065	Soprano Sax	097	Ice Rain
002	Bright Acoustic Piano	034	Fingered Bass	066	Alto Sax	098	Soundtrack
003	Electric Grand Piano	035	Picked Bass	067	Tenor Sax	099	Crystal
004	Honky-Tonk Piano	036	Fretless Bass	068	Baritone Sax	100	Atmosphere
005	Electric Piano 1	037	Slap Bass 1	069	Oboe	101	Brightness
006	Electric Piano 2	038	Slap Bass 2	070	English Horn	102	Goblin
007	Harp	039	Synth Bass 1	071	Bassoon	103	Echo Drops
008	Clavinet	040	Synth Bass 2	072	Clarinet	104	Star Theme
009	Celesta	041	Violin	073	Piccolo	105	Sitar
010	Glockenspiel	042	Viola	074	Flute	106	Banjo
011	Music Box	043	Cello	075	Recorder	107	Shamisen
012	Vibraphone	044	Contrabass	076	Pan Flute	108	Koto
013	Marimba	045	Tremolo Strings	077	Bottle Blow	109	Kalimba
014	Xylophone	046	Pizzicato Strings	078	Shakuhachi	110	Bagpipe
015	Tubular Bell	047	Harp	079	Whistle	111	Fiddle
016	Santur	048	Timpani	080	Ocarina	112	Shanai
017	Hammond Organ	049	String Ensemble	081	Square Lead	113	Tinkle Bell
018	Percussive Organ	050	Slow String Ensemble	082	Saw Lead	114	Agogo
019	Rock Organ	051	Synth Strings 1	083	Synth Calliope	115	Steel Drums
020	Church Organ 1	052	Synth Strings 2	084	Chiffer Lead	116	Woodblock
021	Reed Organ	053	Choir Aahs	085	Charang	117	Taiko
022	French Accordion	054	Voice Oohs	086	Solo Synth Vox	118	Melodic Tom 1
023	Harmonica	055	Synth Voice	087	5th Saw Wave	119	Synth Drum
024	Bandoneon	056	Orchestra Hit	088	Bass & Lead	120	Reverse Cymbal
025	Nylon-String Guitar	057	Trumpet	089	Fantasia Pad	121	Guitar Fret Noise
026	Steel-String Guitar	058	Trombone	090	Warm Pad	122	Breath Noise
027	Jazz Guitar	059	Tuba	091	Polysynth Pad	123	Seashore
028	Clean Electric Guitar	060	Muted Trumpet	092	Space Voice Pad	124	Bird
029	Muted Electric Guitar	061	French Horns	093	Bowed Glass Pad	125	Helicopter
030	Overdriven Guitar	062	Brass Section 1	094	Metal Pad	126	Telephone 1
031	Distortion Guitar	063	Synth Brass 1	095	Halo Pad	127	Applause
032	Guitar Harmonics	064	Synth Brass 2	096	Sweep Pad	128	Gun Shot

Guangzhou Pearl River Piano Group Co., Ltd.
Guangzhou Pearl River Kayserburg Piano Co., Ltd.

38, Xiang Shan Avenue, Yong Ning Road, Zengcheng, Guangzhou, China
Sales line: 020-81501970
Service line: 400 8033 003
Website: <http://www.pearlriverpiano.com>

QU2
Intelligent Piano Silent System

 Display

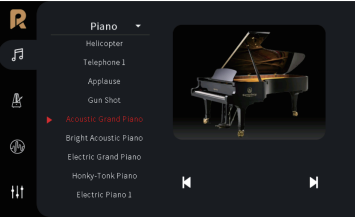


Switch the language between English/Chinese by touch the **R** logo.

1. Sound:

The instrument has 128 sound sample, select the sound by sliding the screen.

 Click **⏮**、**⏭** to choose the previous one and next one.

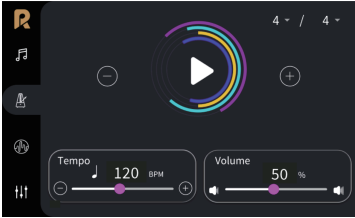

2. Metronome:

Click Start to turn on the metronome function, Click it again to turn off the metronome. Click +/- or moving the slider to set the tempo and volume.

● Beat

 
The system includes 16 types of beats from 1-16. Press **▼** to choose the one you want.

● Tempo

Adjust the tempo by moving the slider, the tempo setting is from 0-256 tempo per minute.

● Volume

Adjust the volume by moving the slider from 0-100.

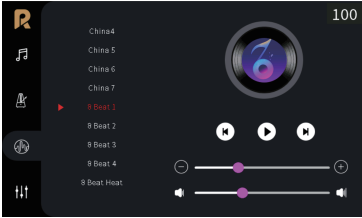

3. Accompaniment:

 
QU2 silent system has built in 120 rhythms.

There are three ways to select the accompaniment:

- (1)Slide the screen to select the accompaniment.
- (2)By moving the slider.
- (3)By pressing the +/-.

● Volume

To set the accompaniment volume by moving the volume slider.

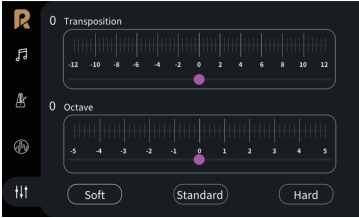

4. Transpose function :

This function allows notes to be moved up or down by 12 semitones within an octave range.

● Transpose

Sliding the screen left and right to change, transpose range value: -12 to +12.

● Octave

Sliding left and right to change. range value: -5 to +5.

● Velocity curve

QU2 silent system built in three types of velocity curve : softly ; medium ; hard, please click to select.

Function Introduction

To make acoustic piano to achieve Silent+Software interactive+Digital Piano intelligent musical instrument for entertainment.

Silent system

Bringing the latest silent practice mode to allow you to have a more focused learning experience to enjoy the music in an empty room. Dual channel sound source output to create and share a wonderful music.

Software interactive

Access to rich piano intelligent learning and practice mode by Bluetooth connection with APP to get the latest intelligent experience.

Digital Piano

Bringing high quality digital learning function, like Sound selection, Metronome,Transpose, Record etc.

Intelligent interactive connection

To get massive piano educational resources by connecting app.

Warranty

If there is quality problem happened in normal use or non-human damages problem happened within the warranty period of two years from the date of purchase.

To request warranty service, please contact with the Pearl River Piano dealer in your region and provide the product warranty card for aftersales service.

Non-warranty scope

- 1.Lack of the warranty card or beyond the warranty period.
- 2.Damage that is caused by uncontrollable events like fire, flood, or lightning strikes.
- 3.Failure to use, maintain and keep the product according to the requirements of the manual and cause damage;
- 4.Damage caused by disassembly and repair by unauthorized service personnel.
- 5.Normal bleaching, wear and consumption of the product during use.

In the above cases, you should seek solutions from relevant responsible parties or opt for paid services. The warranty period is two years effective only after the warranty card is stamped by the dealer. Any alterations on the warranty card is considered invalid.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.