

User Manual

Dear Customer,

Thank you for choosing our cell phone. This mobile phone incorporates the latest world advanced functions, enabling simple and convenient operation, satisfying your special requirements.

In addition to common multimedia functions this phone also provides you with a variety of value added functions like WIFI, Bluetooth, hi-speed internet browsing. With this manual, you can acquire full understanding of the usage of this phone.

Protect our environment! We strive to produce products in compliance with global environmental standards.

Please consult your local authorities for proper disposal.

Note: User's Manual is used to guide the user about the functionality of the phone. This does not seem any certificate of technology. Some functions may vary due to modifications and up gradations of software or due to print mistakes.

Content

Safety precautions.....	6
About the phone.....	10
Status icons.....	11
Keys functions.....	12
Getting started.....	12
First call.....	12
Installing SIM cards.....	12
Installing memory card.....	13
Battery and charging.....	14
Switching on/off.....	20
Using hands free kit.....	20
Keypad lock.....	20
Language and input methods.....	21
Calling.....	21
Making Calls.....	22
Receiving Calls.....	23
Rejecting Calls.....	24

Emergency call.....	24
Application menu.....	25
5.1 Browser.....	25
5.2 Calculator.....	28
5.3 Calendar.....	29
5.4 Camera.....	31
5.5 Clock.....	34
5.6 Downloads.....	37
5.7 Email.....	38
5.8 File manager.....	39
5.9 FM radio.....	41
5.10 Gallery.....	42
5.11 Messaging.....	43
5.12 Music.....	45
5.13 People.....	47
5.14 Phone.....	50
5.15 Search.....	53
5.16 Settings.....	54
5.17 SIM Toolkit.....	57

5.18 Sound recorder.....	58
5.19 Video player.....	59
5.20 Wireless input device.....	60
Common problems and Solutions.....	61

Safety precautions



Please read and follow these concise rules carefully to prevent danger or breaking laws.



Driving safety

Do not use mobile phone when driving. Use the hands-free accessories if you have to use the phone. Put the mobile phone in the holder, instead of the passenger seat or any place that the phone will fall off.



Power off in aircraft

The interference of mobile phone will affect the flight safety and it is illegal to use mobile phone in aircraft. Please switch off you mobile phone before boarding.



Power off in the operation area of explosion

Please follow the regulations or rules and switch off your mobile phone in or near operation area of explosion.



Power off near dangerous articles

Please turn off your mobile phone at gas station or places near fuels and chemicals.



In hospitals

Please follow the regulations or rules of hospitals when you use mobile phone there. Switch the device off near medical equipment. Any wireless device, including mobile phone, will interfere with the medical devices which are not fully protected. Other electronic devices also may be affected. If you have any question, please consult your doctor or the manufacturer.



Interference

Any mobile phone might be interfered with and its performance will be affected thereby.



Professional service

Only qualified maintenance personnel can install or maintain this mobile phone. It may cause serious danger and also violates warranty clauses if you install or maintain the mobile phone by yourself.



Accessories and battery

Use manufacturer approved accessories and batteries only.



Rational application

Use the mobile phone in normal way. Do not put your mobile phone in the environment with too high temperature (higher than 60°C), for example, put it under the window which is irradiated by sunshine directly. Please use wet or antistatic cloth to clean your phone. Do not use the cloth with static to wipe the phone.

sos

Emergency call

Make sure that the mobile phone is switched on and in service area, enter the emergency number (e.g. 110) and press the Call key to call the number. Report your position and explain your condition briefly. Do not end the call without permission.

Note: Like other mobile phones, the characteristics of this phone may be not supported because of the network coverage or wireless signals transmission. Certain networks even don't support emergency call. Therefore, do not depend on mobile phone only for very important communication (e.g. medical emergency). Please consult your local network operator.

About the phone

Status icons

- Icons might be displayed on screen.

Icons	Description
	Time display
	Alarm
	Battery
	Signal
	WIFI
	Bluetooth
	Message
	Downloading
	Downloaded
	Call
	Missed call

Keys functions

Keys	Functions
Screen home key	Return to the main screen interface;
Side keys	Adjust the volume levels.
Power key	Press this key to lock screen; Long press this key to select silent mode/airplane mode/switch off/reboot. Long press this key to power on the phone when it is off. Long press this key more than 10 seconds to power off the phone
Menu key	Open menus in different interface.
Back key	Press this key to go back to last interface.

Getting started

First call

- 1> Insert the SIM cards (switch off the phone at first). For detailed installation guide, please refer to “Installing the SIM card” .
- 2> Charge the battery. Refer to “Battery and charging” .
- 3> Press and hold the Power key to switch on the mobile phone.
- 4> Enter area code and telephone number in the dial interface and then press the call key to dial out by SIM1 or SIM2 .

Note: Before using the mobile phone, please insert valid SIM cards and charge the battery.

Installing SIM cards

When you register mobile phone, you can apply for two different telephone numbers and two SIM cards (Subscriber Identity Module). With the two cards, you can use the functions of the mobile phone. The SIM card saves the parameters required by the communication, and

personal information, including PIN code (personal identity number), contacts, short messages and other system services.

Warning: Do not bend or scratch the SIM card, or contact static, dust or water; if the SIM card is lost, please contact your network operator. Please switch off the mobile phone before installing the SIM card. The SIM card is inserted into the rear side of the mobile phone.

Note: The SD card is tiny. Please keep it away from children to avoid swallowed. If the SIM card is invalid or damaged, the phone displays “Insert SIM card” . Switch off the phone and take out the SIM card, and then re-insert it into the slot properly. If the SIM card is damaged, please contact your network operator. If the SIM card is locked, please contact your network operator.

Installing memory card

Because the mobile space is limited, you may need to install a memory card (SD card).

To install the SD card: Aim the SD card card slot, forward to push the SD card into the card slot to install the battery after the boot can be read to the SD card and use.

Take out the SD card: sliding backwards can take out the SD card.

Note: SD card is tiny. Please keep it away from children. Please select qualified SD cards, such as SANDISK, V-DATA, and Transcend. Please match with the mobile phone when you purchase the card.

Battery and charging

Installing the battery

Only use qualified battery and accessories. When the battery isn't used, put it in the protective case.

Note: Please operate according to the instructions to avoid damaging the battery contact.

Charging the battery

The new battery will reach its optimized performance after complete charging and discharging for several times.

Please charge in time when the battery voltage is low. Over discharging will damage the battery. Disconnect the charger from the AC power supply and the mobile phone after charging. While charging, the battery status icon flashes from right to left, and stops flashing after charging. It is normal that the battery becomes warm in the charging process.

Battery status

Your mobile phone can monitor and display the battery status.

1. You can check the battery status from the icon in the upper right corner of the screen.
2. If the electricity is insufficient, the “Low Battery” prompt shows up. The mobile phone sends warning tone if the “System alert” in Profiles is activated.
3. During charging, the icon of battery status blinks until the charging completes.

Note: The actual standby time and call time depend on the operation, local network, and settings of the SIM card and mobile phone.

Using battery

The performance of the battery is affected by various factors, including wireless network settings, signal intensity, environment temperature, the function or settings that you select, accessories and the mode of voice, data or other applications that you select.

To keep the battery in optimum performance, please follow the rules below:

- The charging of new battery or batteries which haven't been used for long time may be longer;
- Keep the battery in room temperature when it is being charged;
- It is normal that the charging time becomes longer after long time using. If the call time becomes shorter and charging time becomes longer after normal charging, you need to change a qualified battery. Unqualified battery may damage your phone and cause danger.
- If the battery is left unused for too long time or the battery voltage is too low, it takes certain period of

time to display the charging interface normally when the charger is connected.

Note: To protect your safety and the environment, do not dispose the battery randomly.

Warning: The short circuit of battery may cause explosion, fire or body hurt.

▲ Precautions of using battery

1. Switch off the phone before removing the battery.
2. Use the battery carefully. It will cause short circuit to connect the anode (+) and cathode (-) of the battery with metal objects (coin, clip, etc.), and damage the battery and metal objects. When the battery is removed and put in the bag, do not contact the anode and cathode of the battery with metal objects (e.g. keys).
3. Do not put the battery in fire, or use in any place with high temperature.
4. Do not disassemble or refit the battery.
5. Do not put the battery in the place with strong mechanical impact or break through with hard object.

6. Store the battery in cool and dry place, and avoid high temperature ($> 60^{\circ}\text{C}$) and direct sunlight.
7. Stop using if there is any particular smell or overheating.
8. Stop using the battery if there is any crack, distortion or electrolyte leakage.
9. If the electrolyte stains the skin or clothes, please wash with soap and clean water immediately; the electrolyte enters the eyes, wash with clean water immediately and go to see the doctor.
10. Do not use the battery in low temperature, in which the battery can't get the maximum standby/call time.
11. Do not wash the battery with water or organic solvent, or put it in water.
12. Fully charge the battery if it won't be used for a long time.
13. You are recommended to return wasted batteries to the manufacturer of mobile phone or put them in the specified public recovery area of wasted batteries. Do not put them together with other garbage or dispose casually.

▲ Using 2-in-1 charger (charger + data cable)

The 2-in-1 charger may charge the battery through the mobile phone.

1. Connect the data cable and charger
2. Connect the data cable of the 2-in-1 charger to the I/O slot of the mobile phone.
3. Connect the charger plug of the 2-in-1 charger to the appropriate power outlet.
4. During charging, the icon of battery status blinks until the charging completes.
5. After charging, the battery icon stops flashing, and you can pull out the 2-in-1 charger.

Note: If the battery voltage is too low and can't turn on the mobile phone, the charging icon may appear on the screen after several minutes. The mobile phone may be turned on or off during charging.

Warning: Make sure that the local voltage and power match the rated voltage and power of the 2-in-1 charger.

Switching on/off

1. Press and hold the Power key to switch on the mobile phone. The screen shows the power on video.
2. Access to main screen interface.
3. Press and hold the Power key to select switching off the mobile phone.

Using hands free kit

With the hands free kit, you can make or answer calls without holding the mobile phone. When you insert the hands free kit into the earphone port, the hands free kit can be used as the handset and the microphone of the mobile phone.

Keypad lock

When the keypad is locked, the mobile phone will be locked automatically if there is no operation in certain period of time. To unlock: Press the Power key

Note: When the keypad is locked, it will be invalid. If there is new call, you can answer as usual, and the mobile phone will resume the locked status after the call

Language and input methods

The mobile phone provides many languages such as English, French, Arabic and Hindi. And the phone provides Android keyboard input methods.

Calling

Making Calls

Call

- Enter area code and phone number and press call key to dial out by SIM1/SIM2.
- Use the clear key to delete if there is wrong input.
Long press clear key to clear all characters.

Note: Obstacles give lots of effects on calling quality; moving around in a small range will improve signal strength effectively.

Making an International Call

Press * key for twice and sign “+” will come out. Then enter country code, area code and phone number (without a zero in front of mobile phone number) in the dial interface. Then press call key to dial out.

Dialing extension

Some extension numbers of fixed line couldn't be dialed directly. You need to dial telephone exchange first and then dial the extension number. Type in a P symbol

between telephone exchange number and extension number, this phone will dial the extension number automatically. Follow below method to make a symbol P: short press * key for three times. Then it will display a P symbol on screen.

Making a call from the phonebook

Open the phonebook list, scroll to search the desired number, press call key to dial out by SIM1/SIM2.

Latest numbers redial

Enter call logs and press the up/down key to reach (or click) the desired number or name and press call key to dial out by SIM1/SIM2.

Receiving Calls

To receive an incoming call, you can slide the slider to choose "answer" . To increase or decrease the volume in the process of calling, press the up or down side key, during a call to choose mute, small keyboard, H-free , add

Calls, Hold, contacts need to press the main button, and then click the icon to enter.

Rejecting Calls

To reject an incoming call, you can slide the slider to choose “reject” .

Emergency call

You can always make emergency call when you are in the coverage area of the network (you can know by checking the indicating stripe of network signal intensity on the upper left corner of the screen). If your network operator doesn't provide roaming service in your area, the characters of “EMERGENCY CALLS ONLY” will appear on the screen and you could only make emergency call. If you are located in a service area of the network, emergency calls can also be made without a SIM card.

Application menu

 
 
5.1 Browser

This phone supports wireless LAN (WIFI), WAP services, and SIM card network. You should make sure to apply for SIM card network successful before using the network services.

- Refresh: Refresh current website.
- Backward: Back to the website you have visited.
- Forward: Forward to the website you have visited.
- Stop: Stop open the website.
- Home: Go to home page.
- Save to bookmarks: Open the bookmark list; select a bookmark to browse, create, edit, set the home page or delete the bookmarks.
- Close: You can close and choose minimize or quit.
- Save for offline reading: Save website for offline reading.
- Share page: Share page by Bluetooth, email, Gmail and so on.

- Find on page: Find page by enter website link.
- Request desktop site: Request desktop site instead download mobile version.
- Bookmarks/History: the record which you have visited before.
- Settings: Settings for Internet browsing. You can set general, privacy& security, accessibility, advanced, bandwidth management and labs.


Note: GPRS service requires network support, must to be open network service and in a GPRS network coverage area, in order to use GPRS services.

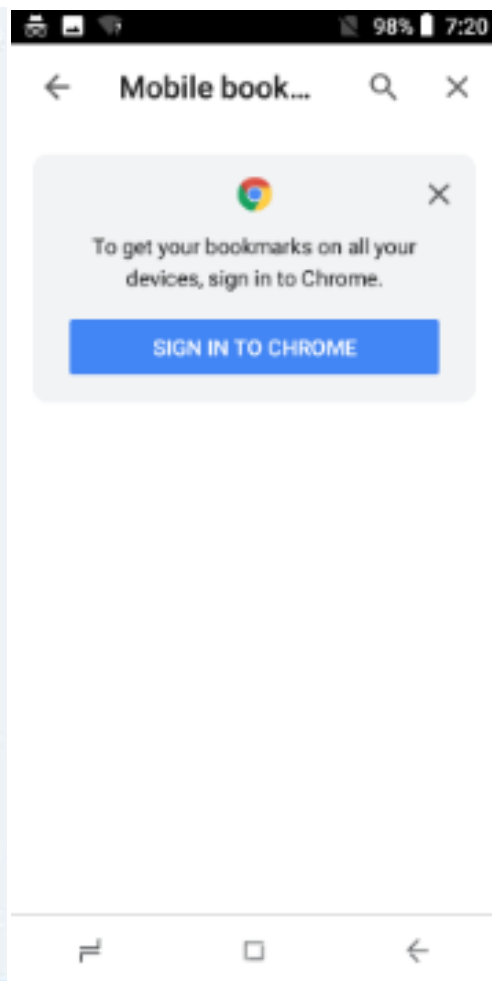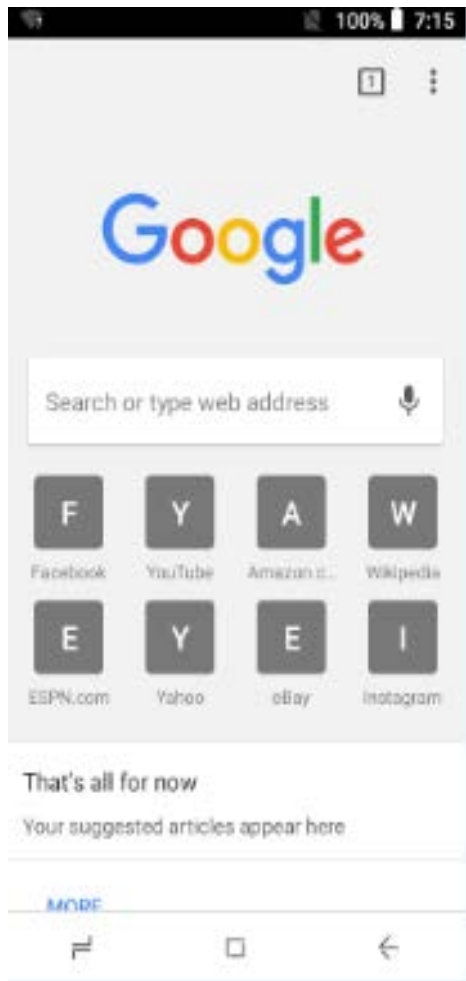

5.2 Calculator

You could select the number and symbol in the screen as request. Press number keys 0-9 to enter the figures you need to calculate and press the “.” key to enter radix point. You can also enter operators such as +, -, ×, ÷; Press “=” to get results.

 
Note: This calculator is only for some simple calculate.

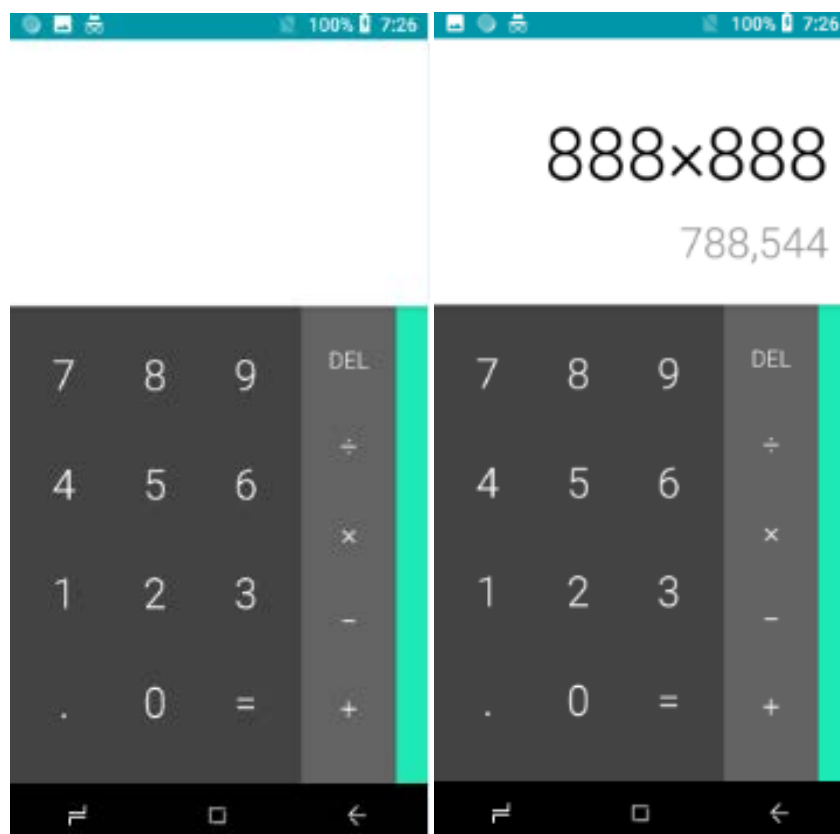

5.3 Calendar


You could check detailed date information here. You can check previous or future dates too. You can add and view calendar of past and future task.

 
- **New Event:** Touch this menu, enter the event information, and then click "DONE". You can add event with specific day and time.
- **Refresh:** Refresh the calendar.
- **Search:** You can search event with this menu.
- **Calendars to display:** Select PC Sync to open/close.
- **Settings:** You can set calendar view setting, reminder settings; you can view calendar version in about calendar.

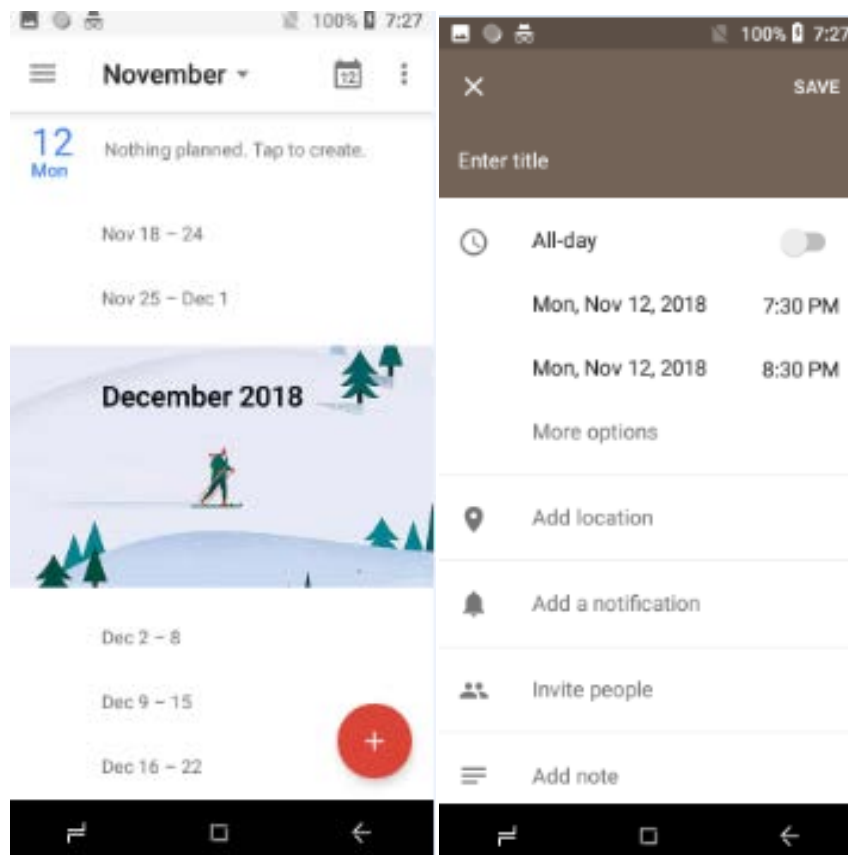

5.4 Camera

  Using the display as a viewfinder, compose your picture by aiming the lens at the object. To take the picture, touch the Camera button. Touch the settings button on window and switch scene mode, color effect, white balance and flash mode. You can also set camera settings in this menu such as store location, exposure, self timer, picture size, anti-flicker. If you want to take picture of yourself, you can switch to front camera. Touch right lower button to switch camcorder, multi angle view, and panorama and auto scene detection. Press image icon and you can choose normal, auto scene detect, face beauty or smile shot. After taking a picture, touch Image Viewer to view the picture. While viewing the picture, you can share this picture by Messaging, Bluetooth, Email or Wechat as your need. You can touch the picture symbol to enter image interface.

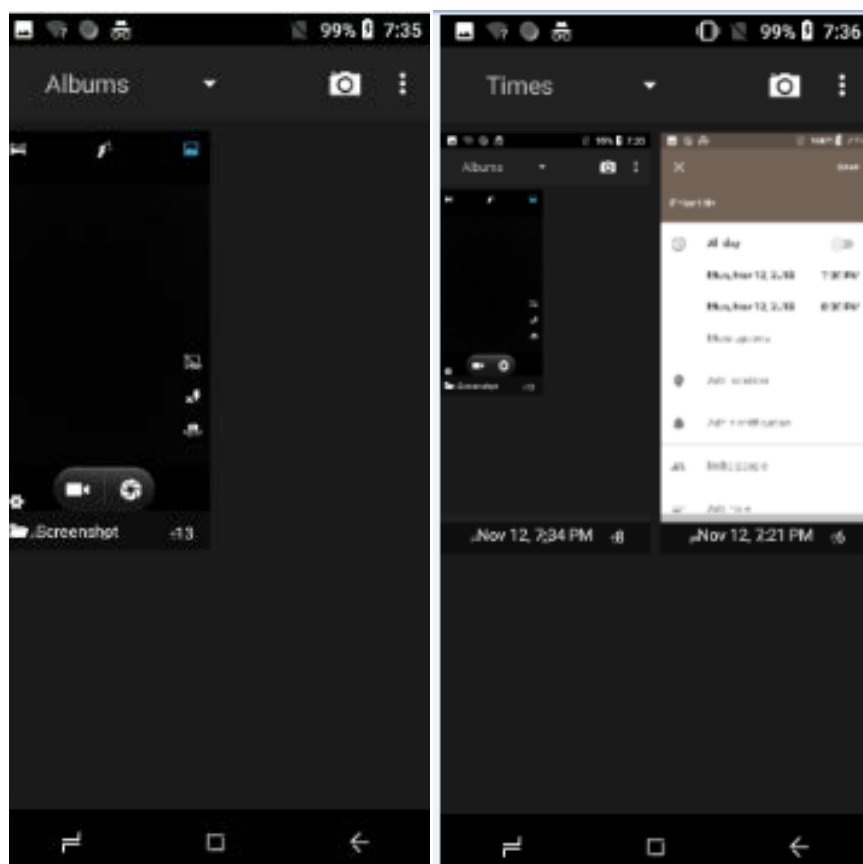


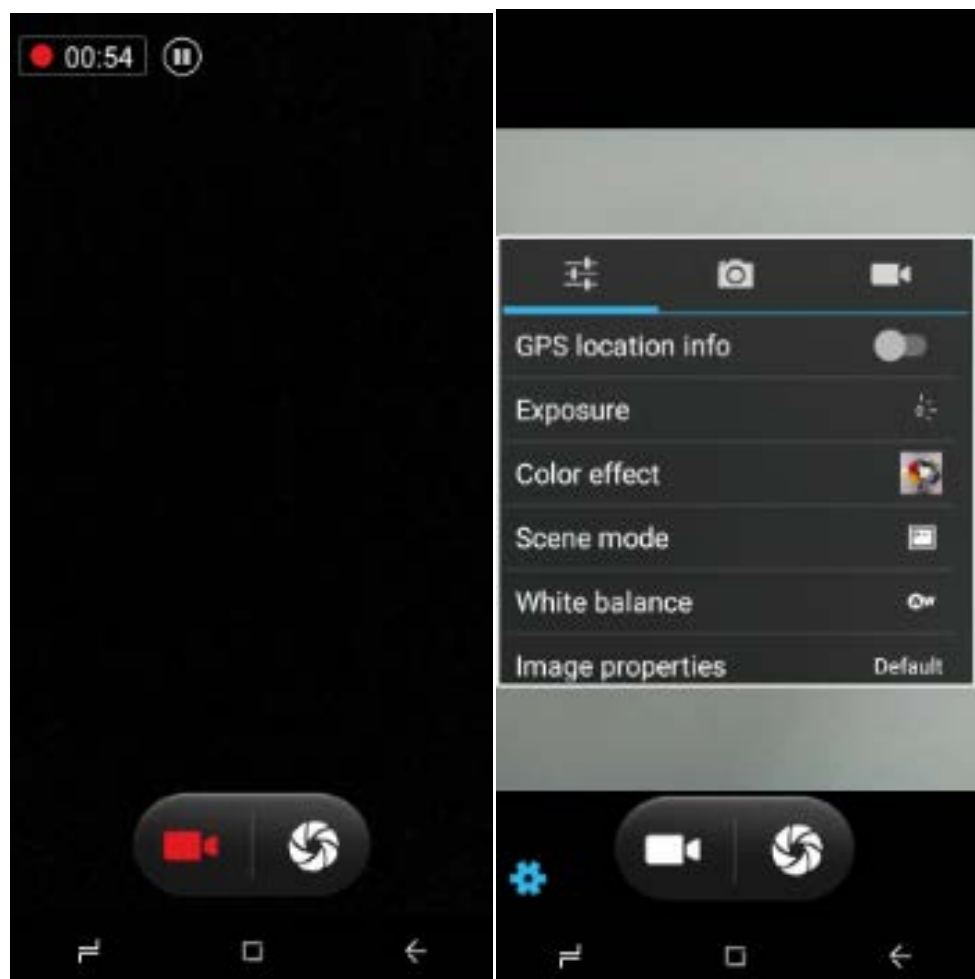


5.5 Clock

When you enter clock, you can view clock interface. You can touch “set alarm” symbol to enter alarm interface. The time format of alarm clock is same to the clock. When the mobile phone is turned off, the alarm clock is still valid only if the battery voltage isn't low. The mobile phone allows add several alarm clocks and the default option is off. You can customize the alarm time and date for every alarm clock separately. When the alarm time arrives, the mobile phone rings and displays current time and date on the screen. Press “Stop” to stop the alarm; press

  
“Snooze”, the alarm stops and rings again as your setting minutes. If the mobile phone is still power off till the alarm time, the phone switches on and alarms automatically. If you press “Stop”, the phone asks you whether switch on the mobile phone. Press “No” to switch off, or press “Yes” to switch on.

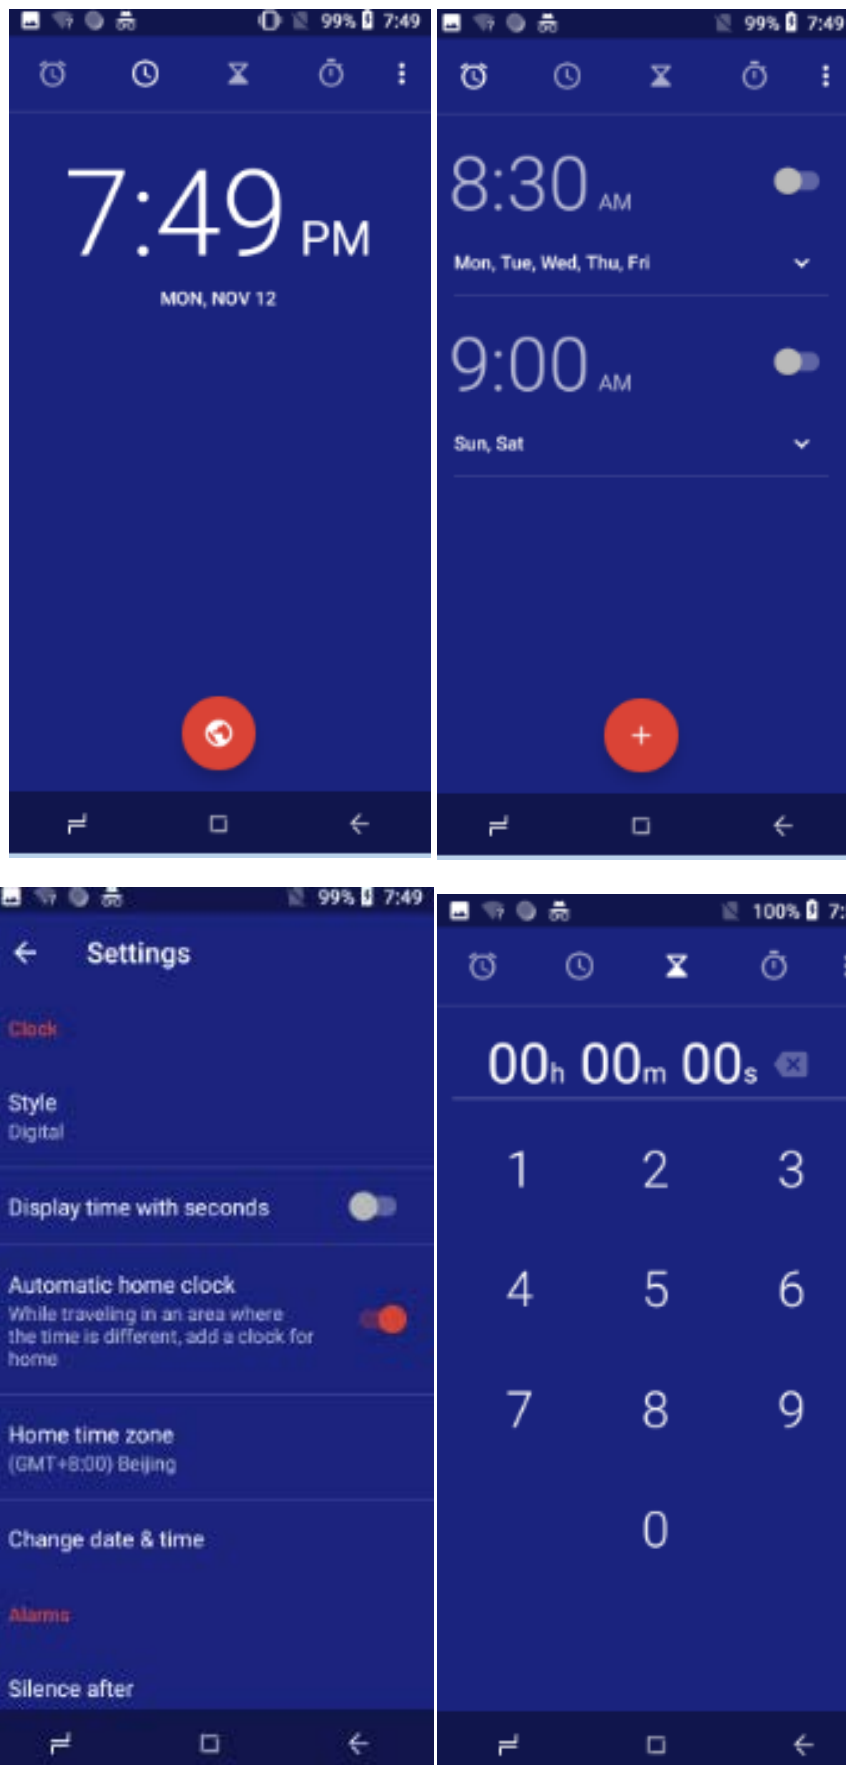

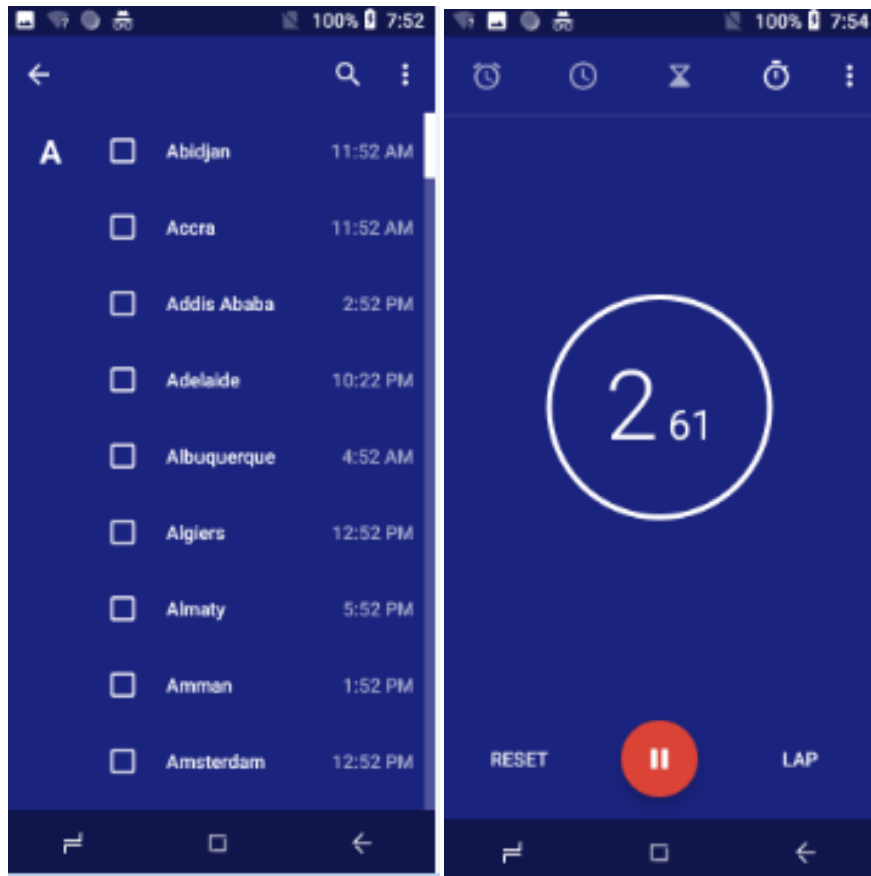


5.6 Downloads

 Check the downloaded files in the current mobile phone, and select the file to install.

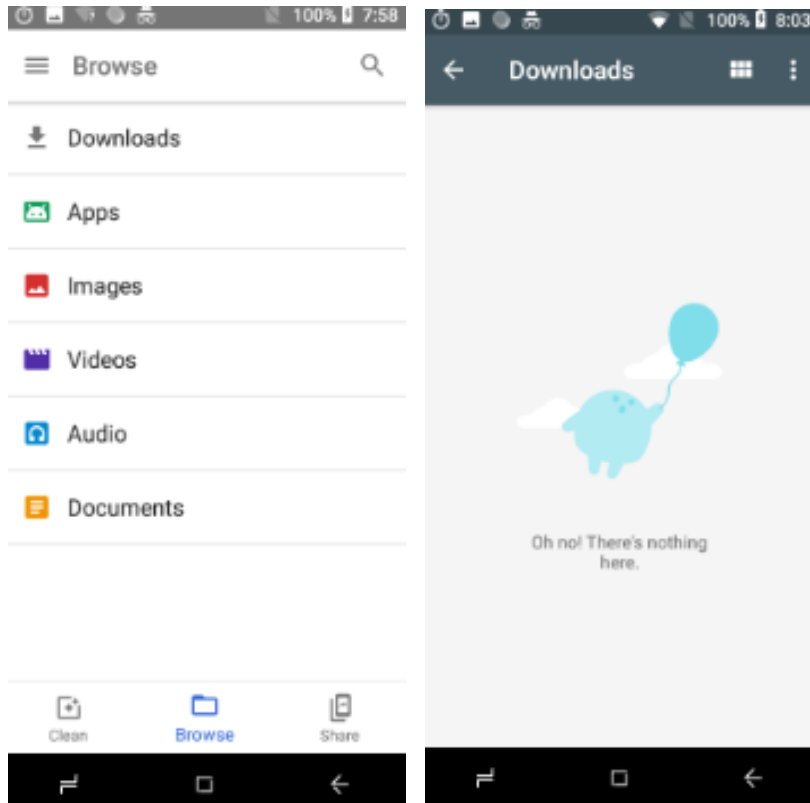

5.7 Gmail

 You can send Gmail to anyone who has email account with this function. Enter this menu you can set an account and you can also click email account already existed to send emails. In this menu, you can activate, build account, delete and so on. Phone email can send emails like computer. This application needs Internet support.

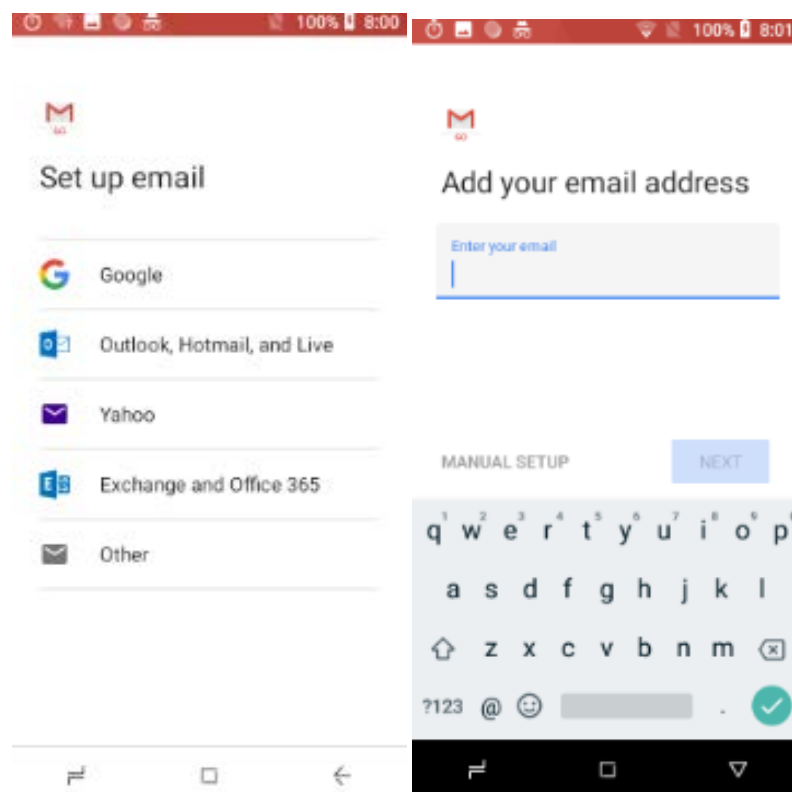

5.8 File manager

File manager can manage MP3, video, audio, e-books folder and so on. If you long press the file, you can operate copy, cut, delete, rename, share and details.

Videos - video folder

 
 
Photos - Photos folder

Picture - Pictures folder

My Music - Music folder

Ebook - E-book folder


Note: To prevent any inconvenience to you, please do not arbitrarily delete the folder and the java and other resources. To facilitate the use of some of your folders are hidden folders.

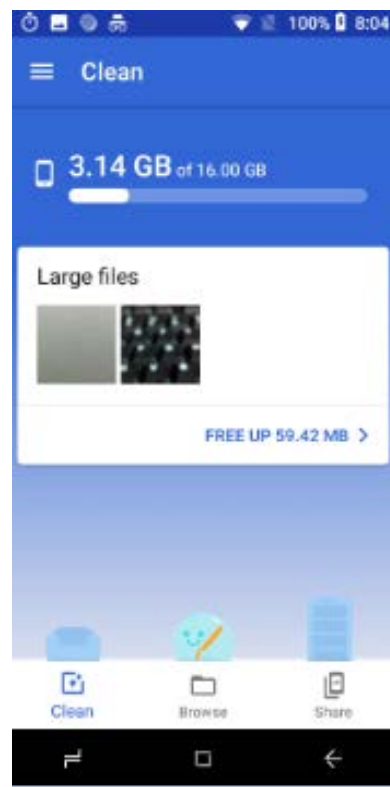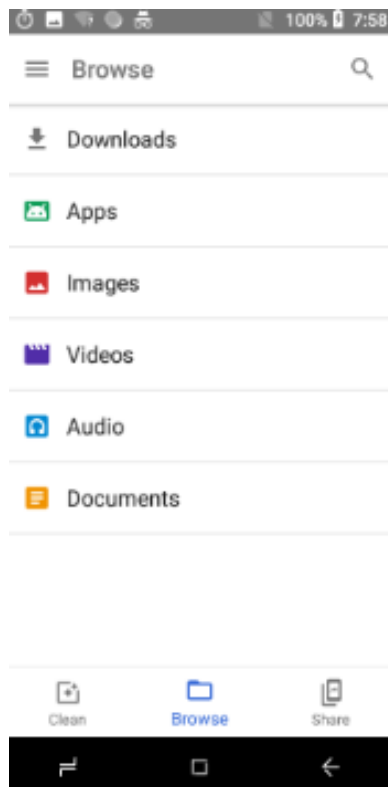

5.9 FM radio

In this mode, you can perform the following operations:

 - Search: Scan channels automatically.
- RDS settings: You can set open/close channel information and alternative frequency.
- Record FM: Record FM audio.
- Loudspeaker: Set on/off for background play and loudspeaker.
- Channel list: Edit the channel name and frequency in the list.

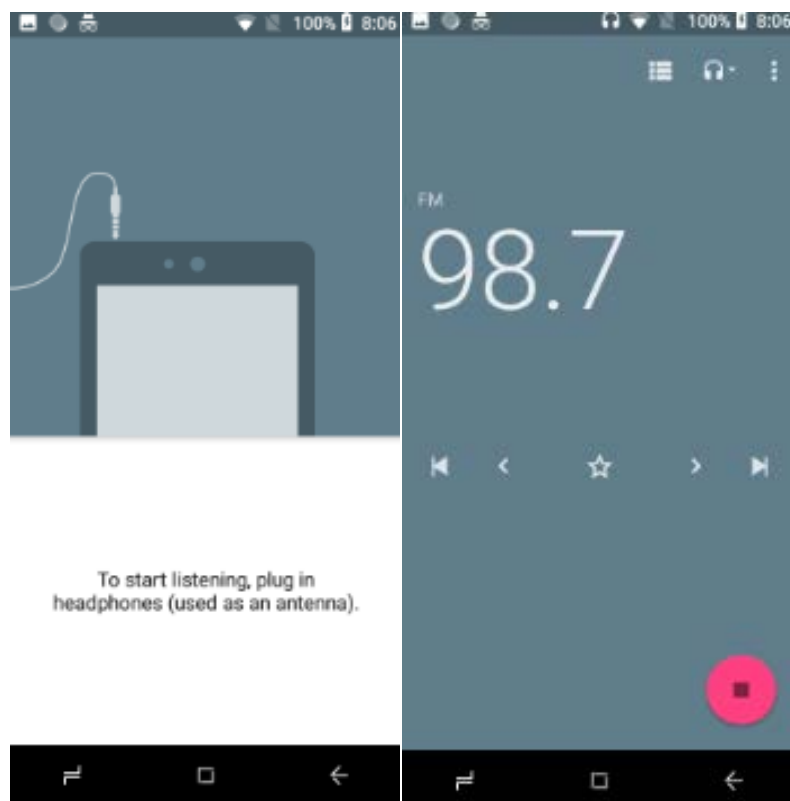


5.10 Gallery

Gallery contains many picture folders and video folders.

When you open a picture, press the menu key, you can operate sideshow, edit, print, rotate left, rotate right, crop, set picture as and details. You can also manage the following operations:



Share: Share by Email, Messaging, Bluetooth, and Wechat.

 Delete: Choose pictures or folders to delete.

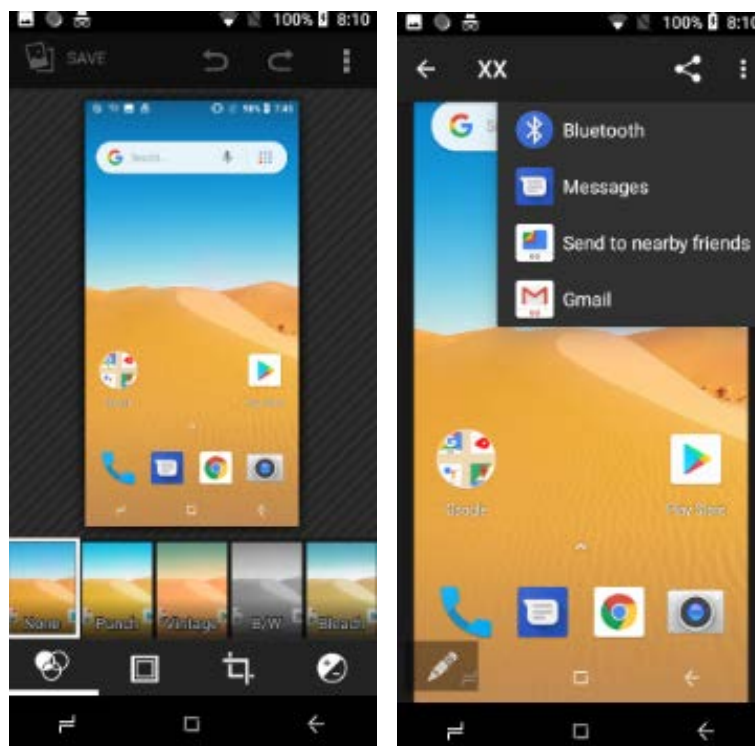

5.11 Messaging

  
In the message interface, tap the writing button in the lower left corner to write a new message. In the editing interface, press the attachment button and you can add themes. This message automatically transform into MMS after adding attachments. If you want to read the received message, just choose it. In message display interface, long press the content will pop function select menu, you can copy text, save message to SIM card, forward, lock, view details, delete or select text. If you want reply a message, you write and edit message under the current message and send it directly. In the main display of message, you can touch menu key and operate delete all threads and settings.

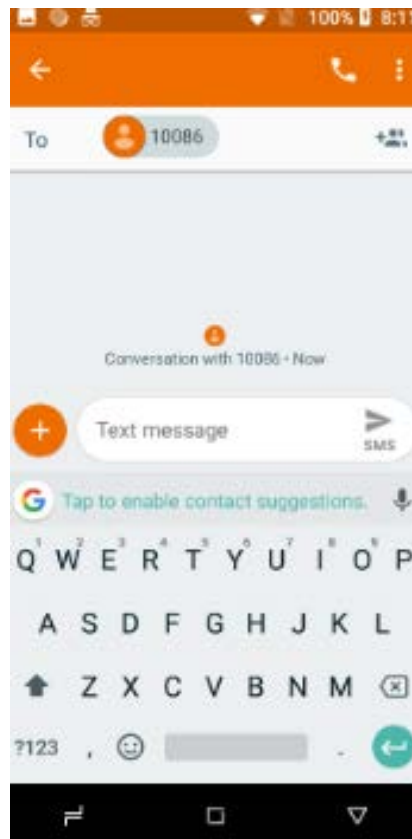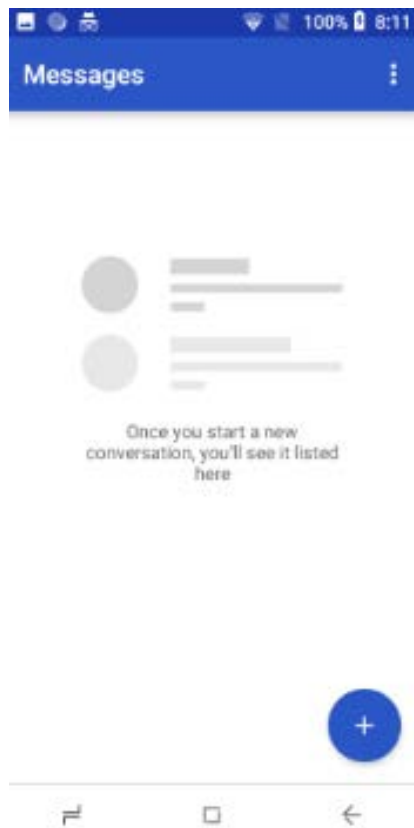


5.12 Music

Music player automatically scans the music SD card can support.

  - Artists: Music files in SD card, arranged by the performers, such as click "Eason" into songs this singer sang, click on the selected songs can be played.
- Album: Music files in SD card, arranged according to album, put the music files on the same album together, click on an album, you can list all the songs on the album, click on the selected songs can be played.
- Songs: Music files in SD card, arranged by song name, click on song name to play.
- Play lists: You can add a play list; add the specified music files to the new play list.

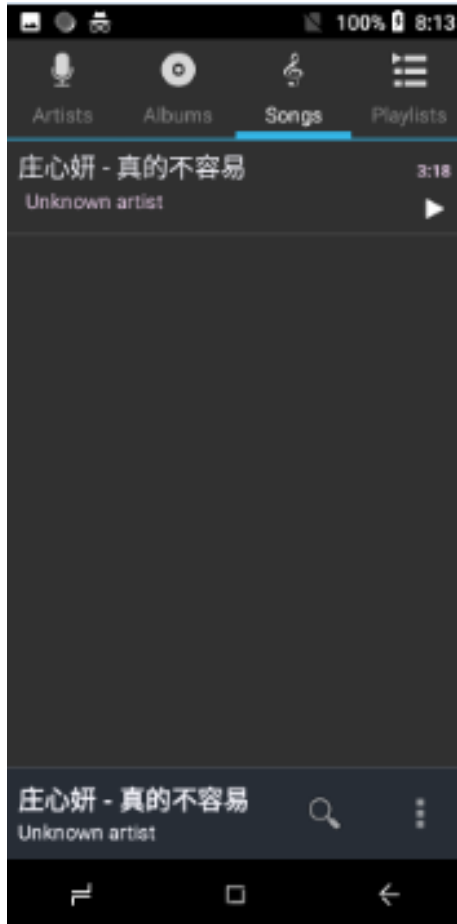

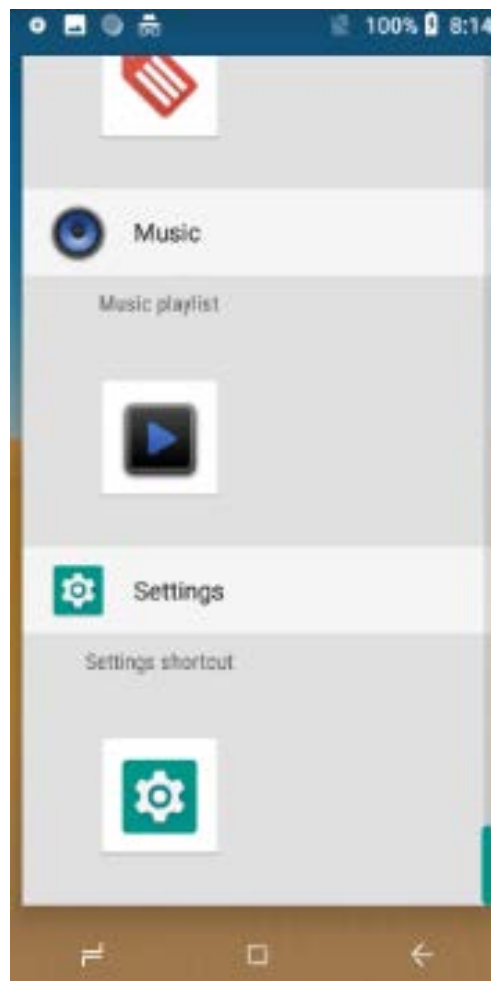


5.13 People

Click "People", you can find the telephone numbers you need and call or send text messages to. You can add a new contact to people; you can save the names, numbers and other information in "Phone" memory. This phone has business card like phone book. The information of each contact stored in this phone including multiple numbers, email, groups and so on. There is a search bar to search contacts. By entering the first character of any name, you can see the full list of names starting with that character. You can either select or type the next character of the name to get the exact entry. Use the keypad to enter the characters. Click the menu you can operate the following operations:

- Delete contact: You can mark one or several contacts to delete.
- Contacts to display: You can choose display all contacts, SIM card, phone or customize as your need.
- Import / Export Contact: Contact information from the SIM card and SD card can be imported.

- Accounts: You can set the account with the synchronization settings; you can add accounts and synchronize contact information.
- Settings: You can set display options in this menu.
- Share visible contacts: You can share visible contacts via Bluetooth, email, Gmail, MMS, SD card, Skype and SMS.

 •

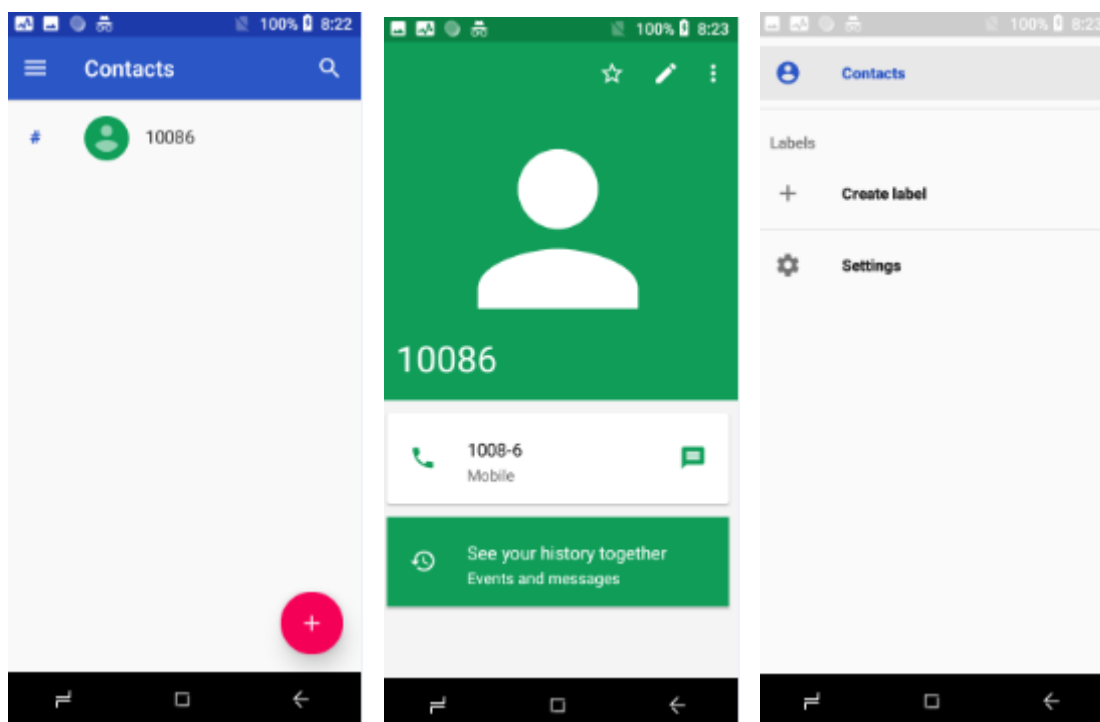

5.14 Phone

- **To make calls**

Input phone number, and then press the call key.

Press the “logs” could access the list of recent call records. Please refer to the “People” to using the contacts name and phone number.

- **Answer or decline the incoming call.**

 
Pick up the call by click the “Answer” ; to end the call by click the “Decline” . Decline the incoming call by click the “Decline or press the power on/off button.

 
- **Calling**

To increase or decrease the volume in the process of calling, press the up or down side key. During a call you can click the icon to enter to choose mute, small keyboard, H-free, add Calls, Hold, people.

- Touch "mute": press the "mute", you can still hear the other speak, and the other side cannot hear you speak.

- Keyboard: You can use the small keyboard to enter information, you need to click "hide keyboard" to return dial interface; after using a small keyboard, click on the "end call" to hang up.
- H-free: Touch the hands-free, calls is in the state of speaker
- Add Calls: During a call, if you need to contact third-party call, you can click "Add call"
- People: Click "People", you can find the telephone numbers you need and call or send text messages.

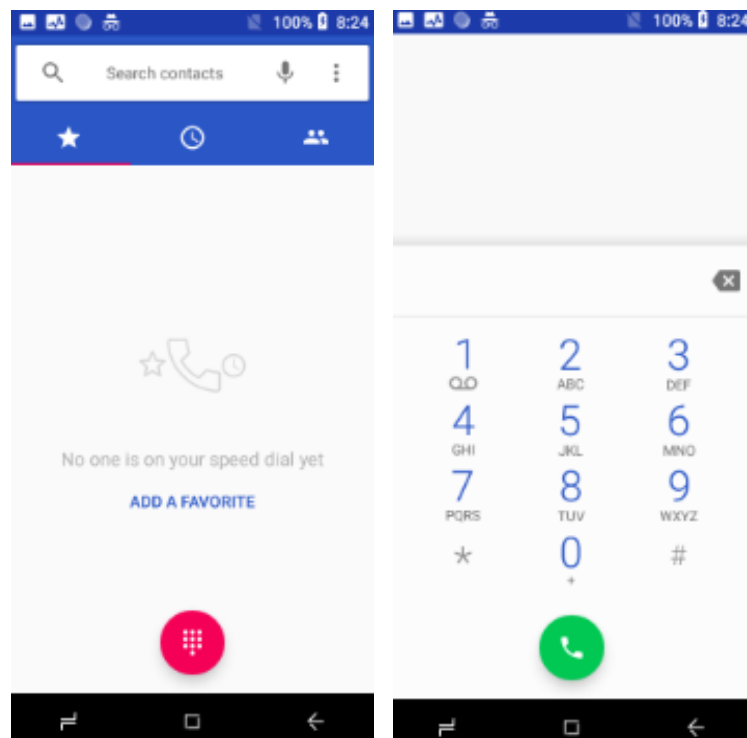

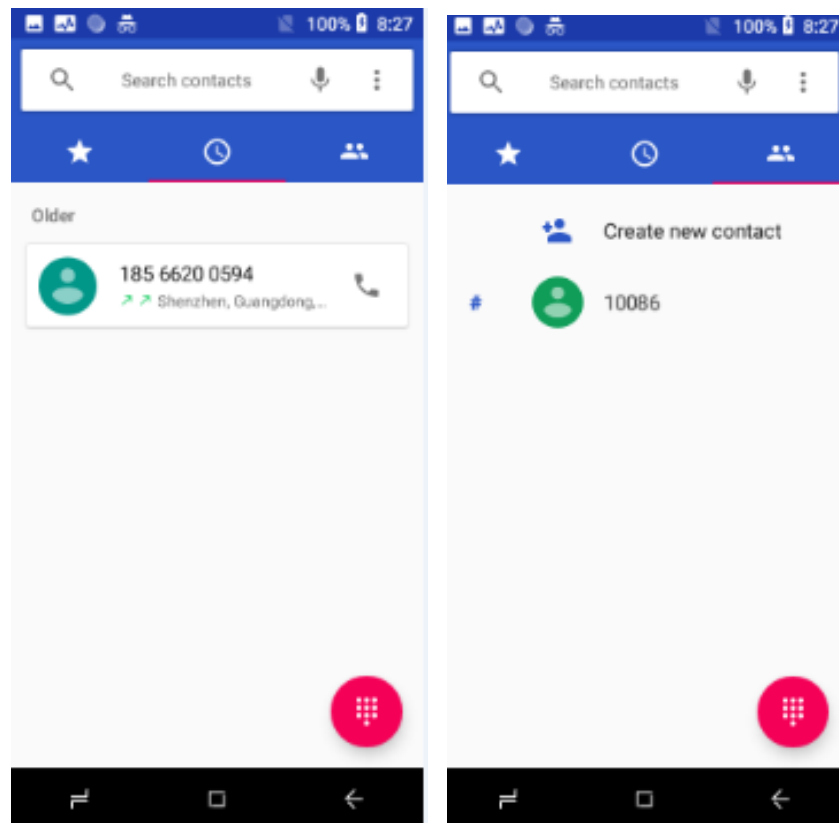


-

-

-


5.15 Search

 Enter the input related characters and then click the arrow icon to enter through the network to the corresponding search interface.

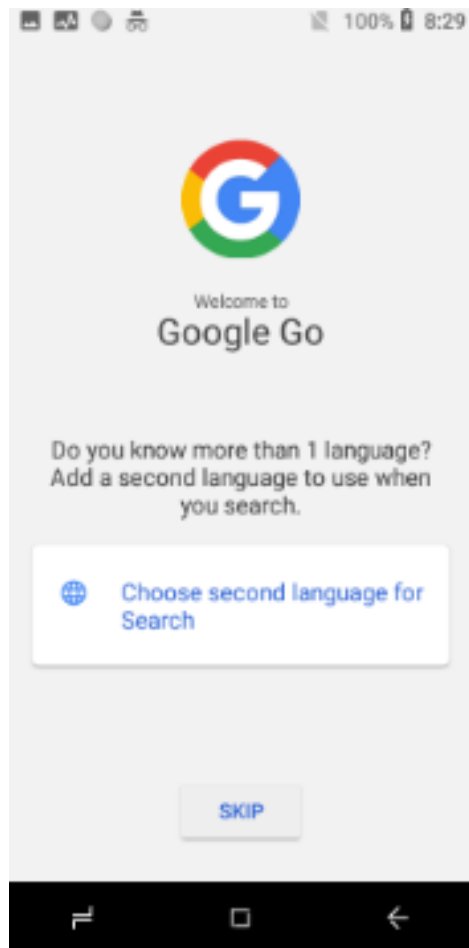

5.16 Settings

 Enter settings and operate them as following:

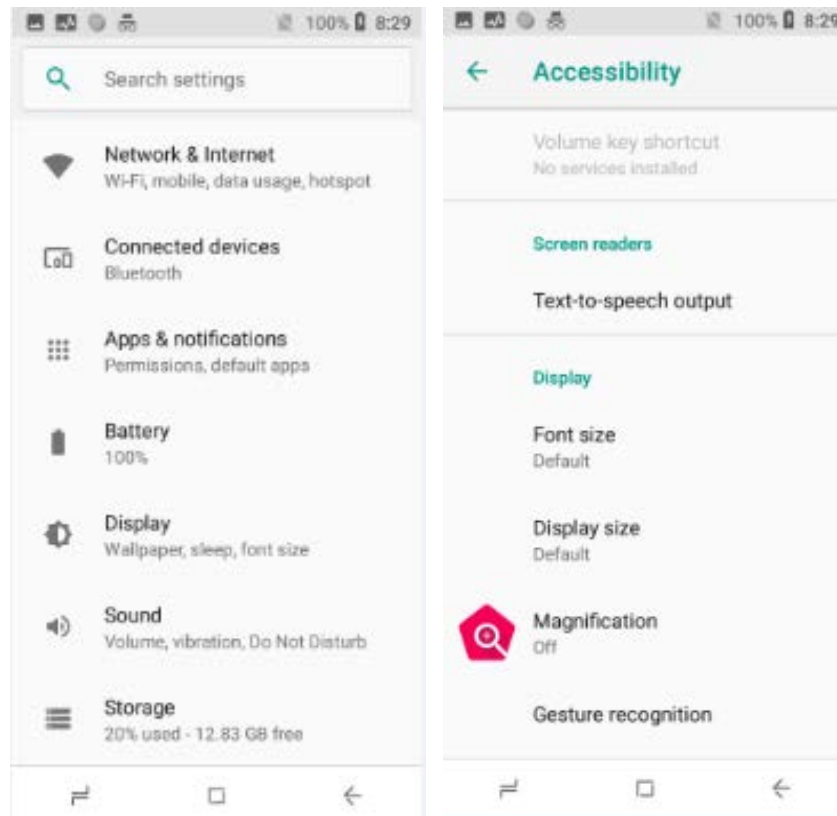

- **Wireless & networks**
- SIM management: Check SIM information, default SIM and general settings.
- Wi-Fi: Slide to open/close Wi-Fi. Wi-Fi settings determine whether the phone use a local Wi-Fi network to connect to the Internet. Wi-Fi uses

wireless LAN, so network coverage locations can be connected. In some locations, Wi-Fi networks may receive restrictions, please consult the local authorities.

- **Bluetooth:** Slide to open/close Bluetooth. You can change the device name. Only when the Bluetooth device make discoverable, the device can be searched by others. Clicking the scan can search for Bluetooth devices within range, and the phone can match the searched Bluetooth devices
- **Data usage:** Check data usage of this mobile.
- **More:** You can set airplane mode, VPN, tethering and portable hotspot, Wi-Fi direct, mobile networks, GPRS transfer prefer mode in this menu.
- **Device**
 - **Audio profiles:** You can set predefined profiles as general, silent, meeting and outdoor; you can also add and edit profiles as your need.
 - **Display:** Set brightness, auto-rotate screen, animation and screen timeout.

- **Storage:** You can check SD card storage and system storage.
- **Battery:** You can check battery usage.
- **Apps:** You can manage downloaded/all/on SD card/running applications.

- **Personal**

- **Location services:** Click to use wireless networks or data connection to locate.
- **Security:** Set screen security, SIM card lock, passwords, device administration and credential storage.
- **Language & input:** Set language settings, keypad & input methods, speech and mouse/trackpad.
- **Backup & reset:** Set backup and restore and check personal data.

- **Accounts**

- **+Add account:** Set general sync settings and manage accounts.

- **System**

- Date and time: Set date and time and its format and automatic update with network.
- Schedule power on/off: Set schedule power on/off time.
- Accessibility: Set Accessibility and power button.
- Developer options: Set USB debugging, user interface and Apps and so on.
- About phone: Check phone information like model number, android version.

 
5.17 SIM Toolkit

Enter STK service for SIM card support services accordingly.

5.18 Sound recorder

Enter this menu and press lower right button to check voice recorder list. Press menu key to set voice quality and recording mode. You can also perform the following operations.

- New record: Record new audio file.
- Save: Save the recorded file.
- Stop: Stop record currently.
- Discard: Cancel recording.
- Recording file list: Check the list of recording files.

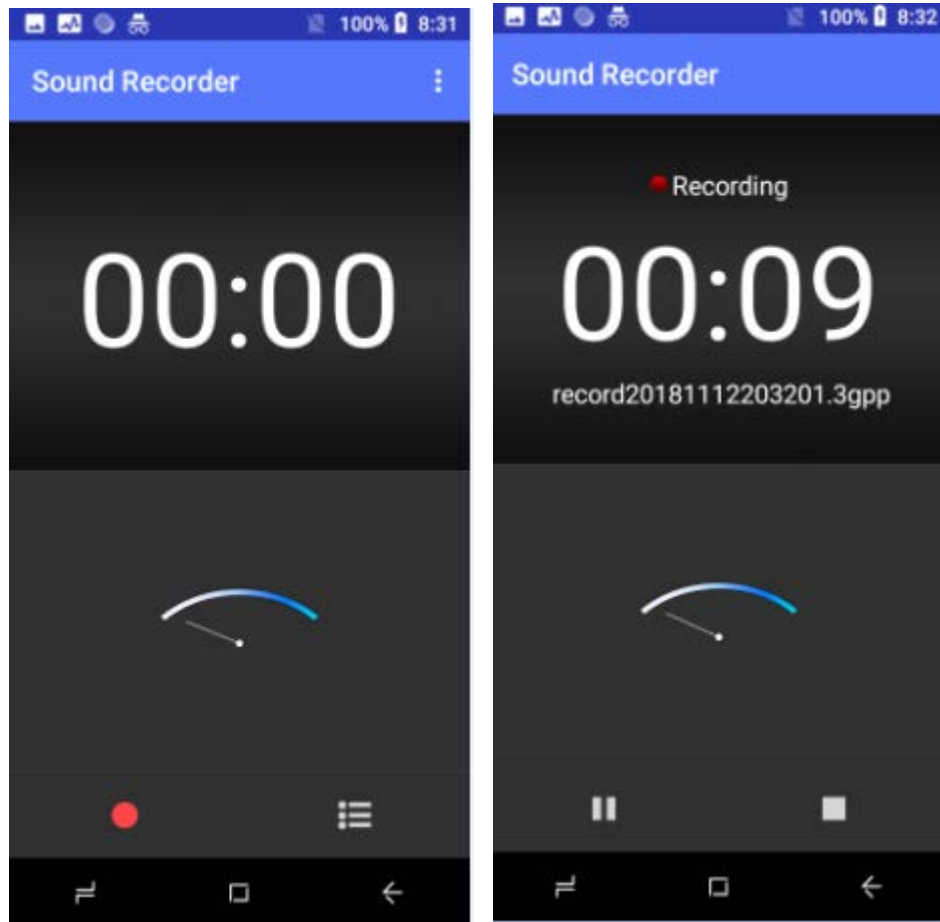


5.19 Video player

Into the interface of video player list to select any file to play, in the play interface touch pop-up menu interface stop, recycling tips, click on the top right corner can be in the form of information, bluetooth, electronic mail to send.

- Stop: Click STOP to STOP playing the current video.

 - Loop: Click on the LOOP for the current LOOP for video files.
- Messaging: The current video file through the way of information transmission to other people.
- Bluetooth: The current video file via bluetooth way transmitted to other people.
- Email: The current video file through E-mail transmitted to other people.

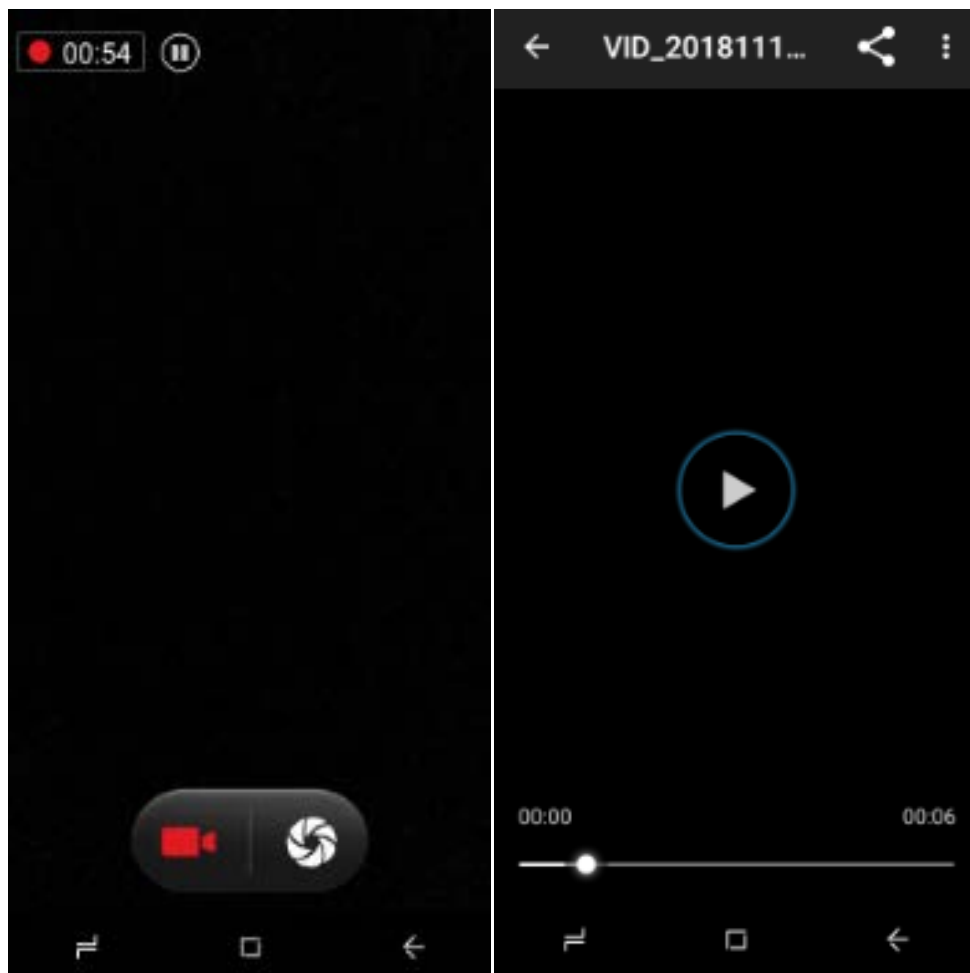

5.20 Wireless input device

After opening via bluetooth search to bluetooth keyboard, can connection via bluetooth keyboard input characters.

Common problems and Solutions

If use the mobile phone when the abnormal situation, please refer to the table below to exclude.

Common problem	Causes	The solution
Poor reception	In poor reception areas use mobile phone, such as tall buildings near or basement, radio waves can not be effectively communicated	Try to avoid
	In the intensive period using mobile phone calls, such as time, line congestion cannot call	Try to avoid
	With the network busy	May request the network

	ilt by the transmit ting station near t he	ervice provider service a reas
Echo or murmur	Because of the netw ork trunk caused by bad, is a regional problem	Hang up and dial, trunk m ay replace good line
	Line some bad call area	
Standby time	The system of stand by time and network settings	In poor reception areas, please temporarily turns off the mobile phone
	The battery needs t o be replaced	Replace the new battery
	Not receive the sig nal, the mobile pho ne will continue to launch for the bas e station, consume	Please move to the use of signal strong local or t emporary closure of mobil e phone

	a large amount of battery power, resulting in the standby time	
Cannot boot	The battery runs out	Check the battery or charging
SIM error	The SIM card is damaged	Contact your Internet service provider
	No SIM card installed	Determine the SIM card has been installed
	SIM card metal surface dirt	Metal to metal contact point with the wiping cloth clean SIM card
Unable to connect to the network	Invalid SIM card	Contact your network provider
	Beyond the GSM or 3G service area	Service area query to the network provider
	The weak signal	Please move to the signal

		strong local retry
Cannot call	Using the call restriction function	Cancel call limit set
	Using the fixed dialing	Cancel the fixed dialing settings
PIN error	Three consecutive input incorrect PIN code	Contact your network provider
Not charging	Battery or charger damage	Replace the new battery or charger
	Charging below -10 °C or above 55 °C environment	Change the charging environment
	Poor contact	Check whether the plug connection
The telephone directory records cannot be added	Phone book storage space is full	Remove part of the phone book records

Unable to set some function	The network provider does not support this feature, or you have not applied for this function	Contact your network provider
-----------------------------	---	-------------------------------

FCC compliance statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important: Changes or modifications to this product not authorized by AXIS TECHNOLOGY could void the electromagnetic compatibility (EMC) and wireless compliance and negate your authority to operate the product.

This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

SAR Statement:

This MAGNUM SERIES meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: HR600 (FCC ID: 2ASJS-HR600) has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.