

VersaReel® Blue

User Module Manual



CONDUCTIX
wampfler

CONDUCTIX INCORPORATED

The technical data and images which appear in this manual are for informational purposes only. **NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE CREATED BY THE DESCRIPTIONS AND DEPICTIONS OF THE PRODUCTS SHOWN IN THIS MANUAL.** Conductix makes no warranty (and assumes no liability) as to function of equipment or operation of systems built according to customer design or of the ability of any of its products to interface, operate or function with any portions of customer systems not provided by Conductix.

Seller agrees to repair or exchange the goods sold hereunder necessitated by reason of defective workmanship and material discovered and reported to Seller within one year after shipment of such goods to Buyer.

Except where the nature of the defect is such that it is appropriate, in Seller's judgment, to effect repairs on site, Seller's obligation hereunder to remedy defects shall be limited to repairing or replacing (at Seller's option) FOB point of original shipment by Seller, any part returned to Seller at the risk and cost of Buyer. Defective parts replaced by Seller shall become the property of Seller.

Seller shall only be obligated to make such repair or replacement if the goods have been used by Buyer only in service recommended by Seller and altered only as authorized by Seller. Seller is not responsible for defects which arise from improper installation, neglect, or improper use or from normal wear and tear.

Additionally, Seller's obligation shall be limited by the manufacturer's warranty (and is not further warranted by Seller) for all parts procured from others according to published data, specifications or performance information not designed by or for Seller.

Seller further agrees to replace or at Seller's option to provide a refund of the sales price of any goods that do not conform to applicable specifications or which differ from that agreed to be supplied which non-conformity is discovered and forthwith reported to Seller within thirty (30) days after shipment to the Buyer. Seller's obligation to replace or refund the purchase price for non-conforming goods shall arise once Buyer returns such goods FOB point of original shipment by Seller at the risk and cost of Buyer. Goods replaced by Seller shall become the property of Seller.

There is no guarantee or warranty as to anything made or sold by Seller, or any services performed, except as to title and freedom from encumbrances and, except as herein expressly stated and particularly, and without limiting the foregoing, **there is no guarantee or warranty, express or implied, of merchantability or of fitness for any particular purpose or against claim of infringement or the like.**

Seller makes no warranty (and assumes no liability) as to function of equipment or operation of systems built to Buyer's design or of the ability of any goods to interface, operate or function with any portions of Buyer's system not provided by Seller.

Seller's liability on any claim, whether in contract, tort (including negligence), or otherwise, for any loss or damage arising out of, connected with, or resulting from the manufacture, sale, delivery, resale, repair, replacement or use of any products or services shall in no case exceed the price paid for the product or services or any part thereof which give rise to the claim. In no event shall Seller be liable for consequential, special, incidental or other damages, nor shall Seller be liable in respect of personal injury or damage to property not the subject matter hereof unless attributable to gross misconduct of Seller, which shall mean an act or omission by Seller demonstrating reckless disregard of the foreseeable consequences thereof.

Seller is not responsible for incorrect choice of models or where products are used in excess of their rated and recommended capacities and design functions or under abnormal conditions. Seller assumes no liability for loss of time, damage or injuries to property or persons resulting from the use of Seller's products. Buyer shall hold Seller harmless from all liability, claims, suits and expenses in connection with loss or damage resulting from operation of products or utilization of services, respectively, of Seller and shall defend any suit or action which might arise there from in Buyer's name - provided that Seller shall have the right to elect to defend any such suit or action for the account of Buyer. The foregoing shall be the exclusive remedies of the Buyer and all persons and entities claiming through the Buyer.

TABLE OF CONTENTS

SECTION 1 - GETTING STARTED	4
Quick Guide	4
App Download	4
Device Safety Features	5
SECTION 2 - MOBILE APP INITIAL SETUP	6
Scan Screen	6
Info Screen	6
Scan Screen	7
Device List	7
Device Control	8
SECTION 3 - MOBILE APP USER CONFIGURATION	9
Default Pin Code Screen	9
Ready To Use Screen	9
Default Master Password Screen	10
Change Master Password Screen	11
Change Device Pincode Screen	11
Change Device Name	12
SECTION 4 - TROUBLESHOOTING APP	13
Incorrect Password Screen	15
Reel Damage Warning Screen	15

Attention:

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

This product meets the applicable FCC Part 15 rules and Industry Canada's license exempt RSSs. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent matériel est conforme aux CNR exemptés de licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne peut pas provoquer d'interférences, et (2) cet appareil doit accepter toute interférence, y compris celles susceptibles de provoquer le fonctionnement du dispositif.

To limit RF exposure, please ensure 4 inches (10 cm) of separation from the transmitter antennas at all times.

FCC ID: 2ASM6-CXWA
IC: 11769A-CXWA

SECTION 1 - GETTING STARTED

Quick Guide

- The VersaReel Blue is able to connect to all Bluetooth-enabled Apple and Android devices.
- Optimal range to use the VersaReel Blue is up to 100 feet.
- As a safety feature, Bluetooth connection from the app to the reel will terminate when the screen is locked, or goes into sleep mode. The user will need to reconnect the app to the reel at this point.

App Download

1. On an Apple iPhone or iPad, go to the App Store; on an Android OS phone or tablet, go to the Google Play Store.
2. In the search field, type in “versareelblue”. Tap the **VersaReelBlue** app to open.
3. Tap **Install** in Google Play Store for Android version; tap  in Apple Store for iOS version.
4. Once install is complete, tap **Open** to open the app.

SECTION 1 - GETTING STARTED

Device Safety Features

- If the user taps the **Up** or **Down** buttons more than three times consecutively within 0.5 seconds of each other, all reel function stops and a warning appears. The user must press “**Got It**” to continue.
- Holding the **Up** or **Down** buttons for 25 seconds, regardless of the reel speed, will cause all motor operation to stop.

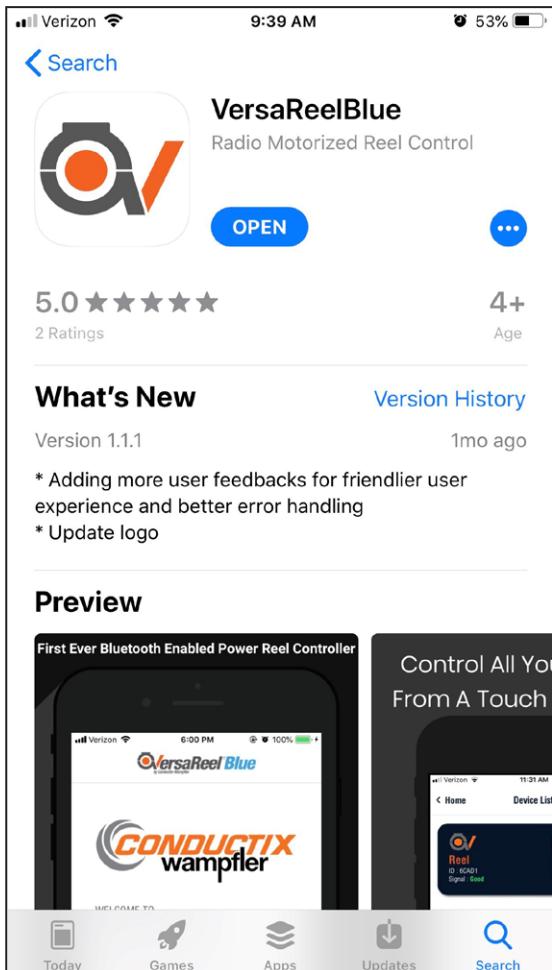


Figure 6-1: App download screen (Apple OS)

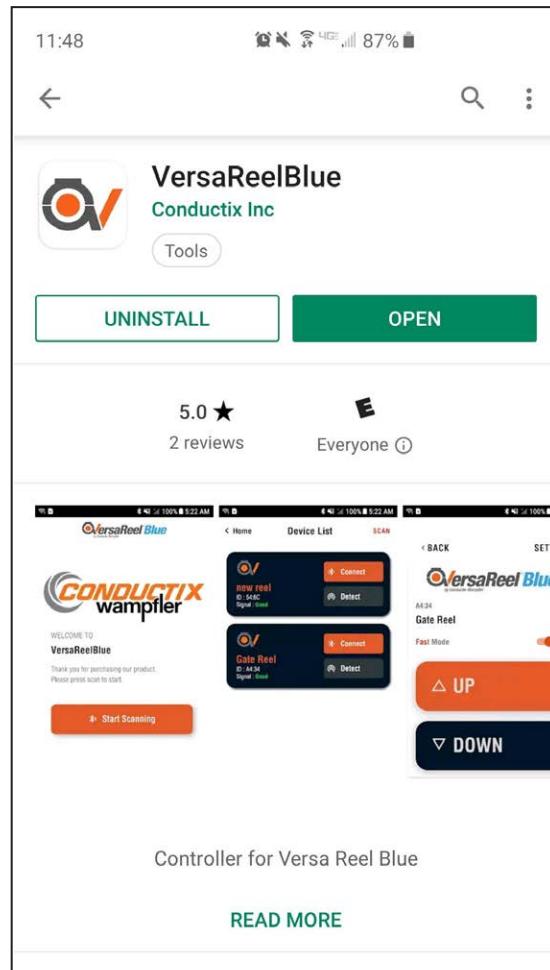


Figure 6-2: App download screen (Android OS)


SECTION 2 - MOBILE APP INITIAL SETUP

Scan Screen



When the **Scan** screen comes up, press the **Info** button to display required user information.

Info Screen

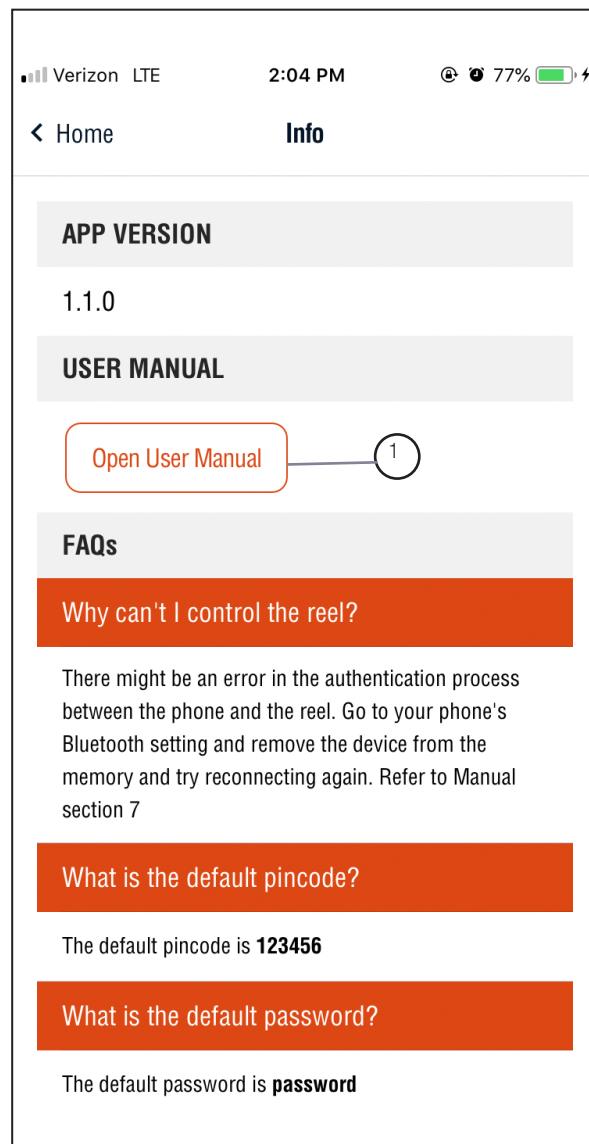


The **Info** screen provides the most current version for the app; a downloadable PDF of the user manual; FAQs; the default pincode; and the default password.

Callouts: 1) Link to the user manual


SECTION 2 - MOBILE APP INITIAL SETUP

Scan Screen

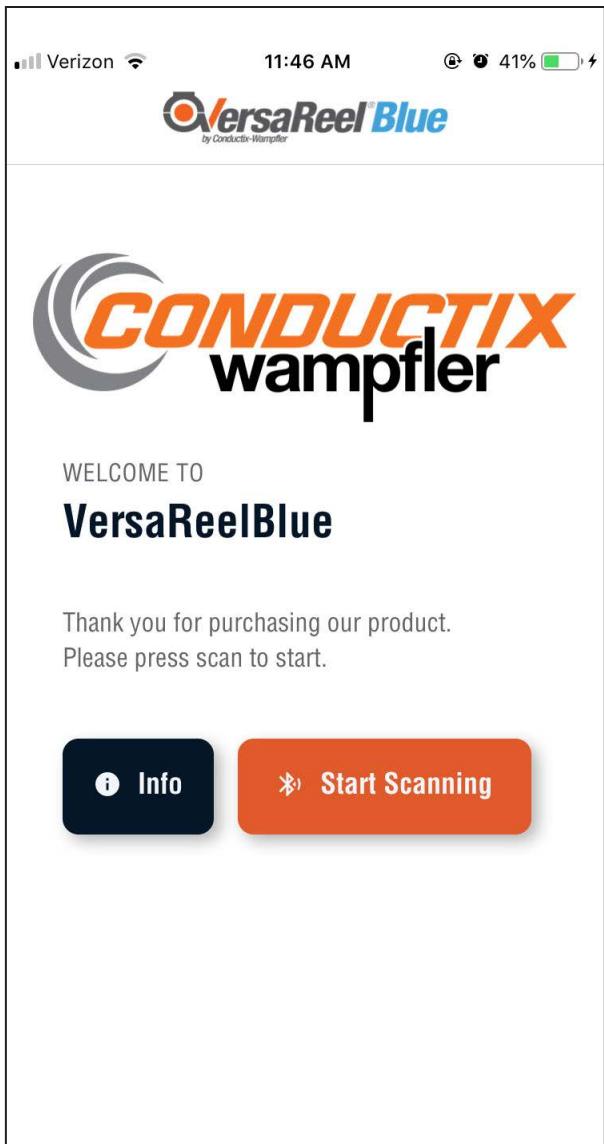

When the **Scan** screen comes up, press **Scan** button to display a list of available devices to connect to.

Device List

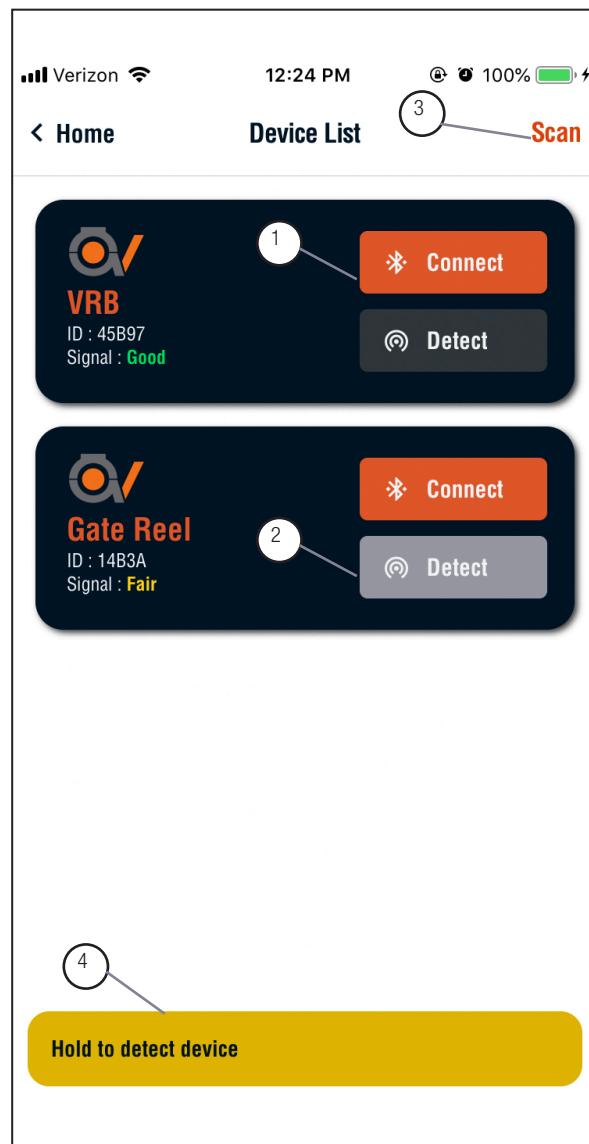


The **Scan** screen shows the individual devices to interact with. When user presses the **Hold To Detect Device** button, the reel's light indicator turns red to show which reel the signal is being transmitted to. Green on the light indicator shows an available reel.

Callouts: 1) Detect device; 2) Connect to device; 3) Scan; 4) Hold To Detect Device button

SECTION 2 - MOBILE APP INITIAL SETUP

Device Control

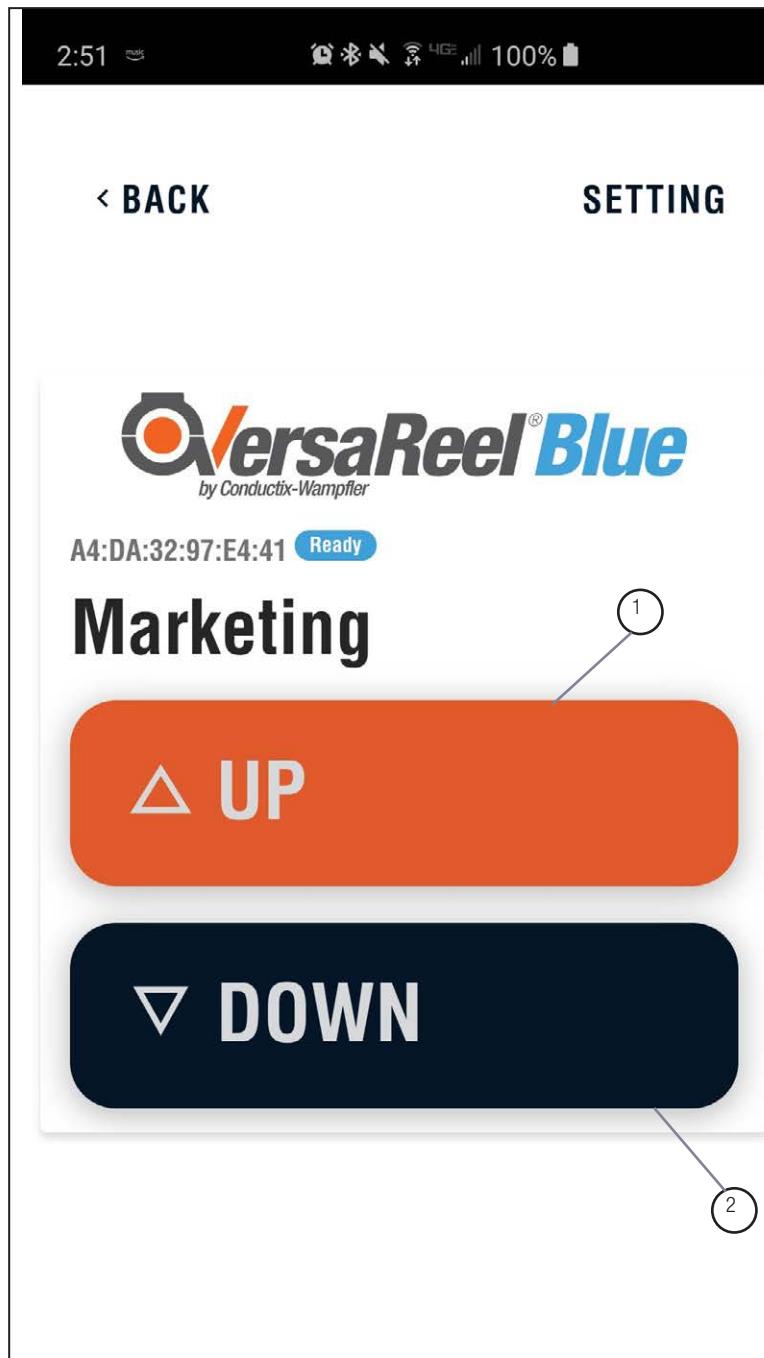


Once a device is paired, the main **Device Control** screen comes up.

Callouts: 1) Retract; 2) Pay out

SECTION 3 - MOBILE APP USER CONFIGURATION

Default Pin Code Screen

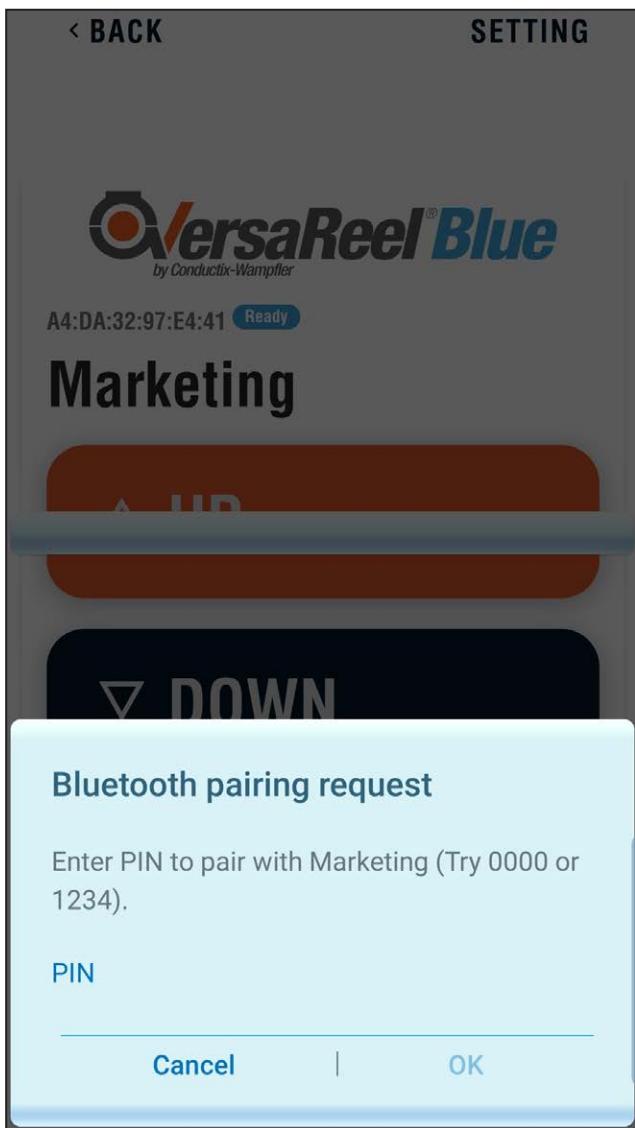


The first time the **Up/Down** buttons are pressed, a Pairing Requests prompts user to enter pincode. Enter **123456** (pin code can be changed in the **Setting** screen).

NOTE

The text prompting user to enter 0000 or 1234 is auto-generated by the phone and is not applicable.


Ready To Use Screen

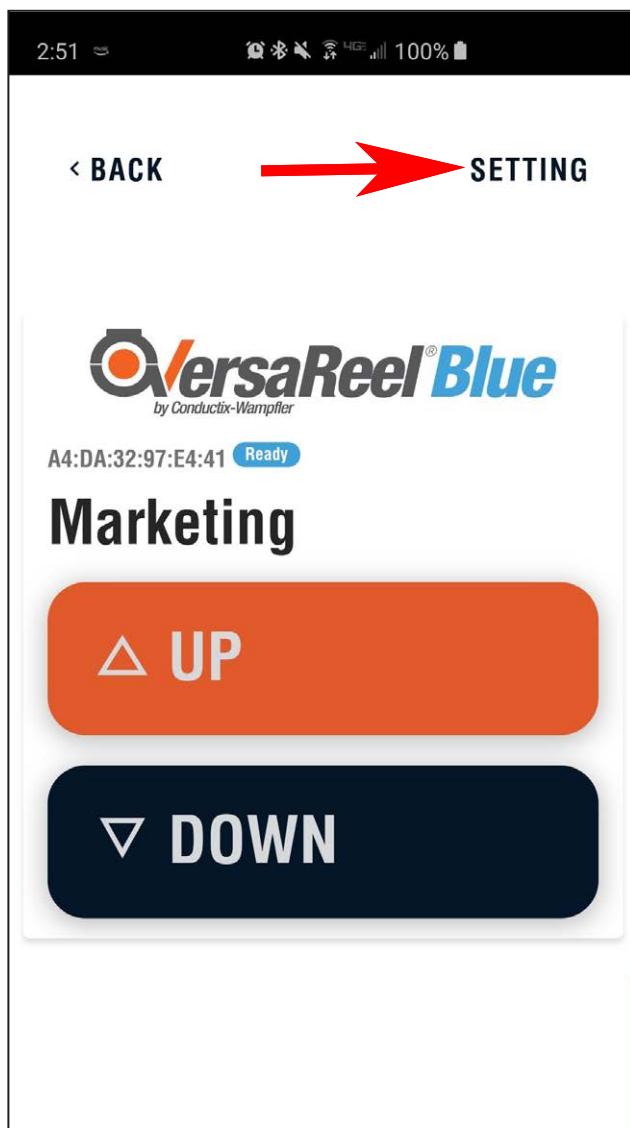

At the **Ready To Use** screen, changes to the reel's pincode, name, and password are done by pressing the **Setting** tab. Users are encouraged to change the default password following the initial setup. The maximum number of characters for the password is 12 characters, and it must contain one number.

SECTION 3 - MOBILE APP USER CONFIGURATION


Default Master Password Screen

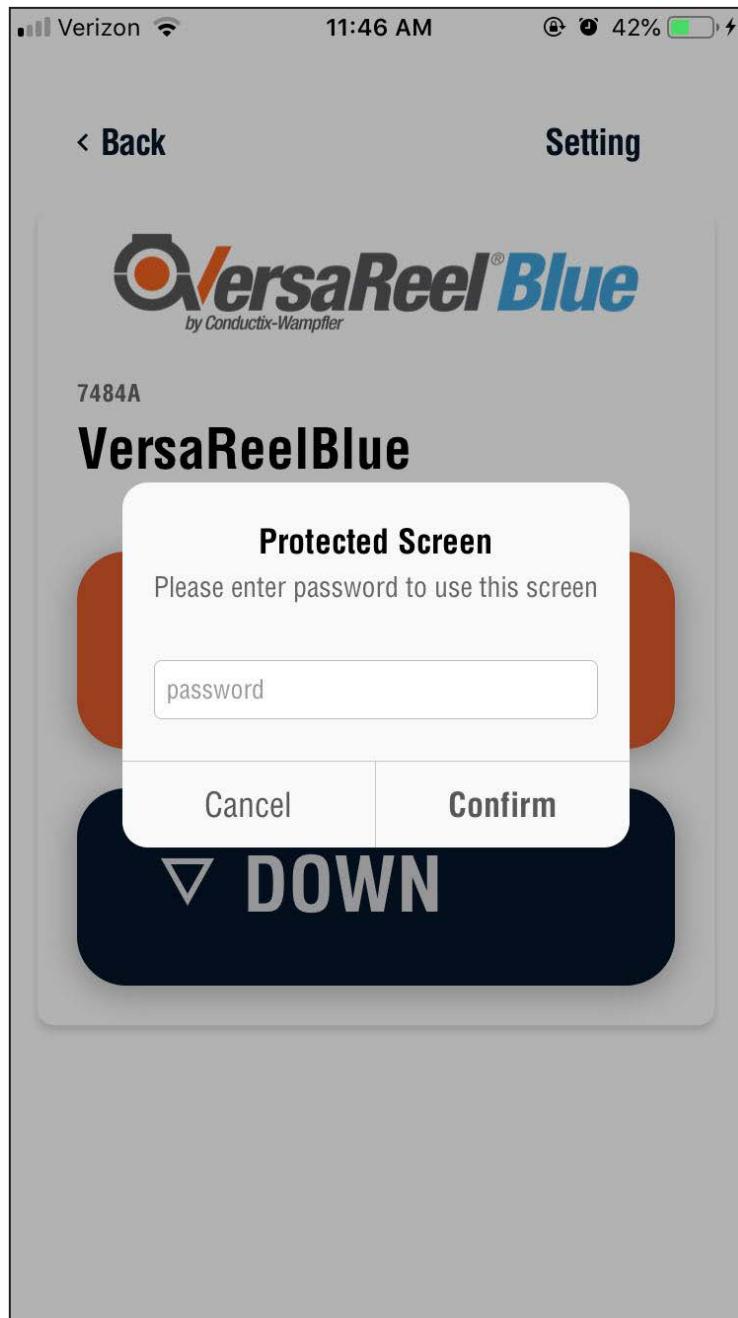

After selecting **Setting**, a prompt asks for the default master password. Enter **password**. The master password allows user to change the reel's pincode, name, and password. Users are encouraged to change the default password following the initial setup.


SECTION 3 – MOBILE APP USER CONFIGURATION

Change Master Password Screen

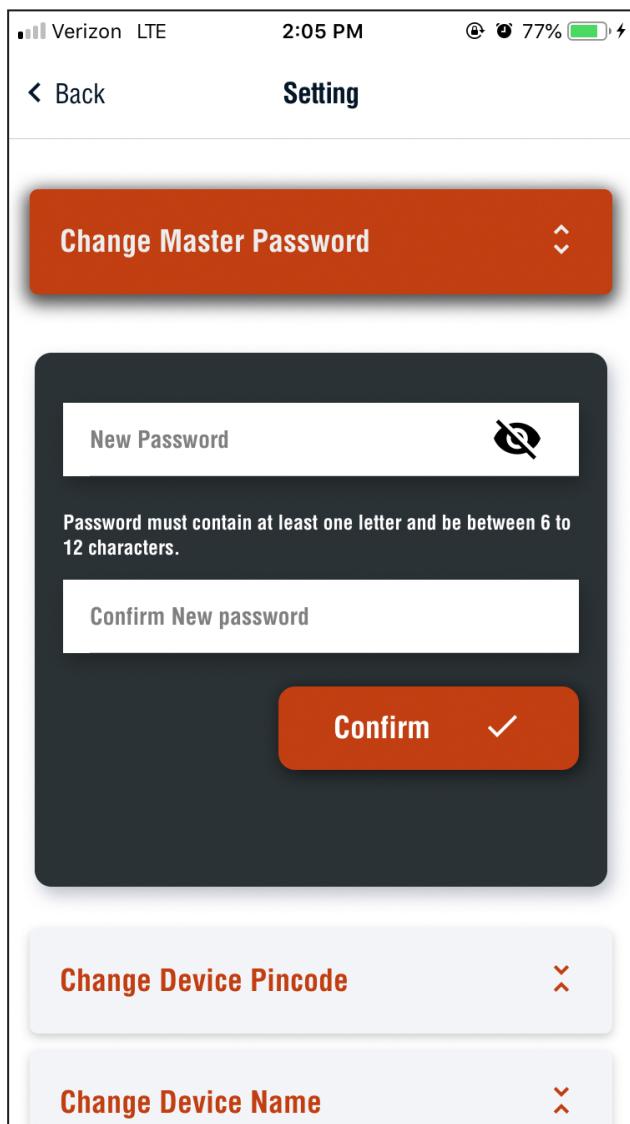

Master (or User) Password is required to access the Settings Panel. Choose the **Change Master Password** option to expand the form. Toggle **Show Password** to help verify the input is correct.


Change Device Pincode Screen

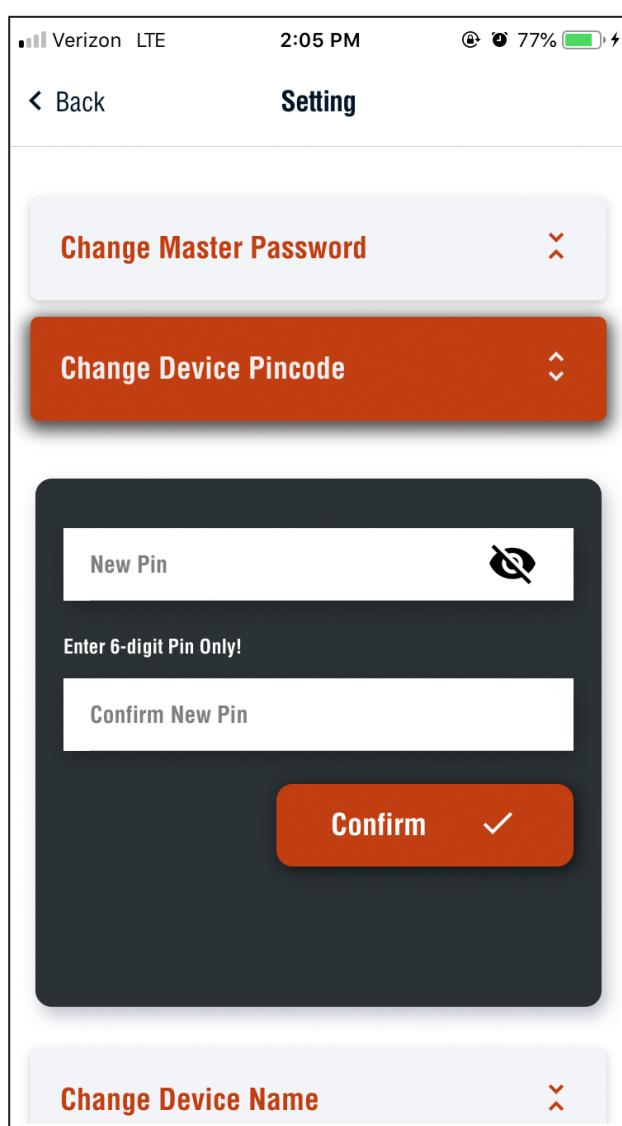

The **Device Pin code** is used to access the reel's main controls. The pin code must be a 6-digit number. If there are issues after the pin code is changed, please refer to the **Troubleshooting** section.

Choose the **Change Device Pincode** option to expand the form. Toggle **Show Pin code** to help verify the correct input.

SECTION 3 - MOBILE APP USER CONFIGURATION

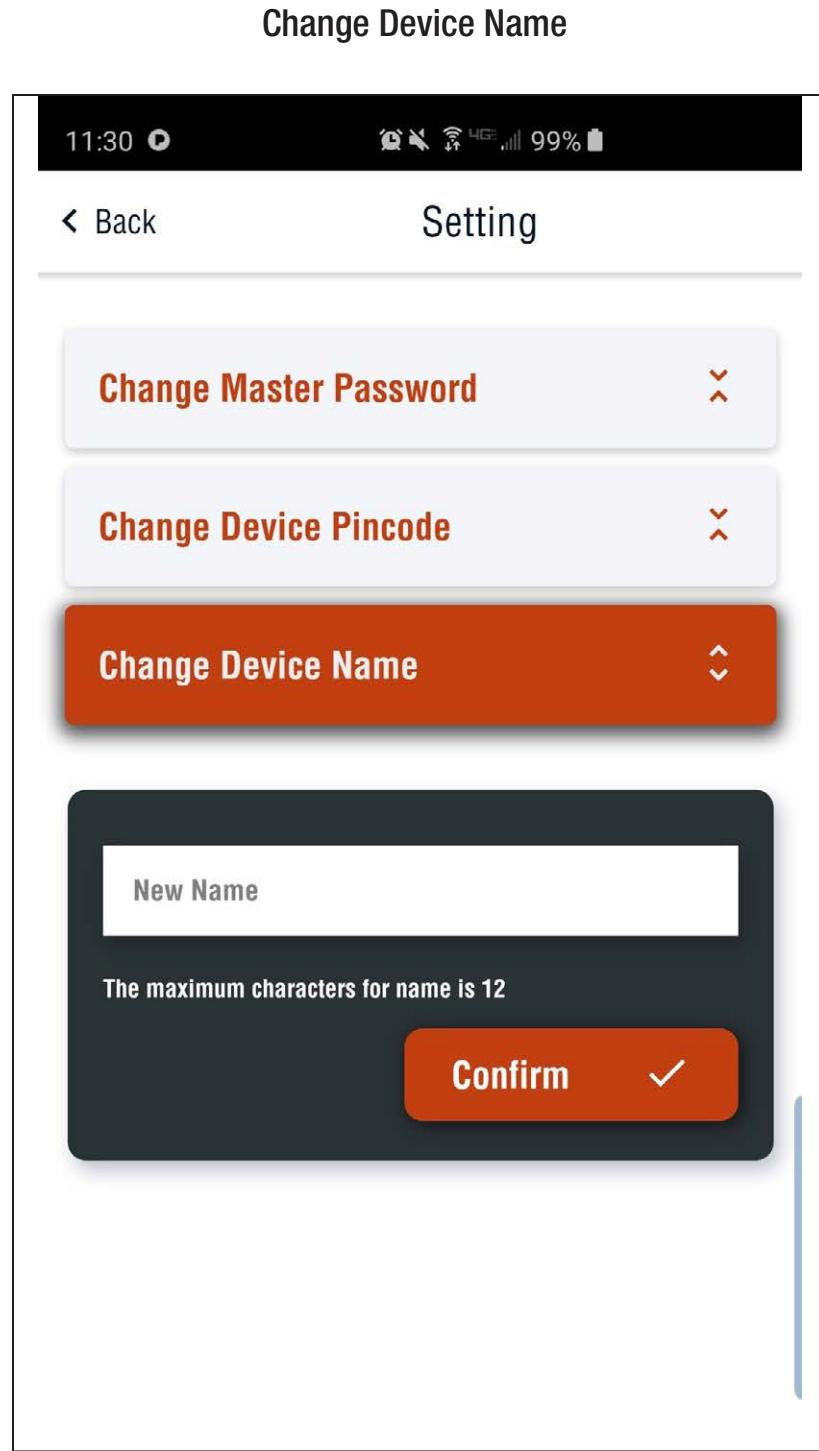


Select to open **Change Device Name** form. Enter the device's new name here. After tapping **Confirm**, this is the name that will display once the reel is reconnected.

SECTION 4 - TROUBLESHOOTING APP

Forgot User Password

1. Power down the reel and wait until the power indicator light goes off.
2. Open the cover. Jumper should be on **FR2**.
3. Put the jumper to **FR1** and **FR2**.
4. Power up the board.
5. Verify the password has been reset to the default password.
6. Replace the cover.
7. See **Section 8** on resetting the password.

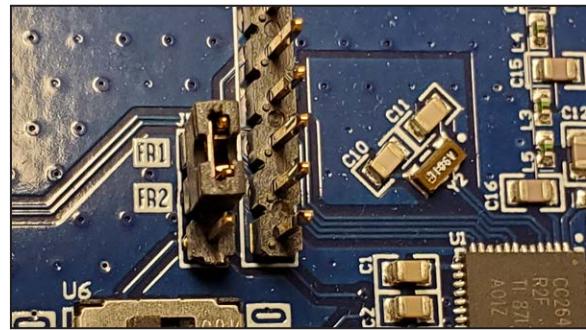


NOTE

An interruption in power to the reel does not cause the current password to reset back to the default password.


Reel control unresponsive after changing Pin code

The phone's memory regarding the device must be cleared.


For IOS:

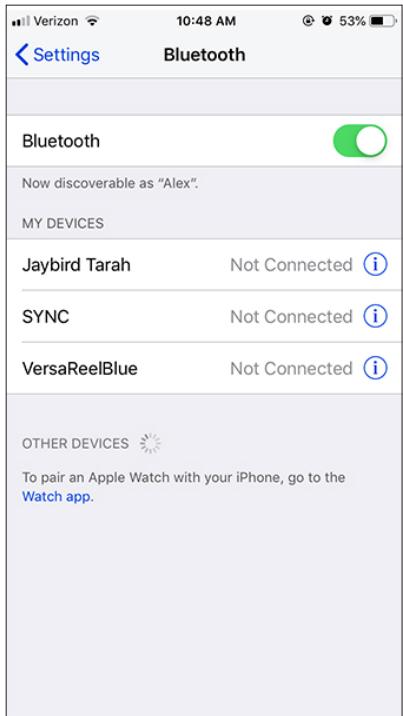

Go to Settings->Bluetooth.

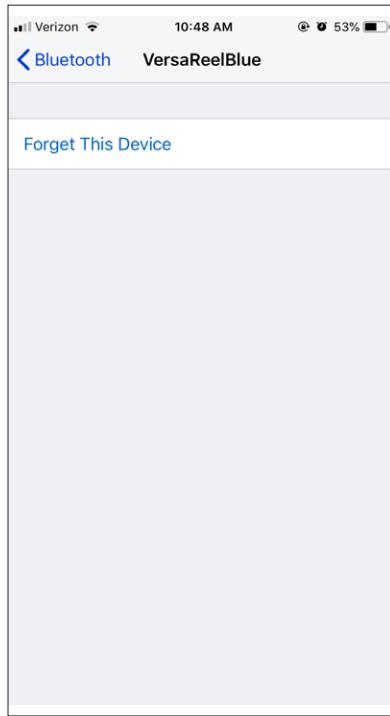


Click the ⓘ symbol next to your reel under **My Devices**. Select **Forget This Device**, and this will erase the device memory on the phone.

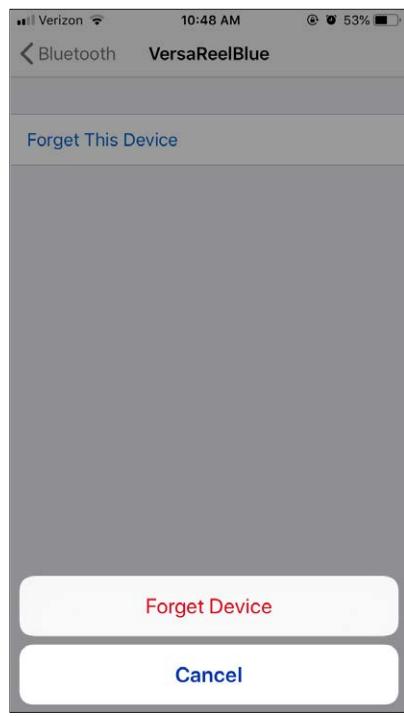

Select **Forget Device**. The next time you control the reel, you will have to input in a new pin code that you have assigned.

SECTION 4 - TROUBLESHOOTING APP

For Android:

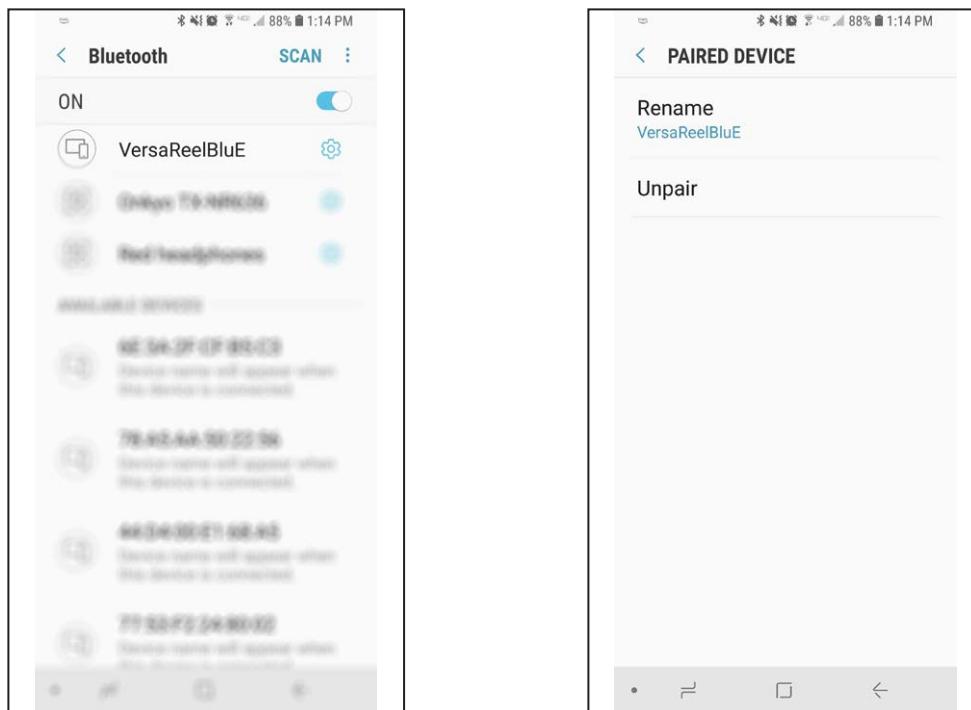

Pull down the top screen, and then press and hold the Bluetooth icon. Tap the gear icon next to the VersaReel Blue.

Under the **Paired Device** screen, tap **Unpair** and this will erase the device memory of the phone. The next time you control a reel, you will have to input in a new pin code that you have assigned.

Unable to connect to reel

Disconnect Bluetooth from the phone's **Settings** screen. Turn off, leave off for 5 seconds, then turn Bluetooth back on.

Unable to find reel to control on Available Devices list

There is likely a connection error between the phone and the reel. To fix this issue:


1. Power down the reel.
2. Wait one minute.
3. Power up the reel.

More than one user attempting to use VersaReel Blue at the same time

As a safety feature, only one user can control the VersaReel Blue at a time; all others will not see it as available to connect to. To make the reel available for another user, the controlling user must either disconnect from it manually or turn the screen on the phone/tablet off.


SECTION 4 - TROUBLESHOOTING APP

Incorrect Password Screen

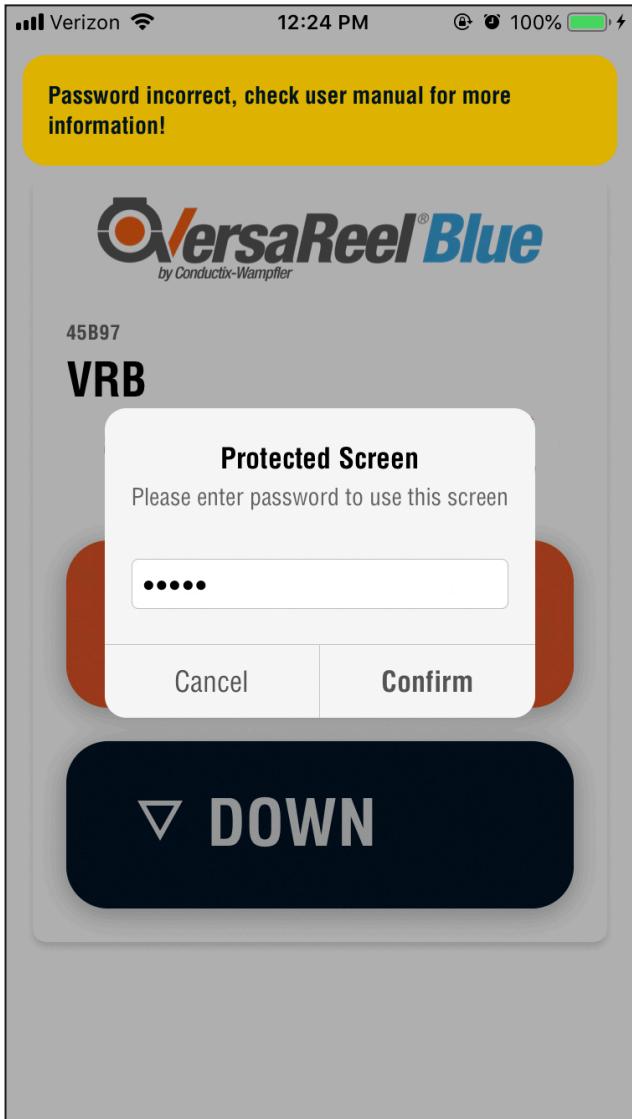

An incorrect password will trigger an error message at the top of the screen. If user has forgotten password, refer to **Forgot User Password** at the beginning of this section.

Reel Damage Warning Screen

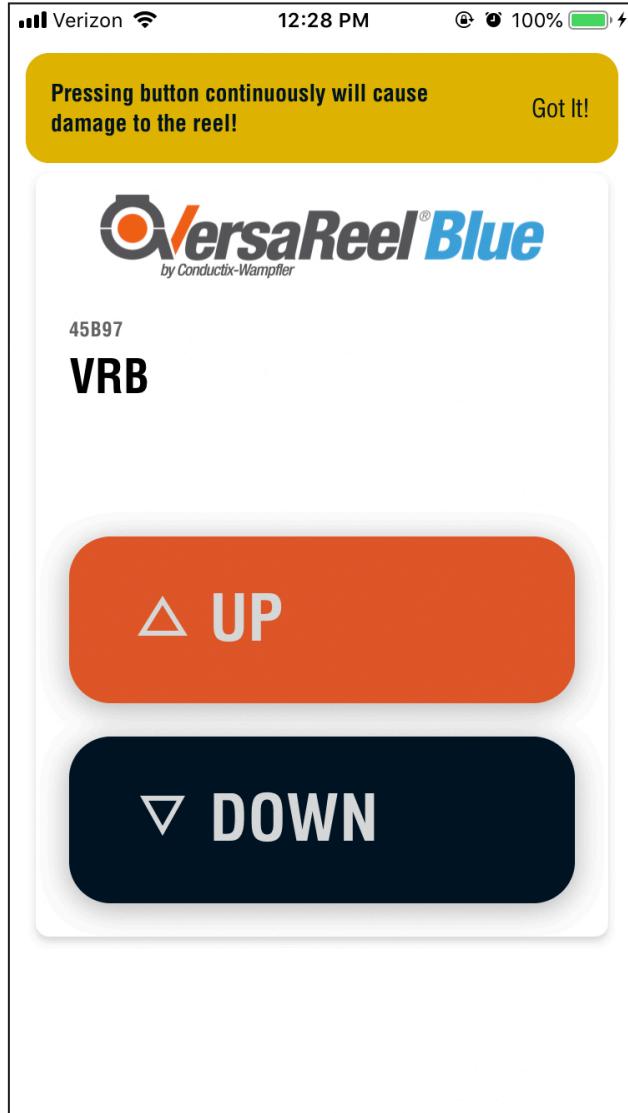

At this point, the reel is set up and ready to use. If the user presses either button more than 3 times (at least 0.5 seconds each time), a reel damage warning appears. The user must press **Got It!** to continue using the reel.

www.conductix.us

USA / LATIN AMERICA

10102 F Street
Omaha, NE 68127

Customer Support
Phone +1-800-521-4888

Phone +1-402-339-9300
Fax +1-402-339-9627

info.us@conductix.com
latinamerica@conductix.com

CANADA

1435 Norjohn Court
Unit 5
Burlington, ON L7L 0E6

Customer Support
Phone +1-800-667-2487

Phone +1-450-565-9900
Fax +1-450-951-8591

info.ca@conductix.com

MÉXICO

Calle Treviño 983-C
Zona Centro
Apodaca, NL México 66600

Customer Support
Phone (+52 81) 1090 9519
(+52 81) 1090 9025
(+52 81) 1090 9013

Fax (+52 81) 1090 9014

info.mx@conductix.com

BRAZIL

Rua Luiz Pionti, 110
Vila Progresso
Itu, São Paulo, Brasil
CEP: 13313-534

Customer Support
Phone (+55 11) 4813 7330

Fax (+55 11) 4813 7357

info.br@conductix.com

Contact us for our Global Sales Offices

