


peripage

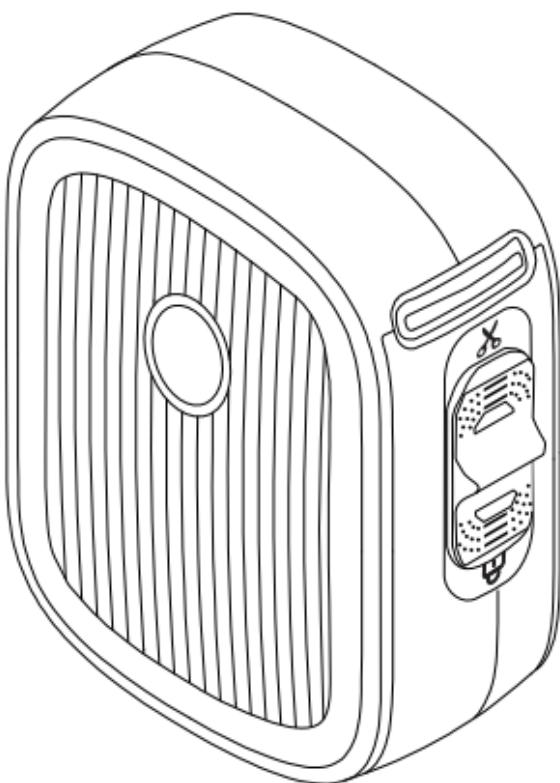

FCC ID:2ASPY-ALD-P100

Instruction Manual

Please scan the QR code to view the English manual.

二次元コードを読んで、日本語の説明書を見てください。

QR코드를 스캔하여 한국어 설명서를 보십시오.

ກາງມາຕາຈາສອນວິທີສາມາດໄທບັດວິທີ

Veuillez scanner le code qr pour voir le manuel d'instruction en français.

Bitte scannen Sie den QR-Code, um das Deutschland-Handbuch

Пожалуйста, сканируйте двухмерный код и проверьте русскую инструкцию.

Escanee el código qr para ver el manual de instrucciones en español.

Digitalize o código qr para ver o manual de instruções em português.

Scannerizzare il codice qr e controllare le istruzioni per l'uso in italiano.

Silakan imbas kode QR untuk melihat manual bahasa Indonesia.

Sila imbas kod QR dan periksa arahan dalam bahasa Malay.

Xin vui lòng quét mã qr, xem thông số kỹ thuật vietnam.

Mangyaring i-scan ang QR code at suriin ang mga tagubilin sa wikang Pilipino.



Product Sketch



① Power Button


- Long press for 3 seconds to turn on/off
- Short press once to enter speech recognition mode
- Short press twice to print the QR code of the connected device

② Paper Outlet

- Paper width 15mm max

③ Combination Push Button

- Push up to cut the paper
- Push down on the cover to change the paper

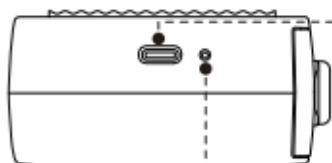


④ Type-C Charging Port

- Powered by a power bank or a mobile phone charger

⑤ Microphone

- Do not use needle-like objects to poke or pierce

⑥ Rope Hanging Hole

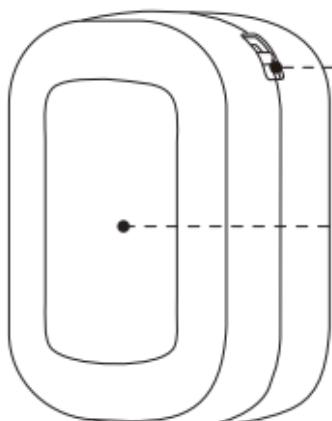

⑦ Magnetic Attraction Plane

- Can adhere to on metal surfaces such as refrigerators

Power Indicator Status

- White light on: Normal startup
- Blue light on: Bluetooth connected
- Purple light flashing: Entering voice mode
- Red light on: Out of paper/charging/printing mileage is 0mm
- Flashing red light: Low battery, please charge in a time

App Download

Please search for [PeriPage] on Google Play or App Store, or scan the following QR code to download the App. And watch the video guide below.



Video Guide


Mileage Recharge

(Mileage is the length value that the printer can print)

- ① Use the official label paper (tape) with the mileage QR code.
- ② Open the [PeriPage] App, select the [Label Printer] device, and follow the App prompts to turn on the scan code recharge mileage function. Scan the QR code on the label paper to recharge.

Note

- Unable to print when the printer mileage is 0mm.
Please recharge the mileage promptly.
- The printer will come with an initial mileage allowance.
- Each roll of paper's mileage QR code contains sufficient mileage for printing the entire roll.

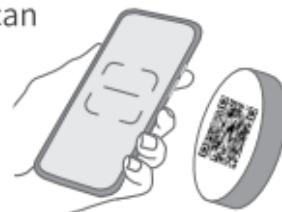

App Connection Printing

- ① Press and hold the power button for 3 seconds to turn on the printer.
- ② Open the [PeriPage]App, select [Label Printer] for the device, and follow the App prompts to search for printer Bluetooth and connect it. Alternatively, press the power button twice to print the QR code, and use the App to scan and connect to the printer.
(Note: Do not search for printer Bluetooth in the Bluetooth settings.)
- ③ After connecting the printer, open the provided features in the app to operate the printing.

Voice-printing Date

- ① When turned on, briefly press the power button and the purple light will flash to enter speech recognition mode.
- ② Please state the year, month, and date in three separate segments, with a 3-second interval between each.

For example, June 5th, 2023: say "two thousand and twenty-three" or "twenty twenty-three" firstly, then "June", and finally say "5th".

Note

- Voice recognition is only supported for date identification and printing.
- The voice printing date can only be input by voice for the month and date.

Tips

- **Revoice:** If there is an error in voice input or recognition, press the power button.
- **Repeat printing:** After the voice printing is completed, click the power button.



Recommended Distance≤10mm


Replace Paper

① Open The Cover




Push down to open the cover

② Put Paper

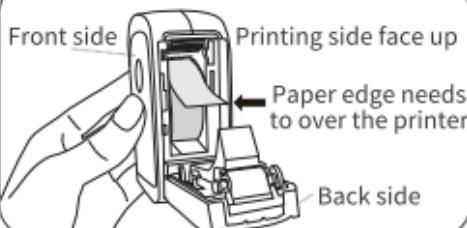

③ Close The Cover

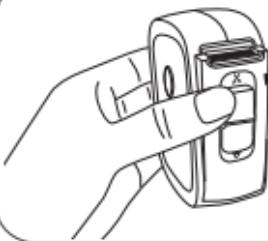

Press to close the cover

Charging Instructions

- Input: 5V=1A. It is recommended to use a mobile phone charger for charging.
- It is recommended to fully charge the battery before use.
- To avoid natural degradation and inability to charge, please recharge the battery every 3 months during periods of non-use.

Notes

If the incorrect battery type is replaced, there may be a risk of explosion. Do not expose the battery to sources of excessive heat such as sunlight, fire, or similar, don't expose it to extremely low pressure, as it may lead to explosions or leakage of flammable liquids or gases.



The paper tearing blade has a sharp edge.

Do not touch it to prevent getting cut.




After printing, avoid direct contact with the print head to prevent overheating and potential scalding. Wait for at least thirty minutes after turning off the power before attempting to touch the print head.



The product is not suitable for children!

Clean The Printer Head

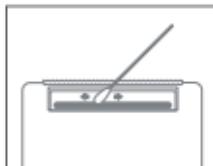

- ① Please turn off the printer and open the printer cover, take out the paper;
- ② Dip a cotton cloth or cotton swab with medical alcohol, and wipe gently along the center to the periphery of the printer head;
- ③ After cleaning the printer head, do not use the printer immediately. Please wait for 1 to 2 minutes, use the printer after the alcohol has completely evaporated.

Federal Communications Commission (FCC) Statement.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.



Xiamen iLead Tek Co., Ltd.

Unit 2101, No.50 Chengyi North Street,
Software Park Phase III, Xiamen, Fujian, P.R.C

✉ www.ileadtek.com ⓐ service@ileadtek.com ☎ (+86)400-8550-520

V1.0