 


Quick Start Guide

A285M

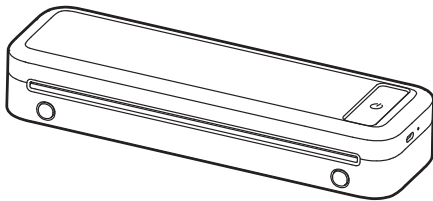

English

1.Product Introduction

1.1 Packing List

Printer×1

Quick Start Guide
×1

Velvet Pouch×1

Type-C Cable×1

USB to Type-C
Adapter×1

Paper Roll×1

① Type-C data cable and USB adapter have been placed in a velvet bag.

① The paper roll has been placed inside the printer.

1.2 Printer Parts Instruction

2. Getting Started

2.1 Downloading the App

Method 1:Search for the "Phomemo" app on App Store® or Google Play™ for download and installation.

Method 2:Scan the QR code. You can scan the code using your cell phone's camera, the built-in QR code scanning feature of your browser,or a dedicated scanning app.

① As the Safari browser on Apple devices does not support QR code scanning, please use your device's built-in QR code scanner instead.

2.2 Paper Installation Guide

01 Long press the Power Button for 3 seconds until the Indicator Light is green to power up the printer.

02 Press the cover open button with both hands and lift up the top cover.

03 Remove the protective paper.

① Please skip this step if your printer does not contain a disposable protective sheet due to different models.

04 Unroll the paper roll inside the printer and pull the paper head out higher than the paper exit.

05 Put the Top Cover back down, and press down on both of its ends at the same time until you hear a click, indicating the cover is securely closed.

2.3 User Guide: Printing via Mobile App

01 Open the "Phomemo" app.

02 Grant permissions

① For more information about app permissions, see 4.3 Permission Description in the Online Guide.

03 Wait for the printer to be searched.

 
04 Tap [Connect Now].

05 Connection successful. Please click [Print Image].

06 Edit your first image before clicking [Print].


① This is an example of printing an image. You can select other texts for printing based on your actual needs.

07 Confirm the preview effect of the image and then click [Print].

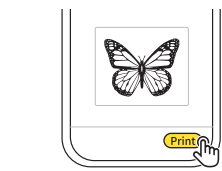


① The software interface is for reference only. Please refer to the actual operating page for accurate information.

 08 Printing is completed.

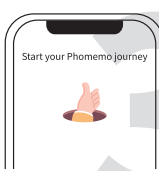

3. Instructions for using single-sheet thermal paper

 After the printer is turned on, please load the paper with the text side down in the Paper Entry Slot until the printer automatically pulls it in. When the indicator light turns green, it means the paper is successfully loaded.

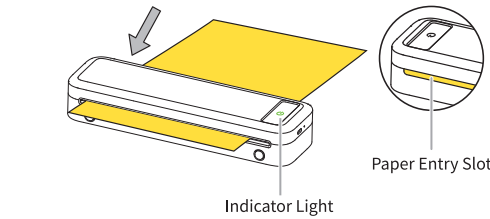

① •The printer supports different types and sizes of paper. Please refer to the e-Manual for instructions.
• The printed content will not appear on the side that reads "non-printing side"

4. Additional Instructions

4.1 Button Instructions


Button Type	Operation	Function
	Long press for 3s	Power on/off
	Double press when printer is on	Print a self-test page

4.2 Indicator Light Instructions

Status	Meaning	Advised Action
	Functioning/Fully charged	/
	Charging in progress	/
	No paper installed	Install paper
	Printer overheated	Pause printing for 5-10 min
	Top Cover open	Close Top Cover
	Low battery	Charge battery for 1h (or at least 20 min for quick usage)
	Battery depleted	Charge for 4h

5. Accessing Detailed Online Guide

 Visit a285m.labelife.cc to access the Detailed Online Guide, video tutorials, and answers to FAQs.

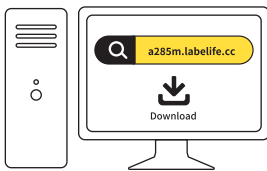

7. Information to User

7.1 FCC INFORMATION (U.S.A.)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure statement.

The device can be used in portable exposure condition without restriction

7.2 ISED NOTICE (Canada)

- English:
This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada' s licence-exempt RSS(s). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.
IC RF exposure statement:
The device has been evaluated to meet general IC RF exposure requirement. The device can be used in portable exposure condition without restriction.
- French:
L' émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d' Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L' exploitation est autorisée aux deux conditions suivantes :
1) L' appareil ne doit pas produire de brouillage;
2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement
IC Déclaration d'exposition aux RF:
L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF d'IC. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.

7.3 BATTERIES

A warning that batteries (battery pack or batteries installed) shall not be exposedto excessive heat such as sunshine, fire or the light.
1) Replacement of a battery with an incorrect type that can defeat a safeguard;
2) Disposal of a battery into fire or a hot oven,or mechanically crushing or cuttingof a battery, that can result in an explosion;
3) Leaving a battery, in an extremely high temperature surrounding environmentthat can result in an explosion or the leakage offlammable liquid or gas;
4)A battery subjected to extremely low air or assure that may result in anexplosion or the leakage offlammable liquid or gas.
Battery Capacity: 7.4V 1500mAh
Type: Li-ion Polymer Battery

Special Notes

The company assumes full responsibility for the revision and explanation of this manual, exercising utmost diligence to guarantee its accuracy. Nevertheless, please note that any technical improvements to the product may not be separately notified, and that the images of the product, accessories, software interfaces, etc. in this manual serve solely as illustrations and references. Due to product updates and upgrades, the actual product may vary slightly from the images. Please refer to the physical product for accurate representations.