


# Quick Start Guide


## M08D Portable printer

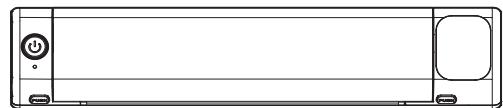

### HVIN: M08D English



#### 1. Product Introduction

##### 1.1 Packing List

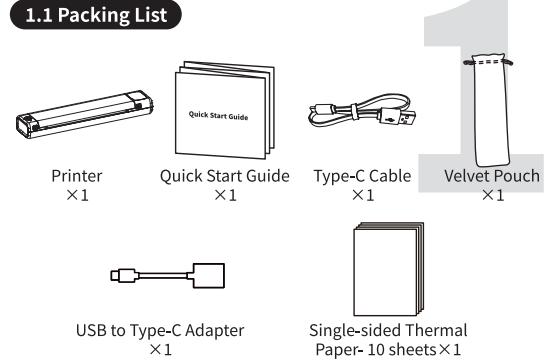

① Type-C data cable and USB adapter have been placed in the velvet bag.  
② The product list may vary; please refer to the actual product.

##### 1.2 Printer Parts Instruction

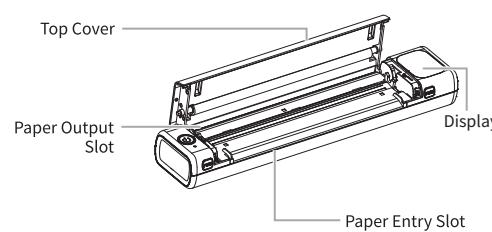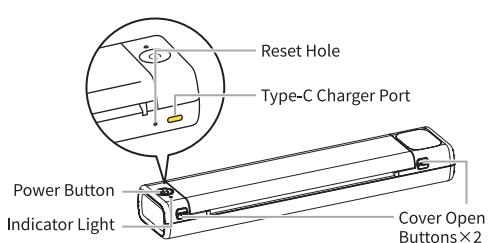

#### 2. Getting Started

##### 2.1 Downloading the App

Method 1: Search for the "Phomemo" app on App Store® or Google Play™ for download and installation.




Method 2: Scan the QR code to download the app. You can scan the code using your cell phone's camera, the built-in QR code scanning feature of your browser, or a dedicated QR code scanning app.




① As the Safari browser on Apple devices does not support direct QR code scanning, please use your device's built-in QR code scanner instead.

##### 2.2 Paper Installation Guide

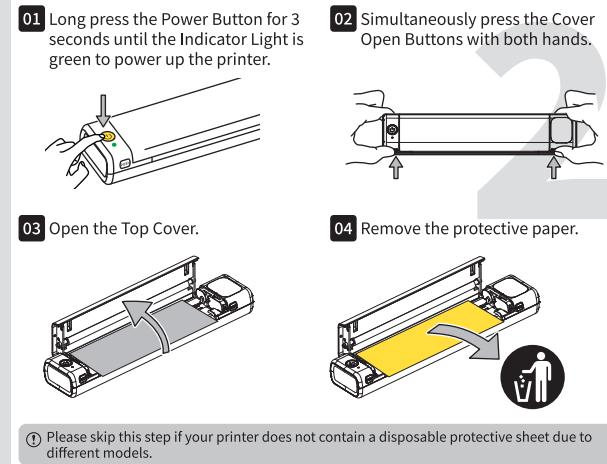


① Please skip this step if your printer does not contain a disposable protective sheet due to different models.

⑤ Put the Top Cover back down, and press down on both of its ends at the same time until you hear a click, indicating the cover is securely closed.

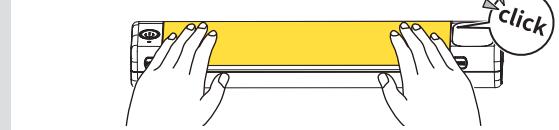


⑥ Insert the paper with the text side up into the Paper Entry Slot until the printer automatically pulls it in and the Indicator Light is lit green, signaling paper insertion is complete.

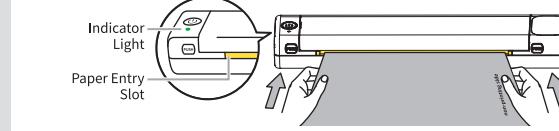


① The printed content will not appear on the side that reads "non-printing side."


##### 2.3 User Guide: Printing via Mobile App

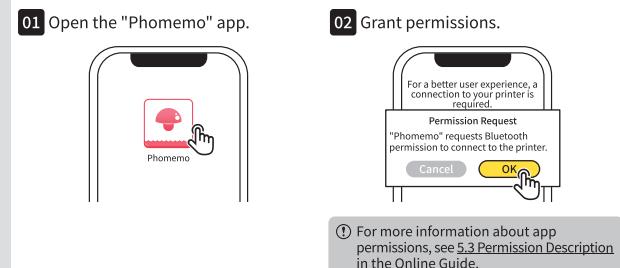


③ Wait for the printer to be searched. ④ Tap [Connect Now].

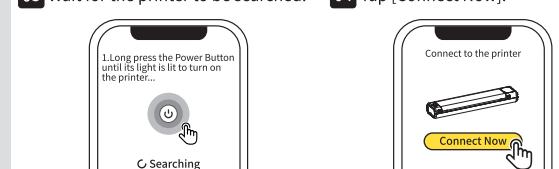

⑤ Connection successful. Please click [Print Image]. ⑥ Select the image to be printed.

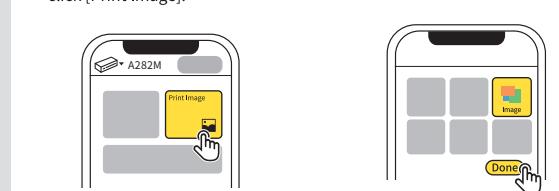


##### 3. Cleaning and Maintenance

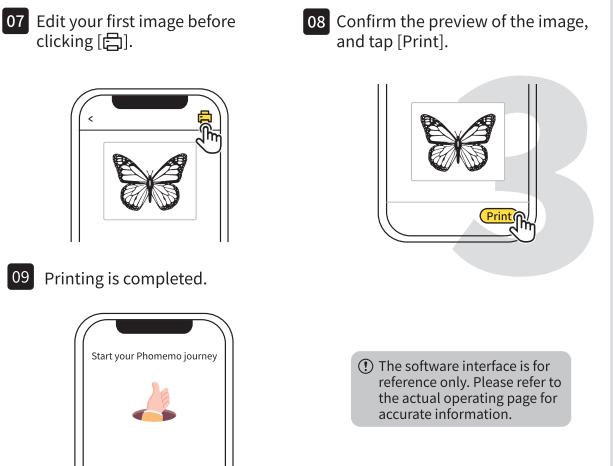

##### 4. Charging Instructions

1. Please prepare your own power adapter (DC 5V/2A) with a Type-A port. 2. Insert the Type-C end (flat end) of the USB cable into M08D's Type-C Charger Port and plug the Type-A end (wide end) into the Type-A port of the power adapter. 3. After completing the connection and plugging into the socket, please check the status of the printer indicator lights. In the charging state, the indicator light will flash green. 4. To ensure quick usage, please charge the printer for at least 20 minutes. For a complete charge, wait for 4 hours or until the Indicator Light is solid green. 5. As the printer may heat up during charging, avoid placing it on materials such as cotton or linen. 6. Once the battery is fully charged, please unplug the charger promptly.

① Avoid using the printer while charging. Using the printer while charging may lead to reduced charging speed, compromised print quality, and shortened battery life.

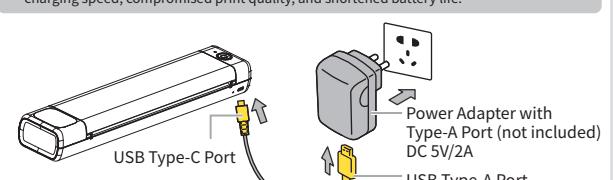

##### 5. Additional Instructions

###### 5.1 Button Instructions

Button Type	Operation	Function
Power Button	Long press for 3s	Power on/off
	Double press when printer is on	Print a self-test page

##### 5.2 Indicator Light Instructions

Status	Meaning	Advised Action
Solid Green Light	Functioning/Fully charged	/
Flashing Green Light	Charging	/
Slow flashing red light	Low battery	/
Fast flashing red light	When the battery reaches critically low level, the printer will shut down soon	Charge battery for 2-4h (or at least 20 min for quick usage)
No light after long pressing Power Button for 3s	Battery depleted	/

#### 6. Accessing Detailed Online Guide

Visit [m08d.phomemo.com](http://m08d.phomemo.com) to access the [Detailed Online Guide](#), video tutorials, and answers to FAQs.



#### 7. Information to User

① Caution: Operating this equipment in a residential area may cause radio interference.

##### 8.1 FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. The device has been evaluated to meet general RF exposure statement.

The device can be used in portable exposure condition without restriction.

##### 7.2 ISED NOTICE (Canada)

###### English:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1) This device may not cause interference.
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

RF exposure statement:  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

###### French:

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Déclaration d'exposition RF:  
L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.

#### 7.3 BATTERIES

1. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
2. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
3. The battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
4. Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
5. Battery cannot be subjected to extremely high or low temperatures, low air pressure at high altitude during use, storage or transportation.

#### Special Notes

The company assumes full responsibility for the revision and explanation of this manual, exercising utmost diligence to guarantee its accuracy. Nevertheless, please note that any technical improvements to the product may not be separately notified, and that the images of the product, accessories, software interfaces, etc. in this manual serve solely as illustrations and references. Due to product updates and upgrades, the actual product may vary slightly from the images. Please refer to the physical product for accurate representations.