



User Manual

Safety Guide

IMPORTANT SAFETY INSTRUCTIONS

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL</p>	
---	--	---

1. Read these instructions before use.
2. Keep these instructions for future reference.
3. Read all Warnings.
4. Follow all instructions and operating procedures.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
10. Protect the power cord from being walked on or pinched particularly at plug, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.

13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



14. When not in use - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

15. Water and Moisture - Do not use this product near water, for example: near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

16. Care should be taken so that objects & liquids do not fall or spill into the enclosure through openings.

17. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:

- A. The power supply cord or the plug has been damaged;
- B. Objects have fallen, or liquid has been spilled into the appliance;
- C. The appliance has been exposed to rain;
- D. The appliance does not appear to operate normally or exhibits a marked change in performance;
- E. The appliance has been dropped, or the enclosure damaged.

18. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.


CAUTION:

- A. Never spill liquid of any kind on the product. The apparatus shall not be exposed to dripping or splashing and no object filled with liquids, such as vases, shall be placed on the apparatus.
- B. The plug is used as the disconnect device, which shall remain readily operable.
- C. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

INTRODUCTION

Congratulations and thank you for purchasing the Bluetooth Speaker. To get the best from your unit, we recommend you read all information provided in this instruction manual.


FRONT PANEL

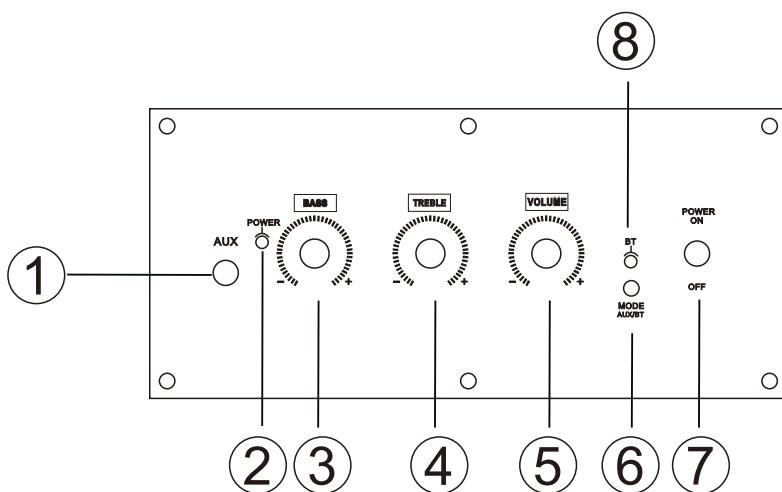

- 1.Aux in Jack
- 2.Power Indicator: The power indicator will light up solid when unit is ON.
- 3.Bass adjustment: Turn this knob to increase the bass.
- 4.Treble adjustment: Turn this knob to increase the treble.
- 5.Volume knob: Turn this knob to adjust the volume level.
- 6.Press it to switch to different modes,such as Bluetooth、Aux in etc
- 7.Power:ON/OFF
- 8.Bluetooth indicator light: During the pairing process the light will flash quickly.

When a device is connected the light will flash periodically. When audio is streamed the light will flash slowly.

REAR PANEL

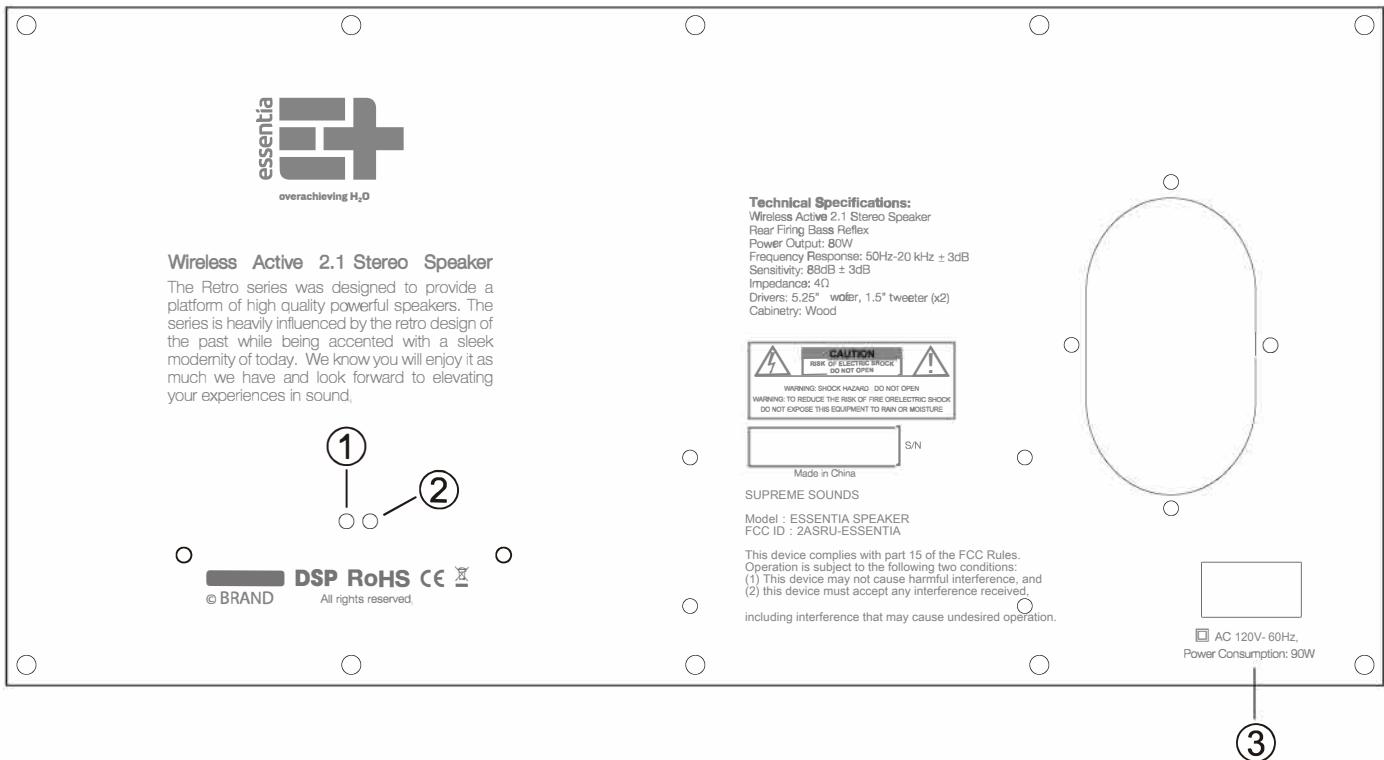

1. Green light:full power

2. RED light:charging

3. Power Cable: Connect the included AC120V~60Hz power cable to the back of the speaker and then to the outlet

PAIRING A BLUETOOTH DEVICE

1. Power on the speaker and Bluetooth device
2. Move the selector switch to the BT position and the speaker will automatically enter pairing mode
3. Set your device to search for the nearest Bluetooth speaker and select from the list of discovered devices to complete the connection

***Note:** The bluetooth indicator light will flash quickly during the pairing process and then periodically once connected. It will flash slowly when music begins to stream

****Note:** If you are unable to pair the speaker with your Bluetooth device repeat steps 1 through 3

SPECIFICATIONS

Rear firing bass reflex

Frequency Response: 50Hz-20 kHz ± 3dB

Sensitivity: 88dB ± 3dB

Impedance: 4Ω

Drivers: 5.25" woofer, 1.5" tweeter (x2)

Cabinetry: Wood

Weight: 4.8 kg

Dimensions: 355mm (L) x 187mm (W) x 186mm (H)

AUDIO SECTION

Power Output: 50W (RMS)

ACCESSORIES

Instruction Booklet	1
AC Cord.....	1
Audio Cable.....	1

Note: Specifications are subject to change for continuous improvement without prior notice.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in fixed/mobile (min20cm) exposure condition without restriction.