




Dual mode bluetooth stereo

MODEL: xSOUND BAR xSUBWOOFER

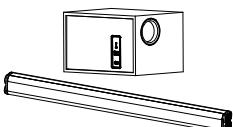

USER MANUAL


IMPORTANT:

Short press the [PAIR] key on the back panel of the subwoofer or long press the play/pause [▶▶] key on the side panel of the soundbar or remote control for 2 seconds to get the wireless subwoofer paired with the soundbar for the initial use. They can get paired automatically after that.


If you disconnect the wireless subwoofer pairing by pressing the [PAIR] key on the subwoofer, please still use the same key to re-pair.

折线

In the box

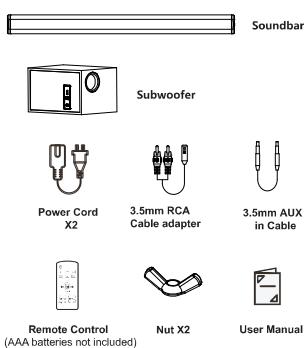

Location of controls

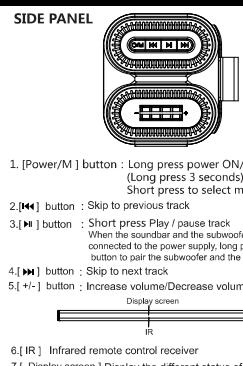

1. [Power/M] button : Long press power ON/OFF (Long press 3 seconds)
Short press to select mode

2. [◀◀] button : Skip to previous track

3. [▶▶] button : Short press Play / pause track
When the soundbar and the subwoofer are both connected to the power supply, long press the button to pair the subwoofer and the soundbar


4. [▶▶] button : Skip to next track

5. [+/-] button : Increase volume/Decrease volume

6. [IR] : Infrared remote control receiver

7. [Display screen] : Display the different status of the product

Soundbar BACK PANEL

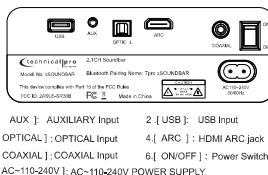

1. [AUX] : AUXILIARY Input

2. [USB] : USB Input

3. [OPTICAL] : OPTICAL Input

4. [ARC] : HDMI ARC Jack

5. [COAXIAL] : COAXIAL Input


6. [ON/OFF] : Power Switch

7. [AC-110-240V] : AC-110-240V POWER SUPPLY

Subwoofer BACK PANEL

1. [POWER LED] : Power LED indicator light
2. [PAIR (LED)] : Pair LED indicator. Soundbar and subwoofer are paired.
3. [PAIR] : Pair LED indicator. Soundbar and subwoofer are not paired. Please short press the PAIR key to get paired.
4. [BT] : Bluetooth mode operation
5. [ON/OFF] : Power Switch

REMOTE CONTROL

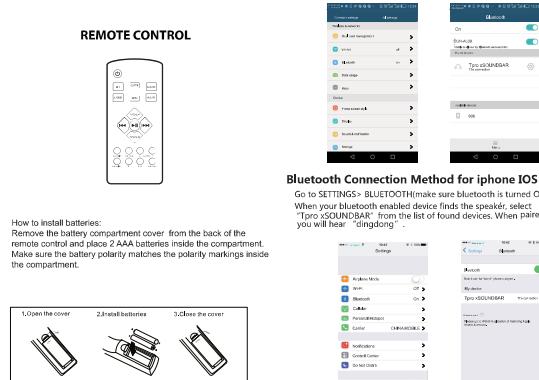

Operation process

PAIRING THE SOUNDBAR TO THE SUBWOOFER

Short press the [PAIR] key on the back panel of the subwoofer or long press the play/pause [▶▶] key on the side panel of the soundbar or remote control for 2 seconds to get the wireless subwoofer paired with the soundbar for the initial use.

They can get paired automatically after that.
If you disconnect the wireless subwoofer pairing by pressing the [PAIR] key on the subwoofer, please still use the same key to re-pair.

1. Connect the AC power cord into a wall socket.

2. Turn the speaker on by long pressing the [POWER] button on the speaker or remote control for 3 seconds.

3.1 Bluetooth mode operation

3.1.1 Press the [MODE] button on the speaker or the [BT] button on the remote control. When a "dingdong" sound is heard, then go into bluetooth pairing mode.

3.1.2 During the pairing process, keep the speaker and bluetooth device within 1m distance.

3.1.3 Set your phone or other bluetooth device to bluetooth status.

Bluetooth Connection Method for Android system:

1. Go to SETTINGS> BLUETOOTH(make sure bluetooth is turned ON)

2. When your bluetooth enabled device finds the speaker, select "Pro xSOUND BAR" from the list of found devices. When paired successfully you will hear "dingdong".

Characters on the LED display and their corresponding functions

bt	BLUETOOTH
US	USB
BU	AUXILIARY
OP	OPTICAL
HD	HDMI ARC
CO	COAXIAL
NO	MUSIC (NORMAL)
JO	NEWS (VOCAL)
MO	MOVIE (MUSIC)
JZ	JAZZ
LL	Classical
PL	Popular
PA	Pause
PD	Mute
b	BASS
ONE RLL	REPEAT
ON	ON
OFF	OFF

Caution:

1. Do not take this device apart or try to repair it.
2. Do not use this device near water or humidity.
3. Clean only with a dry cloth.

Limited Warranty:

You may return it to the authorized service for repair within 1 year from the date of your purchase.

Cautions and warnings:

1. Do not use the bluetooth speaker near water or humidity; do not use the device near the bathtub, water tank, swimming pool and so on.
2. Do not install the bluetooth speaker in an extreme hot or cold environments.
3. Do not expose the device in the sunshine directly.
4. Do not use the device near fire, such as stove, candle or fireplace and so on.
5. Do not use abrasive cleaning solvents to clean the device.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions:

(1) This device must not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF exposure statement:

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body.

生产单号:	型号:xSOUND BAR
料号:	物料名称: 说明书
其它要求 : 105g铜版纸, 黑白双面印刷	
需接要求折叠, 折叠后成品尺寸 : 85*110mm	
内容以工程承认样品为准	
美工	结构
电子	审核