



TOP TECH USER MANUAL

PROFESSIONAL SPEAKER

PLEASE READ THIS USER MANUAL CAREFULLY BEFORE SYSTEM CONNECT

MADE IN CHINA

IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions, meanwhile, please observe all the indications about safe operating. These safety and operating instructions should be kept in condition of consultation.




1. Protection of electric power supply line: Be aware that the electric power supply line is not tramped, pressed by heavy objects. Pay special attention to the plug of power supply line and outlet on the machine. DO NOT lengthen the electric shock, DO NOT pull or drag or the power supply line.
2. Ventilation: This set must be put in ventilated place. DO NOT put disk on it or cloth to cover it. The distance away from the wall should not be less than 10 centimeters. DO NOT put this set on the bed, sofa, carpet or other objects with similar surface in case of good ventilation.
3. Casing Dismantling: DO NOT dismantle the casing. If one touches the inner components, he will probably get serious electric shock.
4. Unusual smell: When you discover unusual smell and smoke, cut power supplies immediately and pulls out the plus from the outlet on the wall. Contact the sell shop or nearest repairing center.

Attention: This set applies to AC 110V power supply. Use standard power supply. Pls. be sure for the correct power supply before use it.

1-1 PRODUCT FEATURES

1. High output power;
2. With Karaoke function;
3. The treble is clear, natural and bass is powerful;
4. Compatible to DVD/VCD/CD/TAPE/MP3/MP4/AUX

2-1 FRONT PANEL FUNCTION INSTRUCTION

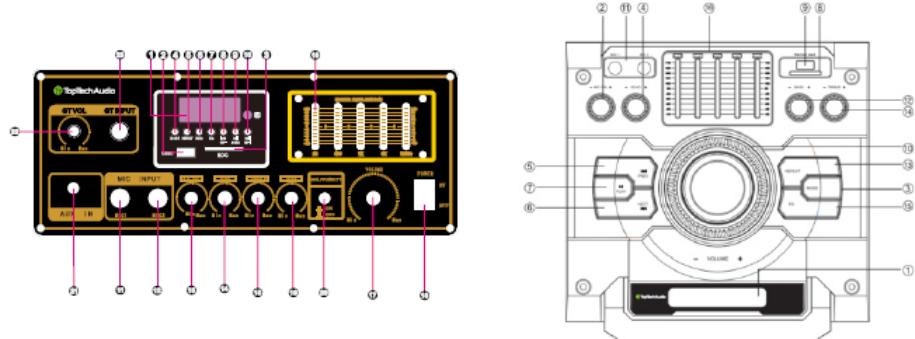


- 1.LED display
- 2.USBC input
- 3.SDC /MMC input
- 4.MODE:USBC/SDC /Line (Audio input) /FM /Wireless switch button
- 5.Repeat
- 6.RECORD
- 7.EQ
- 8.MP3 prev/ FM CH- button
- 9.MP3 play/ pause/FM scan
- 10.MP3 next/ FM CH+ button
- 11.MIC 1 input

- 12.MIC 2 input
- 13.MIC VOL
- 14.ECHO
- 15.TREBLE
- 16.BASS
- 17.VOLUME
- 18.POWER SWITCH
- 19.Equizer
- 20.Mic Priority
- 21.Aux in
- 22.Guitar VOL
- 23.Guitar input

- 1.DISPLAY
- 2.MIC VOL (MIN-MAX)
- 3.MODE SELECTION BUTTON.
- 4.MIC ECHO VOLUME(MIN-MAX)
- 5.PREV: Music PREVIOUS / FM CH+
- 6.NEXT: Music NEXT / FM CH-
- 7.PALY/PAUSE/ FM radio scan button.
- 8.MEMORY CARD(S) INPUT
- 9.MEMORY CARD(U) FLASH DRIVER
- 10.MAIN VOLUME CONTROL
- 11.MIC INPUT
- 12.BASS CONTROL
- 13.REPEAT FUNCTION
- 14.TREBLE CONTROL
- 15.EQUALIZER
- 16.5 SEGMENT EQ.

3-1 REMOTE CONTRAL BUTTON DESCRIPTION

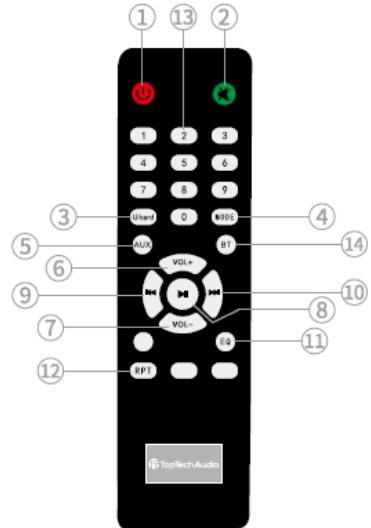

1. Power ON/OFF
2. MUTE
3. Memory card music play mode input
4. Mode transfer
5. Press for AUX input mode
6. Control the music increase volume
7. Control the music reduce volume
8. Press for Play/Pause, in FM mode, Short press for change next channel, long press for search channel.
9. Press for previous music, in FM mode, Short press for change last channel, long press for search previous channel.
10. Press for next music, in FM mode, Short press for change next channel, long press for search next channel.
11. Press for band Equalizer mode selection.
12. Press for set up replay song.
13. Numbers
14. Press for BT selection

Wireless Use Instruction

change the mode into "BLUC", the Wireless sign light twinkles, and speaker have sound "di". Set on mobilephone, connect to Wireless data, search equipment and match properly. The proper connect Wireless lights keep on, and music work on speaker normally.

Record Function:

Speaker can record the sound or music from microphone, FM radio, or AUX sound sources. and Save the record file in USBC or SDCCard.

Mic And Karaoke Function:

To use this speaker system for Karaoke singing.

1. Inset a Microphone in the MIC INPUT.
2. Sing along with the music or speak if using the system as a PA system.
3. Adjust the volume with the MIC VOL


4-1 USE INSTRUCTION

1. connect the signal cables according to the back panel connection instruction
2. To sure the correct the Voltage, Insert electronic source cable, turn on the power switch button
3. Adjust function keys to your satisfied best sound effect.

5-1 BACK PANEL FUNCTION INSTRUCTION

1. AUDIO INPUT:DVD/TV/ or other AUX AV player audio signal input jack
2. Switch for AUDIO INPUT, and switch for LED
3. AC input: AC110V

6-1 BACK PANEL CONNECTION DIAGRAM

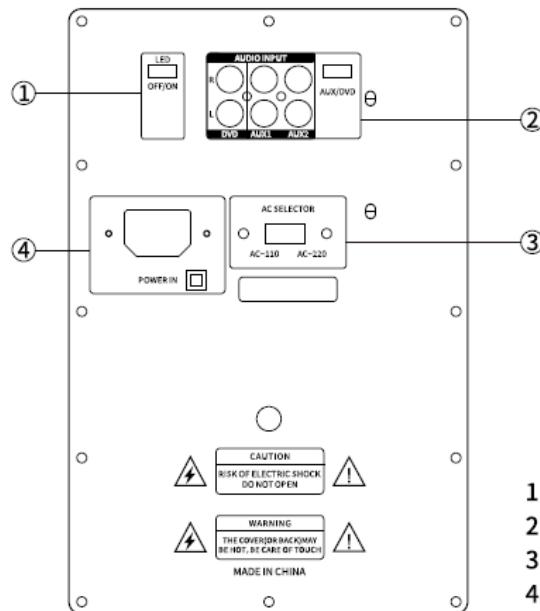

- 1、LED light / disco ON/OFF
2、AUX input
3、AC selector
4、Power IN

7-1 PRECAUTION

In order to prevent operating problems or serious damage to the device, please comply with the following remarks:

- 1.Hold the electric outlet while pulling out the plug. Do not pull the wire.
- 2.Operating audio appliances should be kept away from heating facilities.
- 3.Do not attempt to fix or revise the circuit.
- 4.Do not touch the internal parts, otherwise electric shock or serious damage to the device might cause.
- 5.Pull out the plug if not in use for long.
- 6.Ensure the audio product in a ventilated dry condition with about 20mm Space around as for heating dispersion.

Warning: Do not expose this appliance to rain or moisture, and vessel containing liquids, such as a cup, vase, is not supposed to be placed on or above the appliance.

8-1 TROUBLESHOOTING

Symptom	Possible Problem	Solution
No Function Light & No Sound	1.Plug is not well connected 2.Speaker power button is not turned on	Insert the plug into electric outlet Turn on the button
Function Light on but No Sound	1.Cable misconnected	Turn off the power, check the input jack to ensure proper audio signal is connected to relevant input jack
	2.Audio signal is not transmitted to Speaker	Check all the speakers if there is audio signal output

If the problem exists after checking related procedures above, please refer to the appointed service agent or professional technician to fix it. Do not attempt to open the cover, otherwise we assumes no responsibility.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Xian Chishine Optoelectronics Technology Co.,Ltd may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.